

AM-FM STEREO RECEIVER



KR-A4050/5050

SERVICE MANUAL

KENWOOD
3860

©1993-4 PRINTED IN JAPAN
B51-4699-00(S) 4272

(KR-A5050 K, P, M, X Type)

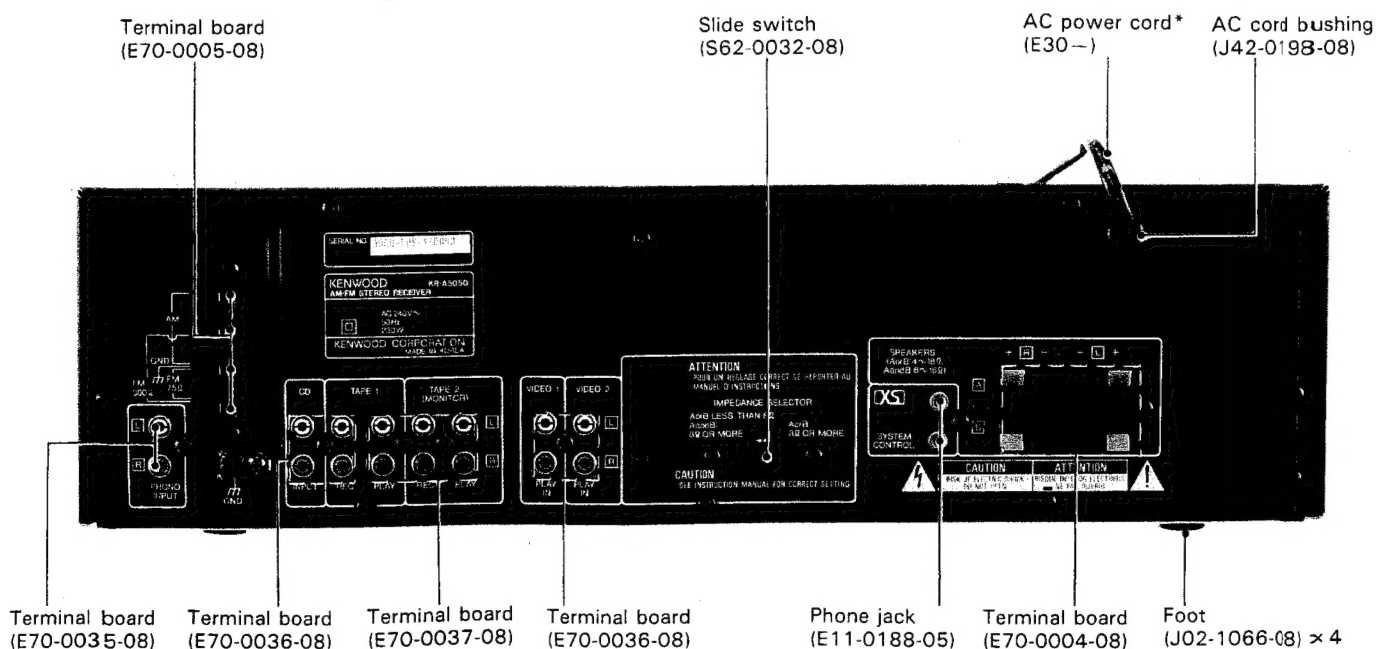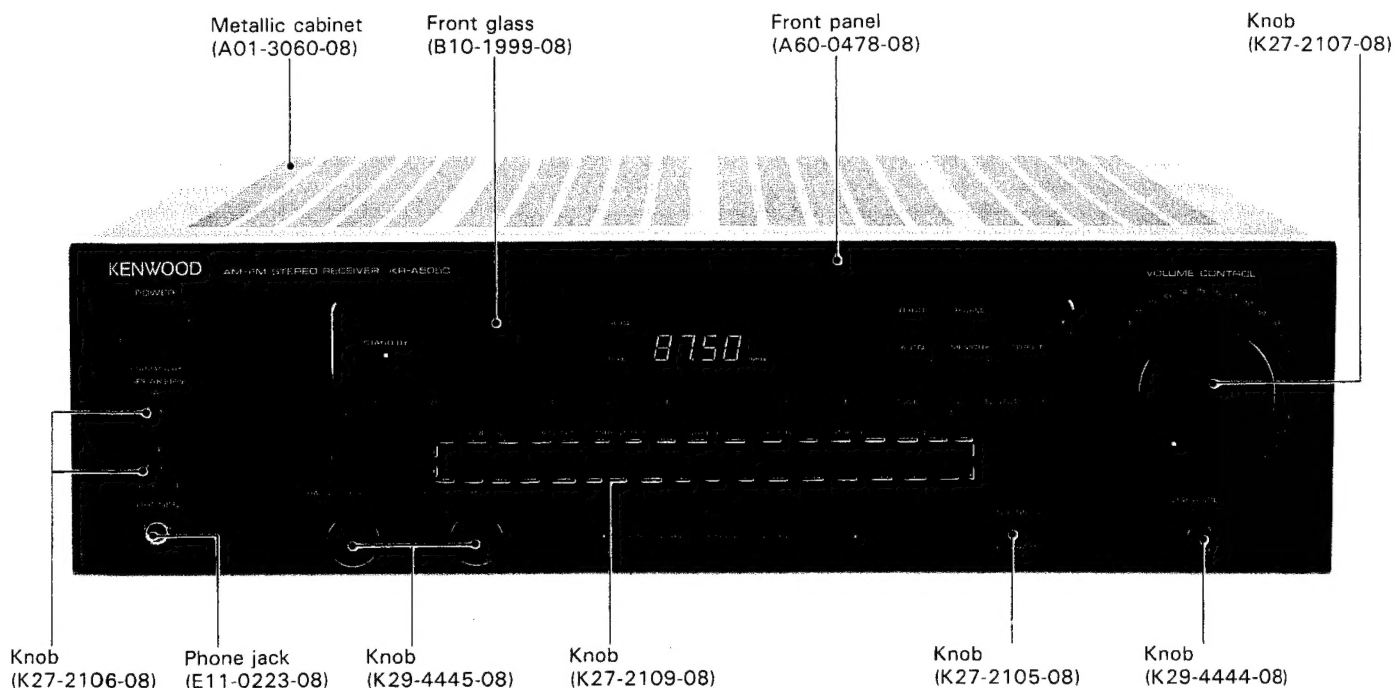

*Refer to parts list on page 33.

KR-A5050K (K,P,M,X)


KR-A4050E/5050 E,T

KR-A4050/5050

CONTENTS

REMOTE CONTROL OPERATION	4	BLOCK DIAGRAM	41
DISASSEMBLY FOR REPAIR	5	CIRCUIT DESCRIPTION	43
BLOCK DIAGRAM	7	ADJUSTMENT	53
CIRCUIT DESCRIPTION	9	REGLAGE	54
ADJUSTMENT	12	ABGLEICH	55
REGLAGE	13	ADJUSTMENT/REGLAGE/ABGLEICH	56
ABGLEICH	14	WIRING DIAGRAM	57
WIRING DIAGRAM	15	PC BOARD (Component side view)	59
PC BOARD (Component side view)	17	SCHEMATIC DIAGRAM	63
SCHEMATIC DIAGRAM	23	EXPLODED VIEW (UNIT)	75
EXPLODED VIEW (UNIT)	31	PARTS LIST	77
PARTS LIST	33	SPECIFICATIONS (K, P type)	81
CONTROL & INDICATORS	37	SPECIFICATIONS (E type)	BACK COVER
DISASSEMBLY FOR REPAIR	39	ACCESSORIES	BACK COVER



(KR-A4050 E, Type)

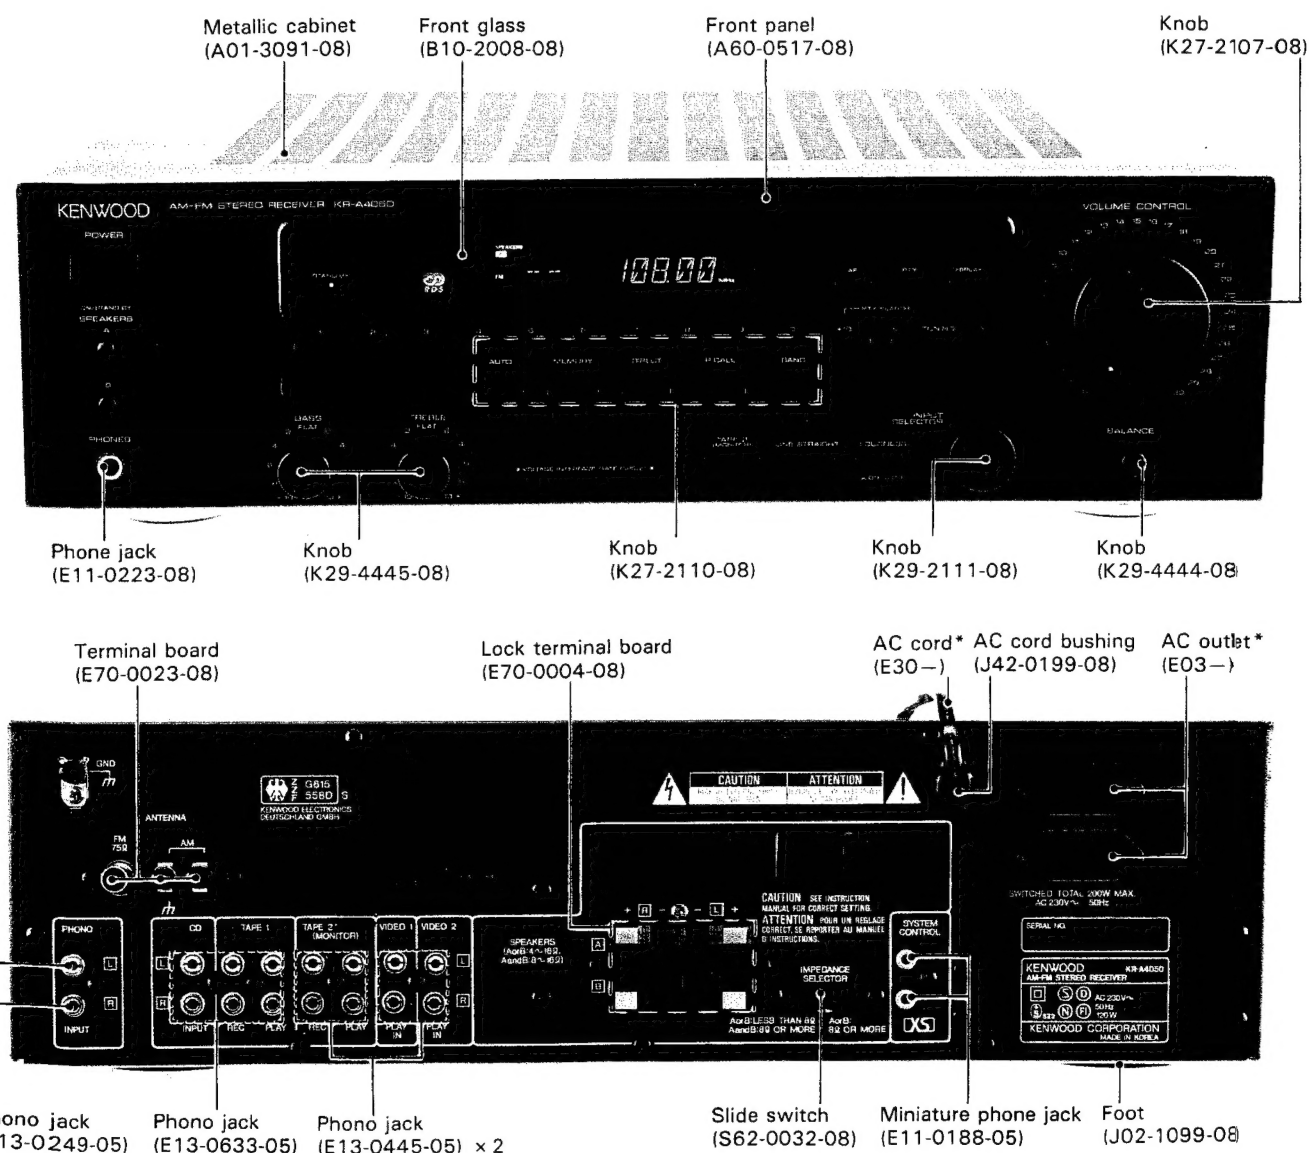

*Refer to parts list on page 77.

KR-A4050/5050

(KR-A5050 E,T Type)

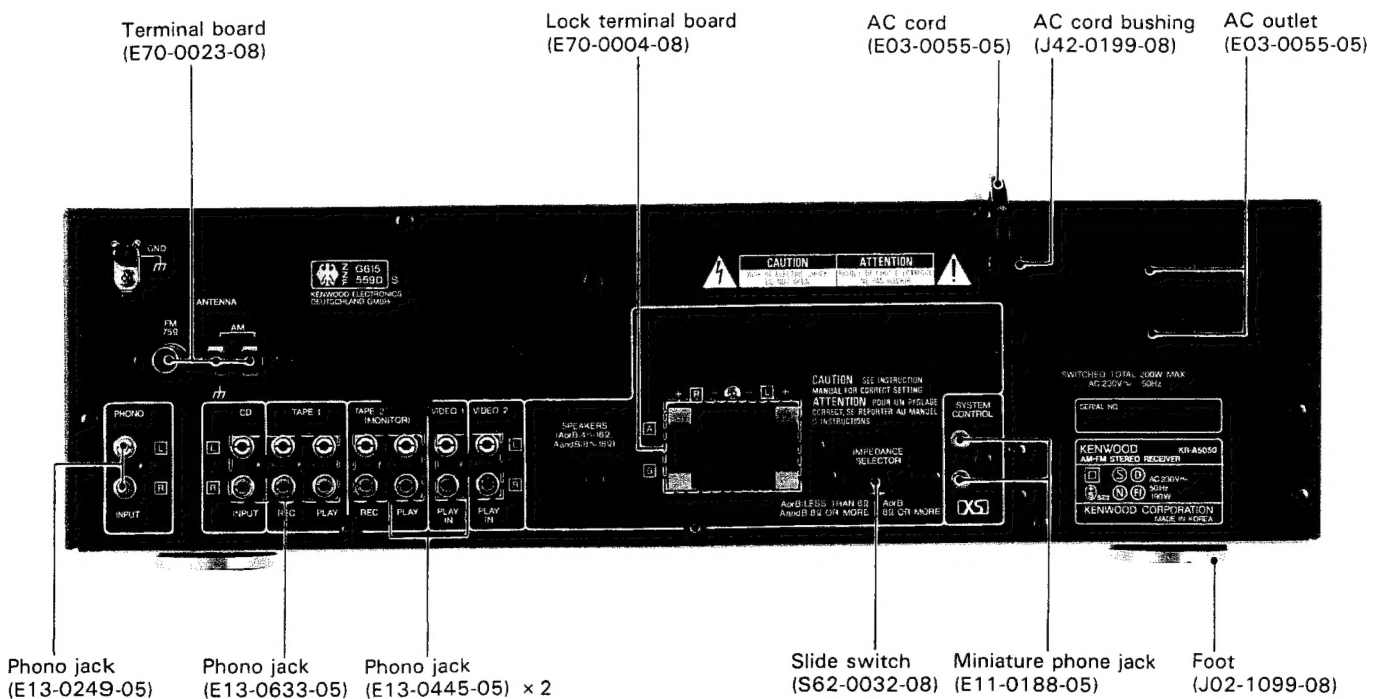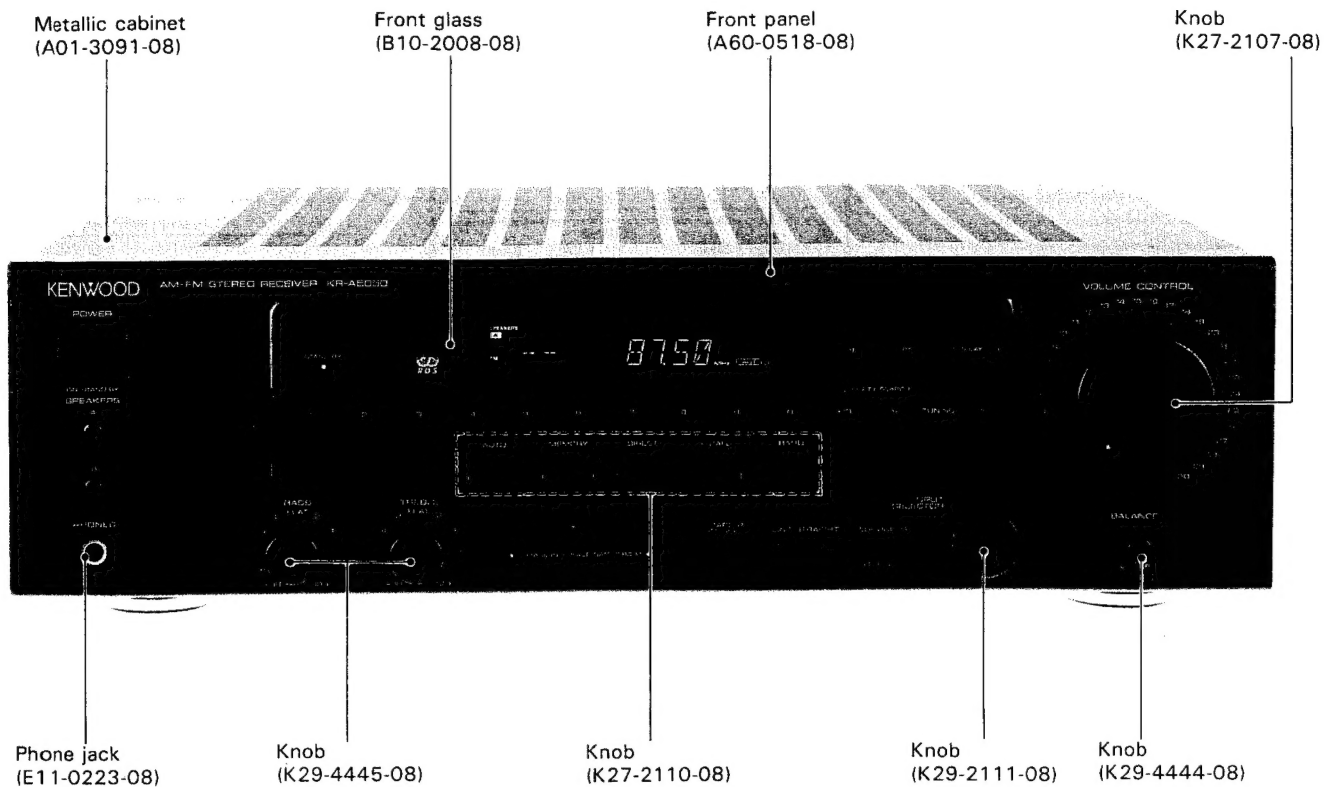

(K, P)

INSTRUCTION MANUAL
 B60-1213-08 ENGLISH
 B60-1214-08 FRENCH
 B60-1215-08 SPA, CHI

P
M

(E, T)

INSTRUCTION MANUAL
 B60-1286-08 SPANISH E
 B60-1287-08 ENGLISH T
 B60-1288-08 FR, GE, DU E

*Refer to parts list on page 77.

KR-A4050/5050

REMOTE CONTROL OPERATION

REMOTE CONTROL ASSY : A70-0953-08
BATTERY COVER : A09-0088-01

POWER key

Press to turn the power of the unit ON / OFF.

Tape deck operation keys

The TAPE A and TAPE B keys allow control of tape decks A and B respectively.

CD player operation keys

Operate the CD player.
DISC - When a CD player with a multi-disc magazine is used, the DISC key functions as the disc selector. Every press changes the disc number.

Input selector keys

Press one of these keys to select an input source.

Tuner operation keys

BAND - Press to select the broadcast band (AM or FM).
P.CALL - Press to recall the preset stations in sequence.
DIRECT - Use together with the numeric keys to recall a station directly.

Numeric keys

When the CD input is selected, these keys function as the numeric keys of the CD player. When the TUNER input is selected, these keys function as the numeric keys of the tuner.
How to enter numbers:

To enter 23 - Press $\boxed{+10}$ twice then $\boxed{3}$ once.

To enter 40 - Press $\boxed{+10}$ four times then $\boxed{0}$ once.

VOLUME CONTROL keys


Press to control the volume. During control operation, the VOLUME CONTROL knob on the main unit rotates and the indicator on it blinks rapidly.

MUTE key

Press to drop the volume temporarily. The volume indicator on the VOLUME CONTROL on the main unit flashes during muting.

Note on remote control unit


- In case any of the following models is used, the CD manual search cannot be operated from this remote control unit:
DP-M97, DP-57, DP-47
- If the CD player is not equipped with the System control jack, it cannot be operated properly from this remote control unit. In such a case, please use the remote control unit provided with the CD player.

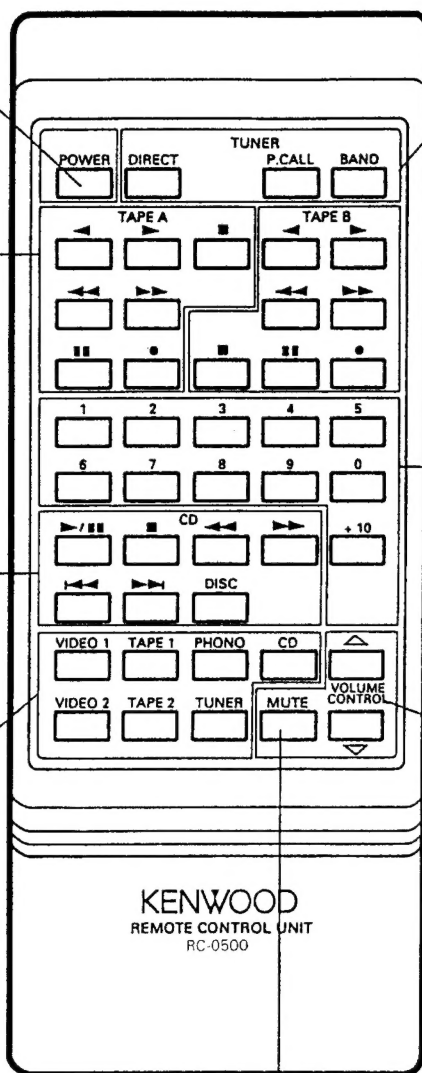


KR-A4050/5050

DISASSEMBLY FOR REPAIR

1. Remove the 6 screws ①, and the pull out the front panel out while pressing the 3 claws ② to remove the front panel.
2. The sub-panel can be removed when the 3 knobs ③, are removed and the undo the 2 claws ④ are released.
3. The headphone PCB, the MAIN VOL PCB and the balance PCB can be removed when the 4 screws ⑤, the 5 knobs ⑥ and the 4 nuts ⑦ are removed. To remove the balance PCB, however, it must be raised in the upward direction and then pulled to the backward direction.

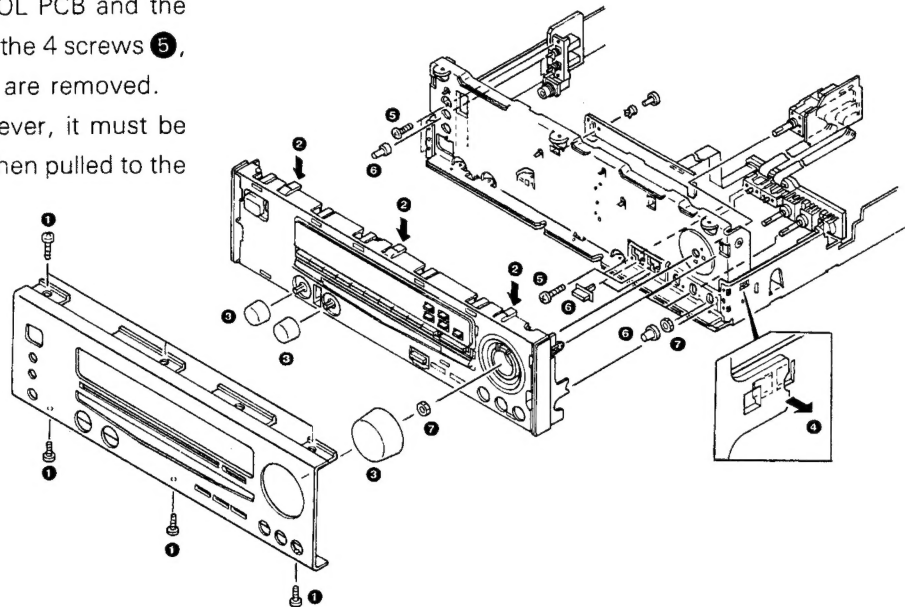


1. The tuner PCB, the power supply PCB and the surround PCB can be removed when the 8 screws ① are removed.

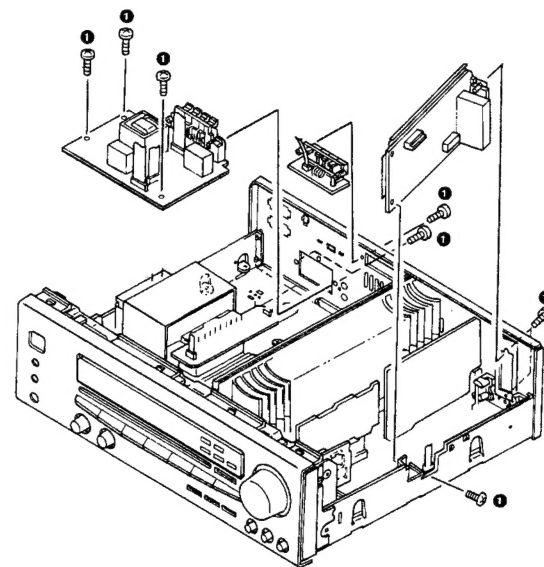


KR-A4050/5050

DISASSEMBLY FOR REPAIR

1. Repair can be carried out with the MAIN (AUDIO) PCB and the power supply PCB mounted on the rear panel when the 18 screws ① are removed.

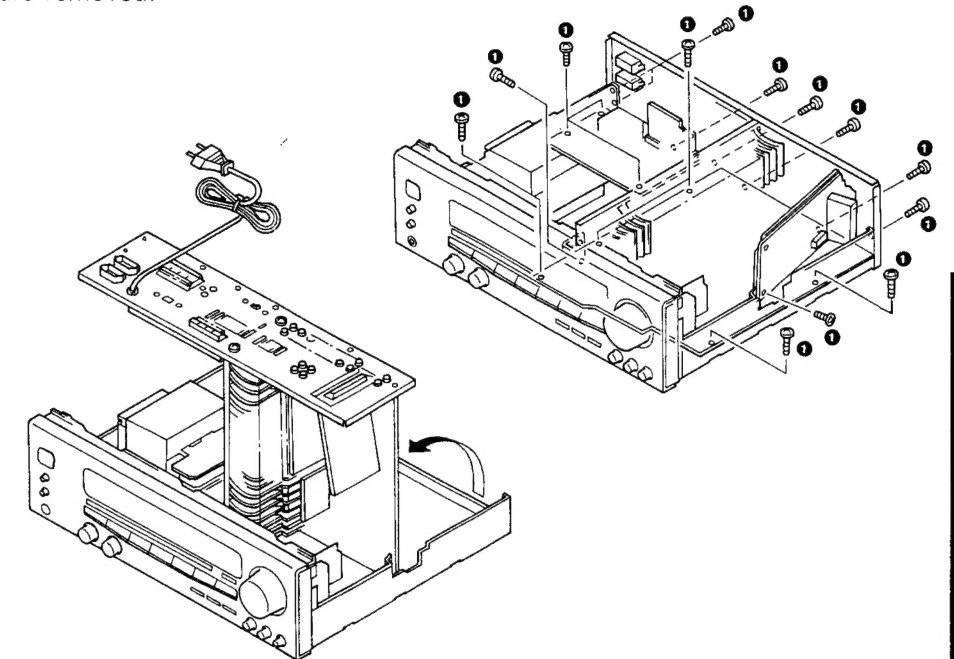


1. Cut the 4 places with a pair of nippers. ①, and remove the bottom panel from chassis.
2. Move the unit holder from the current position to the open mounting position.
3. Rotate the lid, which was cut off, by 180° degrees ②.
4. Insert the lids in the 2 places of the chassis ③, and mount them with the 3 screws ④.

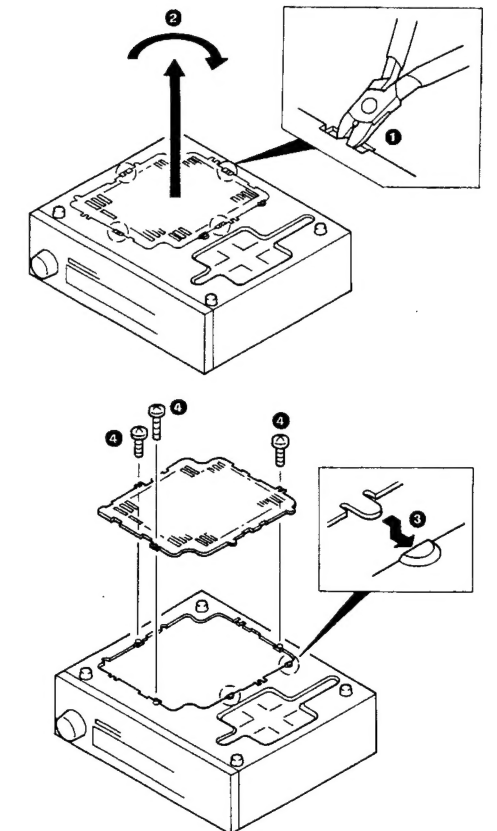

KR-A4050/5050 KR-A4050/5050

BLOCK DIAGRAM

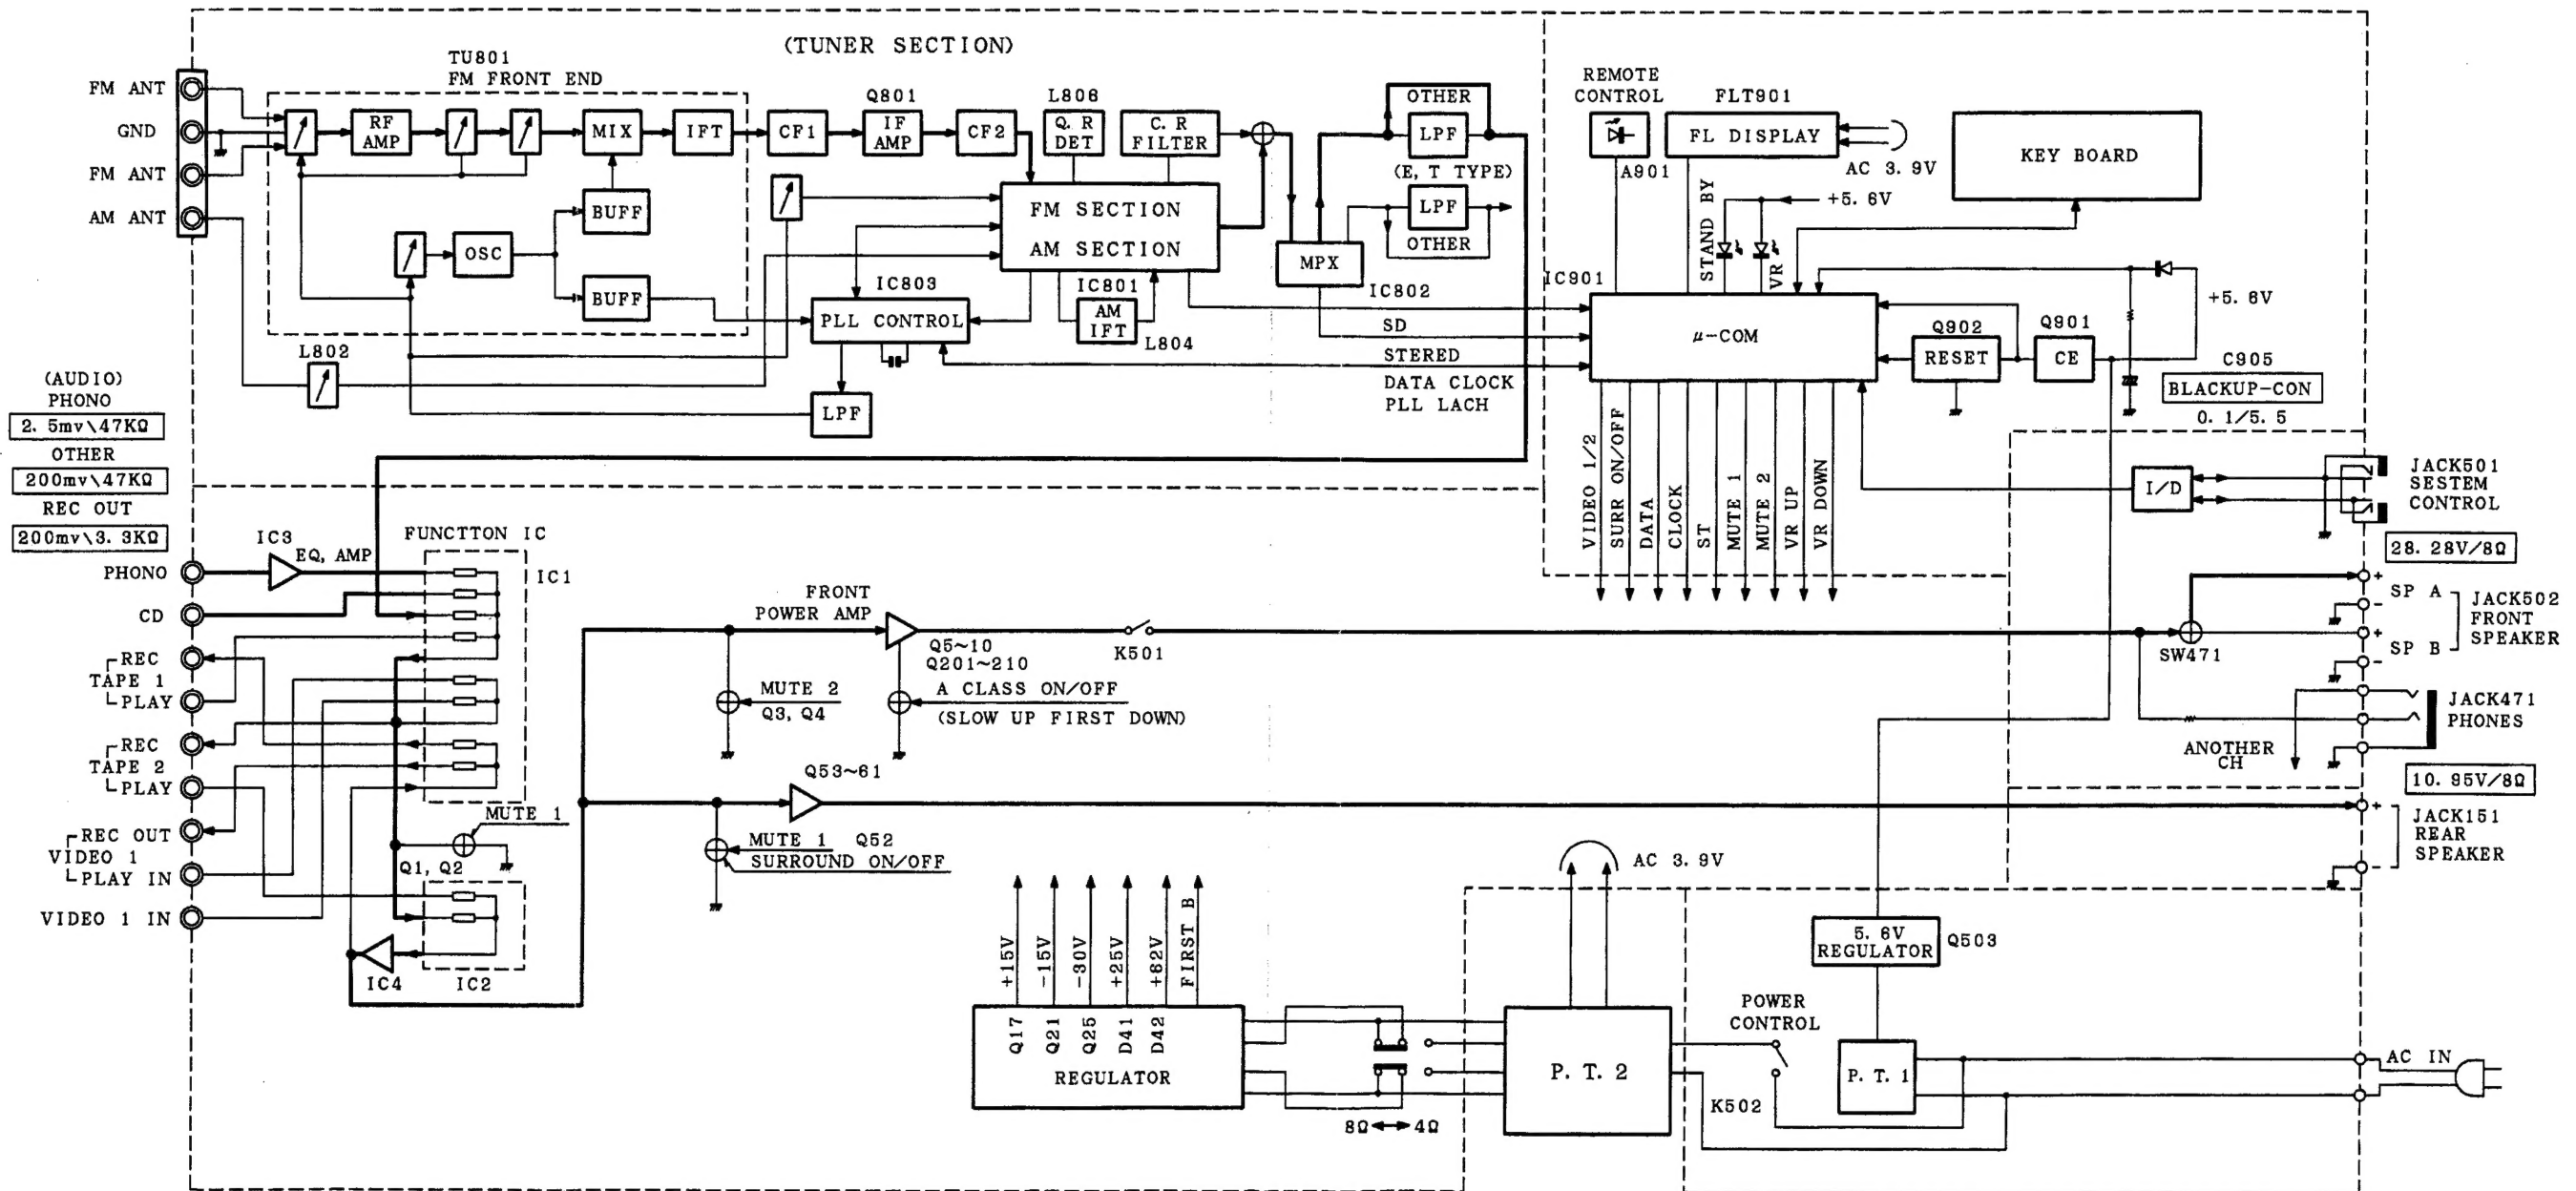

KR-A5050
(K, P, M, X TYPE)

KR-A4050/5050

CIRCUIT DESCRIPTION

1-1. Initial Setting

1) Function initial setting

Last channel memory FM : 87.5MHz
 AM (K) : 530kHz
 AM (E) : 531kHz
 Tuning mode Auto
 Band FM1
 Input selector Tuner
 Video monitor VIDEO 1
 TAPE 2 monitor OFF
 Muting OFF
 Power OFF

Frequency memorized for each PRESET channel when the memory is cleared (Test frequency)

BAND	FM1		FM2		AM	
	ch	K	E	K	E	K
1	87.5MHz	87.5MHz	87.5MHz	87.5MHz	530KHz	531KHz
2	89.1	89.1	//	//	630	630
3	90.0	90.0	//	//	990	990
4	92.0	92.0	//	//	1440	1440
5	94.0	94.0	//	//	1610	1602
6	98.0	98.0	//	//	1700*	531
7	100.1	100.1	//	//	530	531
8	102.0	102.0	//	//	530	531
9	106.0	106.0	//	//	530	531
10	108.0	108.0	//	//	530	531

* 1700 kHz is set for WIDE only.

2) Microprocessor output port initial setting

Any figure in () is a pin number.

SURROUND MUTE (17) L
 VOL. LED (18) L
 VIDEO 1/2 (23) L
 POWER (24) L
 MUTE 1 (25) H
 MUTE 2 (26) H
 CDDL (27) H
 VOL. DOWN (1) L
 VOL. UP (63) L

The initial setting is performed in a following event :

1. When backup memory data is destroyed when reset is applied to the microprocessor.
2. When the power cord is plugged in to the AC wall outlet while pressing the TUNER key.

1-2. Test Mode Setting

1) Method of entering the test mode

1. While pressing the CD key, plug the power cord to the AC wall outlet. When the test mode is entered, the FL tube display all lights.

2) Method of canceling the test mode

1. Unplug the power cord from the AC wall outlet once.
2. Send the reset signal to the RESET pin or some other means to reset the microprocessor.

3) Contents of test mode

1. When the test mode is entered, the FL tube display all lights. This all lighting continues unless a effective remote control serial code or the test mode is canceled.
2. The test frequency is stored in memory for each preset channel. (For each frequency to be stored in memory, refer to its associated listing.)
3. The test mode is different from the normal mode in the following operations:


When the tuner UP or DOWN key is pressed when a mode other than TUNER has been selected, the potentiometer is increased or decreased. Once one of these keys has been pressed, the operation continues even if the key is released. It stops automatically if the AUTO or POWER key is pressed or if the AUTO or POWER key is not pressed for 16 seconds.

KR-A4050/5050

CIRCUIT DESCRIPTION

2. CXP5016-526S: Receiver microprocessor (X14-3040-10 : IC1)

2-1. Key matrix connections

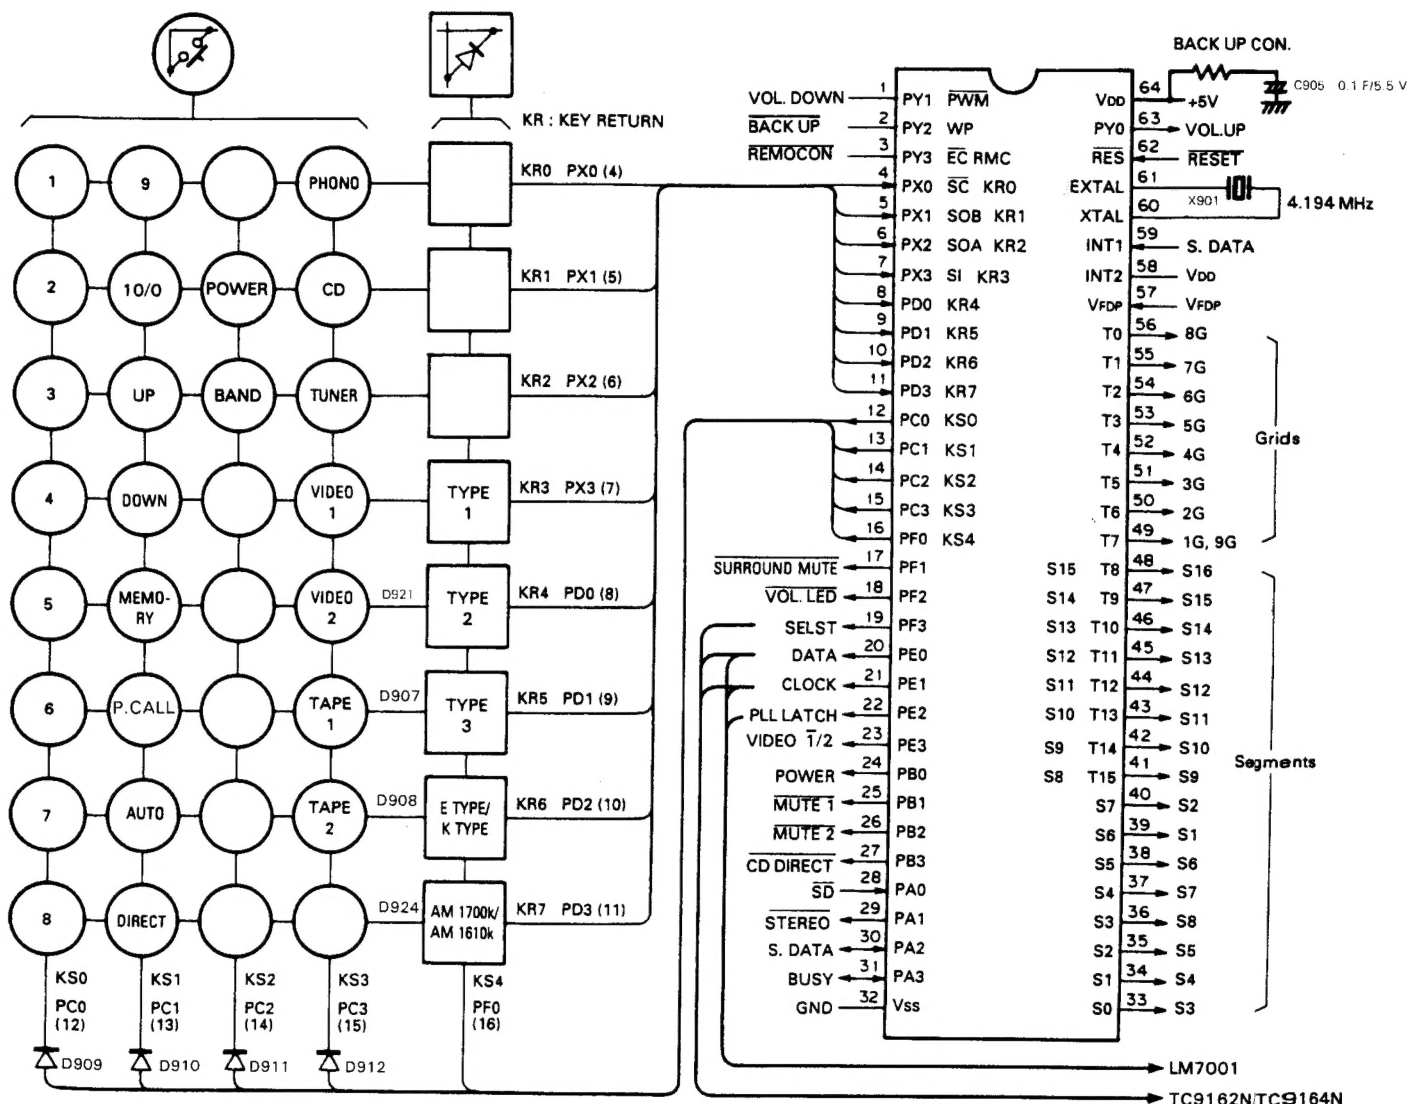

2-2. Setting of destinations, models and specifications depending upon diode key matrix

The setting of destinations, models and specifications is made according to the initial set diode key matrix.

In the following, "1" means "with diodes" and "0", "without diodes"

1) Model Set SW (TYPE2: D921, TYPE 3: D907)

Model set SW			MODEL	Function				
TYPE 1	TYPE 2	TYPE 3		TUNER BAND	DOLBY SURROUND	VOL. CONT with Motor	Switched VIDEO1, 2	REMOC0N
0	0	1	KR-V5550	FM1-FM2-AM	Provided	Provided	Provided	Provided
—	1	0	KR-A5050 (EXCEPT E TYPE)	↑	Not provided	↑	Not provided	↑

KR-A4050/5050

CIRCUIT DESCRIPTION (Except E, T type)

2) Destination set SW: E type/K type (D908 to Q903)

Destination set SW	Destination	BAND	Reception frequency band	Channel space	Reference frequency
0	K	FM	87.5~108.0 MHz	100 kHz	50 kHz
		AM	530~1610 kHz 530~1700 kHz	10 kHz	10 kHz
1	E	FM	87.5~108.0 MHz	50 kHz	50 kHz
		AM	531~1602 kHz	9 kHz	9 kHz

3) Specification set SW: AM1700k/AM 1610k (D924)

With destination set SW at "0": Effective only for K type

Specification set SW	AM reception frequency band
0	530~1610 kHz
1	530~1700 kHz

Pin description


Pin No.	Pin name	I/O	Name	Function
1	PY1	O	VRDOWN	Potentiometer down operation control. High: V down Low: Normal state
2	PY2	I	BACKUP	Backup (AC outlet off) detection. High: Normal state Low: AC outlet off When the power is switched on, high is input. When low is input, the microprocessor stops clock generation and enters the backup state. When the signal changes from low to high, the backup state changes to the normal state.
3	RMC	I	REMOCON	REMOCON signal input. active Low
4~11	PX0~PX3 PD0~PD3	I	KR0~KR7	KEY RETURN signal input. High: There is input. Low: There is no input.
12~16	PC0~PC3 PF0	O	KS0~KS4	KEY SCAN signal output. Normally high is output. Key scan is performed when KEY is ON.
17	PF1	O	SMUTE	SURROUND effect audio signal output ON/OFF control. High: output ON Low: output OFF
18	PF2	O	VOLLED	Volume LED signal output. High: OFF Low: ON
19	PF3	O	SELST	Data latch signal output to TC9162/TC9164. Data is latched on the rising edge.
20	PE0	O	DATA	LM7001(PLL IC) TC9162/TC9164 (selector IC) control serial data output. Data is latched on the rising edge of the clock.
21	PE1	O	CLOCK	LM7001, TC9162/TC9164 control serial data transfer shift clock output. Data is latched on the rising edge of the clock.
22	PE2	O	PLLT	CE signal output to LM7001. When the signal is high, LM7001 is enabled.
23	PE3	O	VIDEO T/2	VIDEO signal switching control. High: VIDEO 2 Low: VIDEO 1
24	PB0	O	POWER	Power supply circuit relay on/off control. High: ON Low: OFF
25	PB1	O	MUTE 1	TAPE 2 REC OUT mute control. High: MUTE OFF Low: MUTE ON
26	PB2	O	MUTE 2	LINE OUT mute control. High: MUTE OFF Low: MUTE ON
27	PB3	O	CDL	CD DIRECT LED signal output. High: OFF Low: ON
28	PA0	I	SD	Tuner tuned detection. High: NO SIGNAL Low: TUNED
29	PA1	I	STEREO	Tuner FM stereo detection. High: MONO Low: Stereo
30	PA2	I/O	SDATA	This pin and serial data pin 59 are shorted.
31	PA3	I/O	BUSY	Serial busy signal input/output.
32	Vss	—	GND	GND.
33~48	S0~S15	O	Sa~So, Sr	Fluorescent display segment drive signal output.
49~51	T7~T5	O	—	N.C.
52~56	T4~T0	O	G5~G1	Fluorescent display digit drive signal output.
57	V _{FDP}	—	V _{FDP}	Fluorescent display output driver circuit power supply.
58	INT2	I	—	Unused pin. This pin and GND are shorted.
59	INT1	I	SDATA	This pin and serial data input pin 30 are shorted.
60	XTAL	O	XTAL	Clock generation circuit output.
61	EXTAL	I	EXTAL	Clock generation circuit input.
62	RST	I	RESET	Reset signal input.
63	PY0	O	VRUP	Volume up operation control. High: UP Low: Normal state
64	V _{DD}	—	V _{DD}	+5 V power supply.

KR-A4050/5050

ADJUSTMENT

AM Section: If alignment point is "-", Confirm the value.
If not, replace the front end pack.

No.	ITEM	INPUT SETTINGS	OUTPUT SETTINGS	TUNER SETTINGS	ALIGNMENT POINTS	ALIGN FOR	FIG.
FM SECTION		SELECTOR: FM					
1	DISCRIMINATOR	(A) 98.0MHz 1kHz, ± 75 kHz dev. 60dB μ (ANT. input)	Connect a DC voltmeter between TP803 and TP804. (TUNER UNIT)	AUTO or MONO 98.0MHz	L806 (TUNER UNIT)	0V	(a)
2	VCO	(A) 98.0MHz 0 dev. 60dB μ (ANT. input)	Connect a frequency counter between TP805 and TP806. (TUNER UNIT)	AUTO 98.0MHz	VR802 (TUNER UNIT)	19.00kHz	(b)
3	DISTORTION (STEREO)	(C) 98.0MHz 1kHz, ± 68.25 kHz dev. Selector: L or R Pilot: ± 6.75 kHz dev. 60dB μ (ANT. input)	(B)	98.0MHz	IFT (V02-)	Minimum distortion. (L or R)	
4	TUNING LEVEL	(A) 98.0MHz 0 dev. 18dB μ (ANT. input)	(B)	AUTO or MONO 98.0MHz	VR801 (TUNER UNIT)	Adjust VR801 and stop at the point where FLT901(TUNED) goes on.	
AM SECTION		SELECTOR: AM					
(1)	TUNING LEVEL	(D) 1000(999)kHz 26dB μ (ANT. input)	(B)	-	VR804 (TUNER UNIT)	Adjust VR804 and stop at the point where FLT901(TUNED) goes on.	
AUDIO SECTION							
<1>	IDLE CURRENT	-	Connect a DC voltmeter across R63 (L) R64 (R) (MAIN UNIT)	Volume:0	VR1 (L) VR2 (R) (AUDIO UNIT)	10mV	(d)

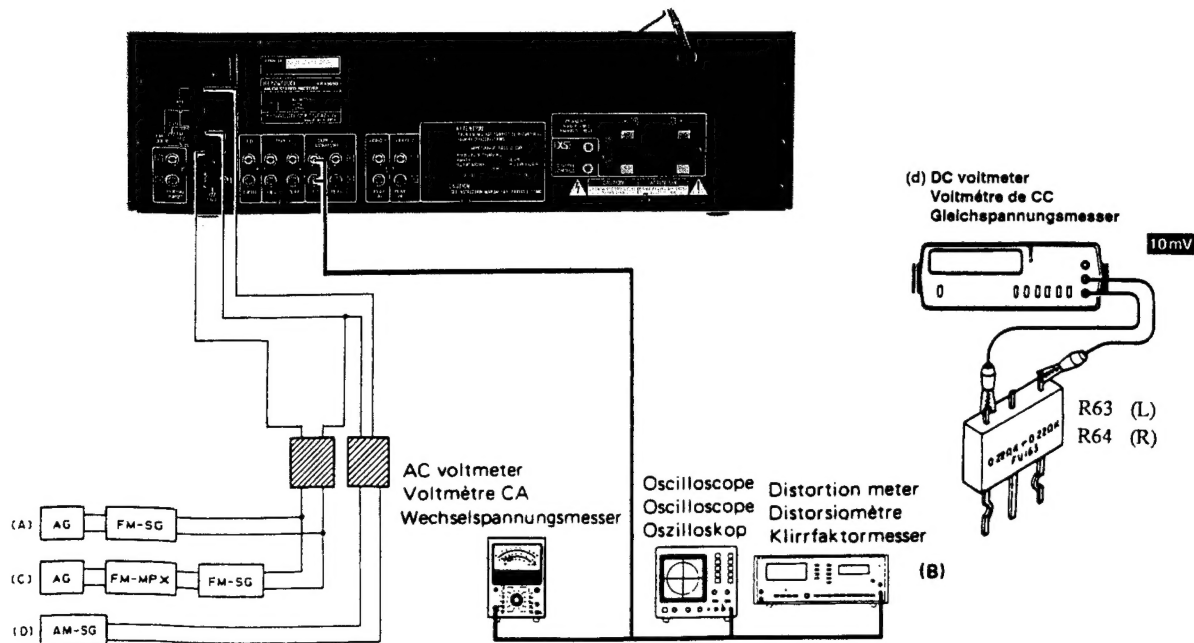

REGLAGE

Section AM : Si le point d'alignement est —, confirmer la valeur.
Sinon, remplacer le bloc avec.

N°	ITEM	REGLAGE DE L'ENTREE	REGLAGE DE LA SORTIE	REGLAGE DU TUNER	POINT DE L'ALIGNEMENT	ALIGNER POUR	FIG.
SECTION MF		SELECTEUR : FM					
1	DISCRIMINATEUR	(A) - 98,0MHz 1kHz. ±75kHz dev 60dBμ(Entrée ANT)	Relier un voltmètre CC entre les TP803 et TP804 (TUNER UNIT)	AUTO ou MONO 98,0MHz	L806 (TUNER UNIT)	0V	(a)
2	OSCILLATEUR CONTROLE PAR LA TENSION	(A) 98,0MHz 0 dev 60dBμ(Entrée ANT)	Relier un compteur de fréquence entre les TP805(VCO)et TP806 (GND) (TUNER UNIT)	AUTO 98,0MHz	VR802 (TUNER UNIT)	19,00kHz	(b)
3	DISTORSION (STEREO)	(C) 98,0MHz 1kHz. 68,25kHz dev Selection: I ou R Signal pilote: ±6,75kHz dev 60dBμ(Entrée ANT)	(B)	98,0MHz	(W02-) IFT	Distorsion minimale. (LouR)	
4	NIVEAU D' ACCORDER	(A) 98,0MHz 0 dev — 18dBμ(Entrée ANT) 75Ω	(B)	AUTO ou MONO 98,0MHz	VR801 (TUNER UNIT)	Ajuster VR1 et arrêter le mouvement de VR801 au moment où le FL901(TUNED)s' allume.	
SECTION MA		Laisser l'antenne bouche MA installée. SELECTEUR: AM					
(1)	NIVEAU D' ACCORDER	(A) 1000kHz 26dBμ(Entrée ANT)	—	—	VR804 (TUNER UNIT)	Ajuster VR4 et arrêter le mouvement de VR804 au moment où le FL901(TUNED)s' allume.	
SECTION AUDIO							
<1>	COURANA DE POLARISATION	—	Connecter un voltmètre CC sur R63 (L) R64 (R) (MAIN UNIT)	Volume: 0	VR1 (G) VR2 (D) (AUDIO UNIT)	10mV	(d)

KR-A4050/5050




ABGLEICH

MW-Teil : Wenn der Ausrichtpunkt—ist, den Wert überprüfen.
Wenn nicht, die Fronteinheit auswechseln.

NR.	GEGENSTAND	EINGANGS-EINSTELLUNG	AUSGANGS-EINSTELLUNG	TUNER-EINSTELLUNG	ABGLEICH-PUNKTE	ABGLEICHEN FÜR	ABB.
UKW - EMPFANGSABTEILUNG WÄHLER: FM							
1	DISKRIMINATOR	(A) 98,0MHz 1kHz.±75kHz Hub 60dBμ(Ant-Eingang)	Einen Gleichspannungsmesser zwischen TP803 UND TP804 anschließen. (TUNER UNIT)	AUTO oder MONO 98,0MHz	L806 (TUNER UNIT)	0V	(a)
2	SPANNUNGS-GEREGELTER OSZILLATOR	(A) 98,0MHz 0 Hub 60dBμ(Ant-Eingang)	Einen Frequenzzähler zwischen TP806 (VCO) und TP805 (GND) anschließen. (TUNER UNIT)	AUTO 98,0MHz	VR802 (TUNER UNIT)	19,00kHz	(b)
3	KLIRRFaktor (STEREO)	(C) 98,0MHz 1kHz.±68,25kHz Hub Wähler: L oder R Piloten: ±6,75kHz Hub 60dBμ(Ant-Eingang)	(B)	98,0MHz	(W02-) IFT	Minimal Klirrfaktor. (LouR)	
4	ABSTIMM PEGEL	(A) 98,0MHz 0 Hub — 18dBμ(Ant-Eingang) 75Ω	(B)	AUTO oder MONO 98,0MHz	VR801 (TUNER UNIT)	Den Pegel wiederstand aufdrehen, und dem VR 801 Halt geben wobei den FL 901 (TUNED) anzeiger leuchtet wird.	
MW - EMPFANGSABTEILUNG Die MW-Rahmenantenne angebracht lassen. WÄHLER: AM							
(1)	ABSTIMM PEGEL	(A) 1000kHz 26dBμ(Ant-Eingang)	—	—	VR804 (TUNER UNIT)	Den Pegel wiederstand aufdrehen, und dem VR804 Halt geben wobei den FL 901 (TUNED) anzeiger leuchtet wird.	
AUDIO - ABTEILUNG							
<1>	LEERLAUFSTROM	—	Einen Gleichspannungsmesser über R63 (L) R64 (R) anschließen. (MAIN UNIT)	Volume: 0	VR1 (L) VR2 (R) (AUDIO UNIT)	10mV	(d)

KR-A4050 K, P

   WIRING DIAGRAM






KR-A5050 K, P



KR-A5 050
(K, P, M, X TYPE)

FOIA b (7)(C), (7)(D), (7)(F), (7)(G), (7)(H), (7)(I), (7)(J)

 FRONT SPEAKERS (K,P,X TYPE)
(A or B: 4~16Ω, A and B: 8~16Ω) SYSTEM
B + L - - R + CONTROL
A

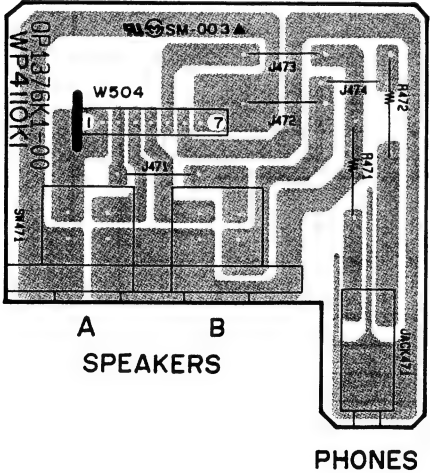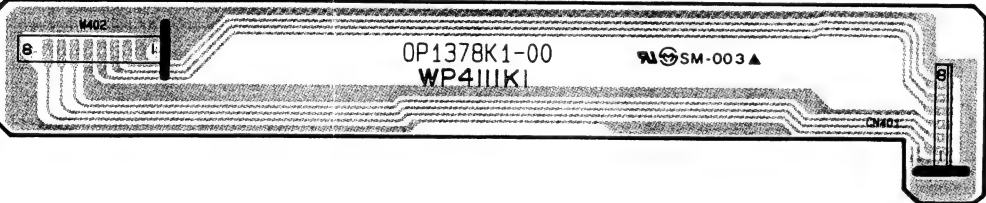


FRONT 

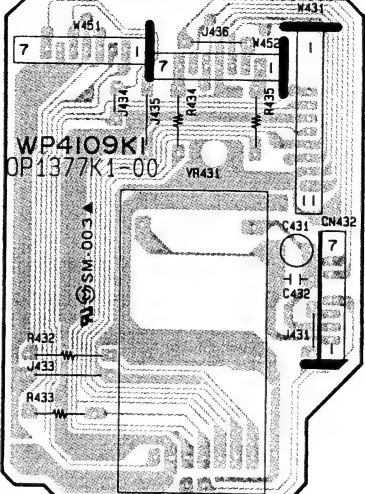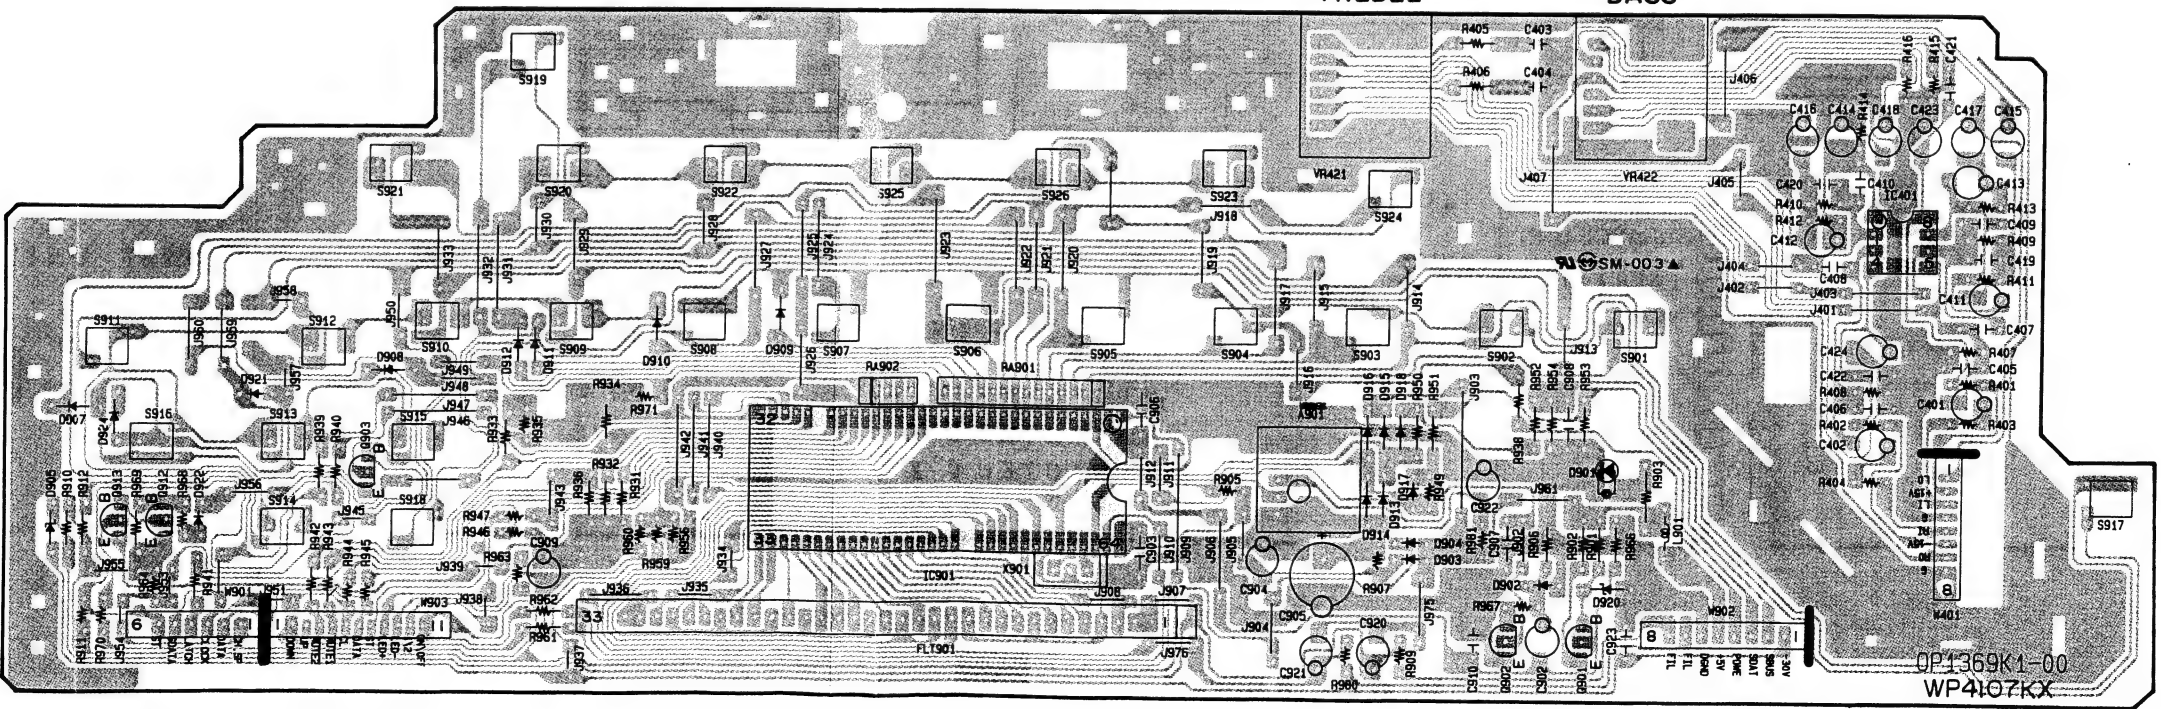

VOLUME CONTROL

LOUDNESS

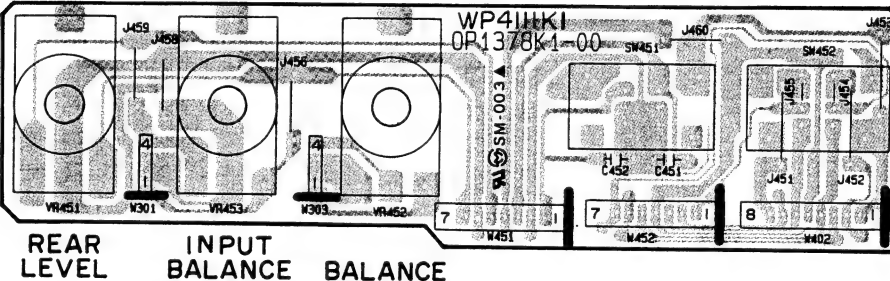


REAR LEVEL	INPUT BALANCE	BALANCE
1	1	1
2	2	2
3	3	3
4	4	4
5	5	5
6	6	6
7	7	7
8	8	8
9	9	9
10	10	10
11	11	11
12	12	12
13	13	13
14	14	14
15	15	15
16	16	16
17	17	17
18	18	18
19	19	19
20	20	20
21	21	21
22	22	22
23	23	23
24	24	24
25	25	25
26	26	26
27	27	27
28	28	28
29	29	29
30	30	30
31	31	31
32	32	32
33	33	33
34	34	34
35	35	35
36	36	36
37	37	37
38	38	38
39	39	39
40	40	40
41	41	41
42	42	42
43	43	43
44	44	44
45	45	45
46	46	46
47	47	47
48	48	48
49	49	49
50	50	50
51	51	51
52	52	52
53	53	53
54	54	54
55	55	55
56	56	56
57	57	57
58	58	58
59	59	59
60	60	60
61	61	61
62	62	62
63	63	63
64	64	64
65	65	65
66	66	66
67	67	67
68	68	68
69	69	69
70	70	70
71	71	71
72	72	72
73	73	73
74	74	74
75	75	75
76	76	76
77	77	77
78	78	78
79	79	79
80	80	80
81	81	81
82	82	82
83	83	83
84	84	84
85	85	85
86	86	86
87	87	87
88	88	88
89	89	89
90	90	90
91	91	91
92	92	92
93	93	93
94	94	94
95	95	95
96	96	96
97	97	97
98	98	98
99	99	99
100	100	100

TREBLE


BASS

PC BOARD (Component side view)





MAIN UNIT (WP4104KX)

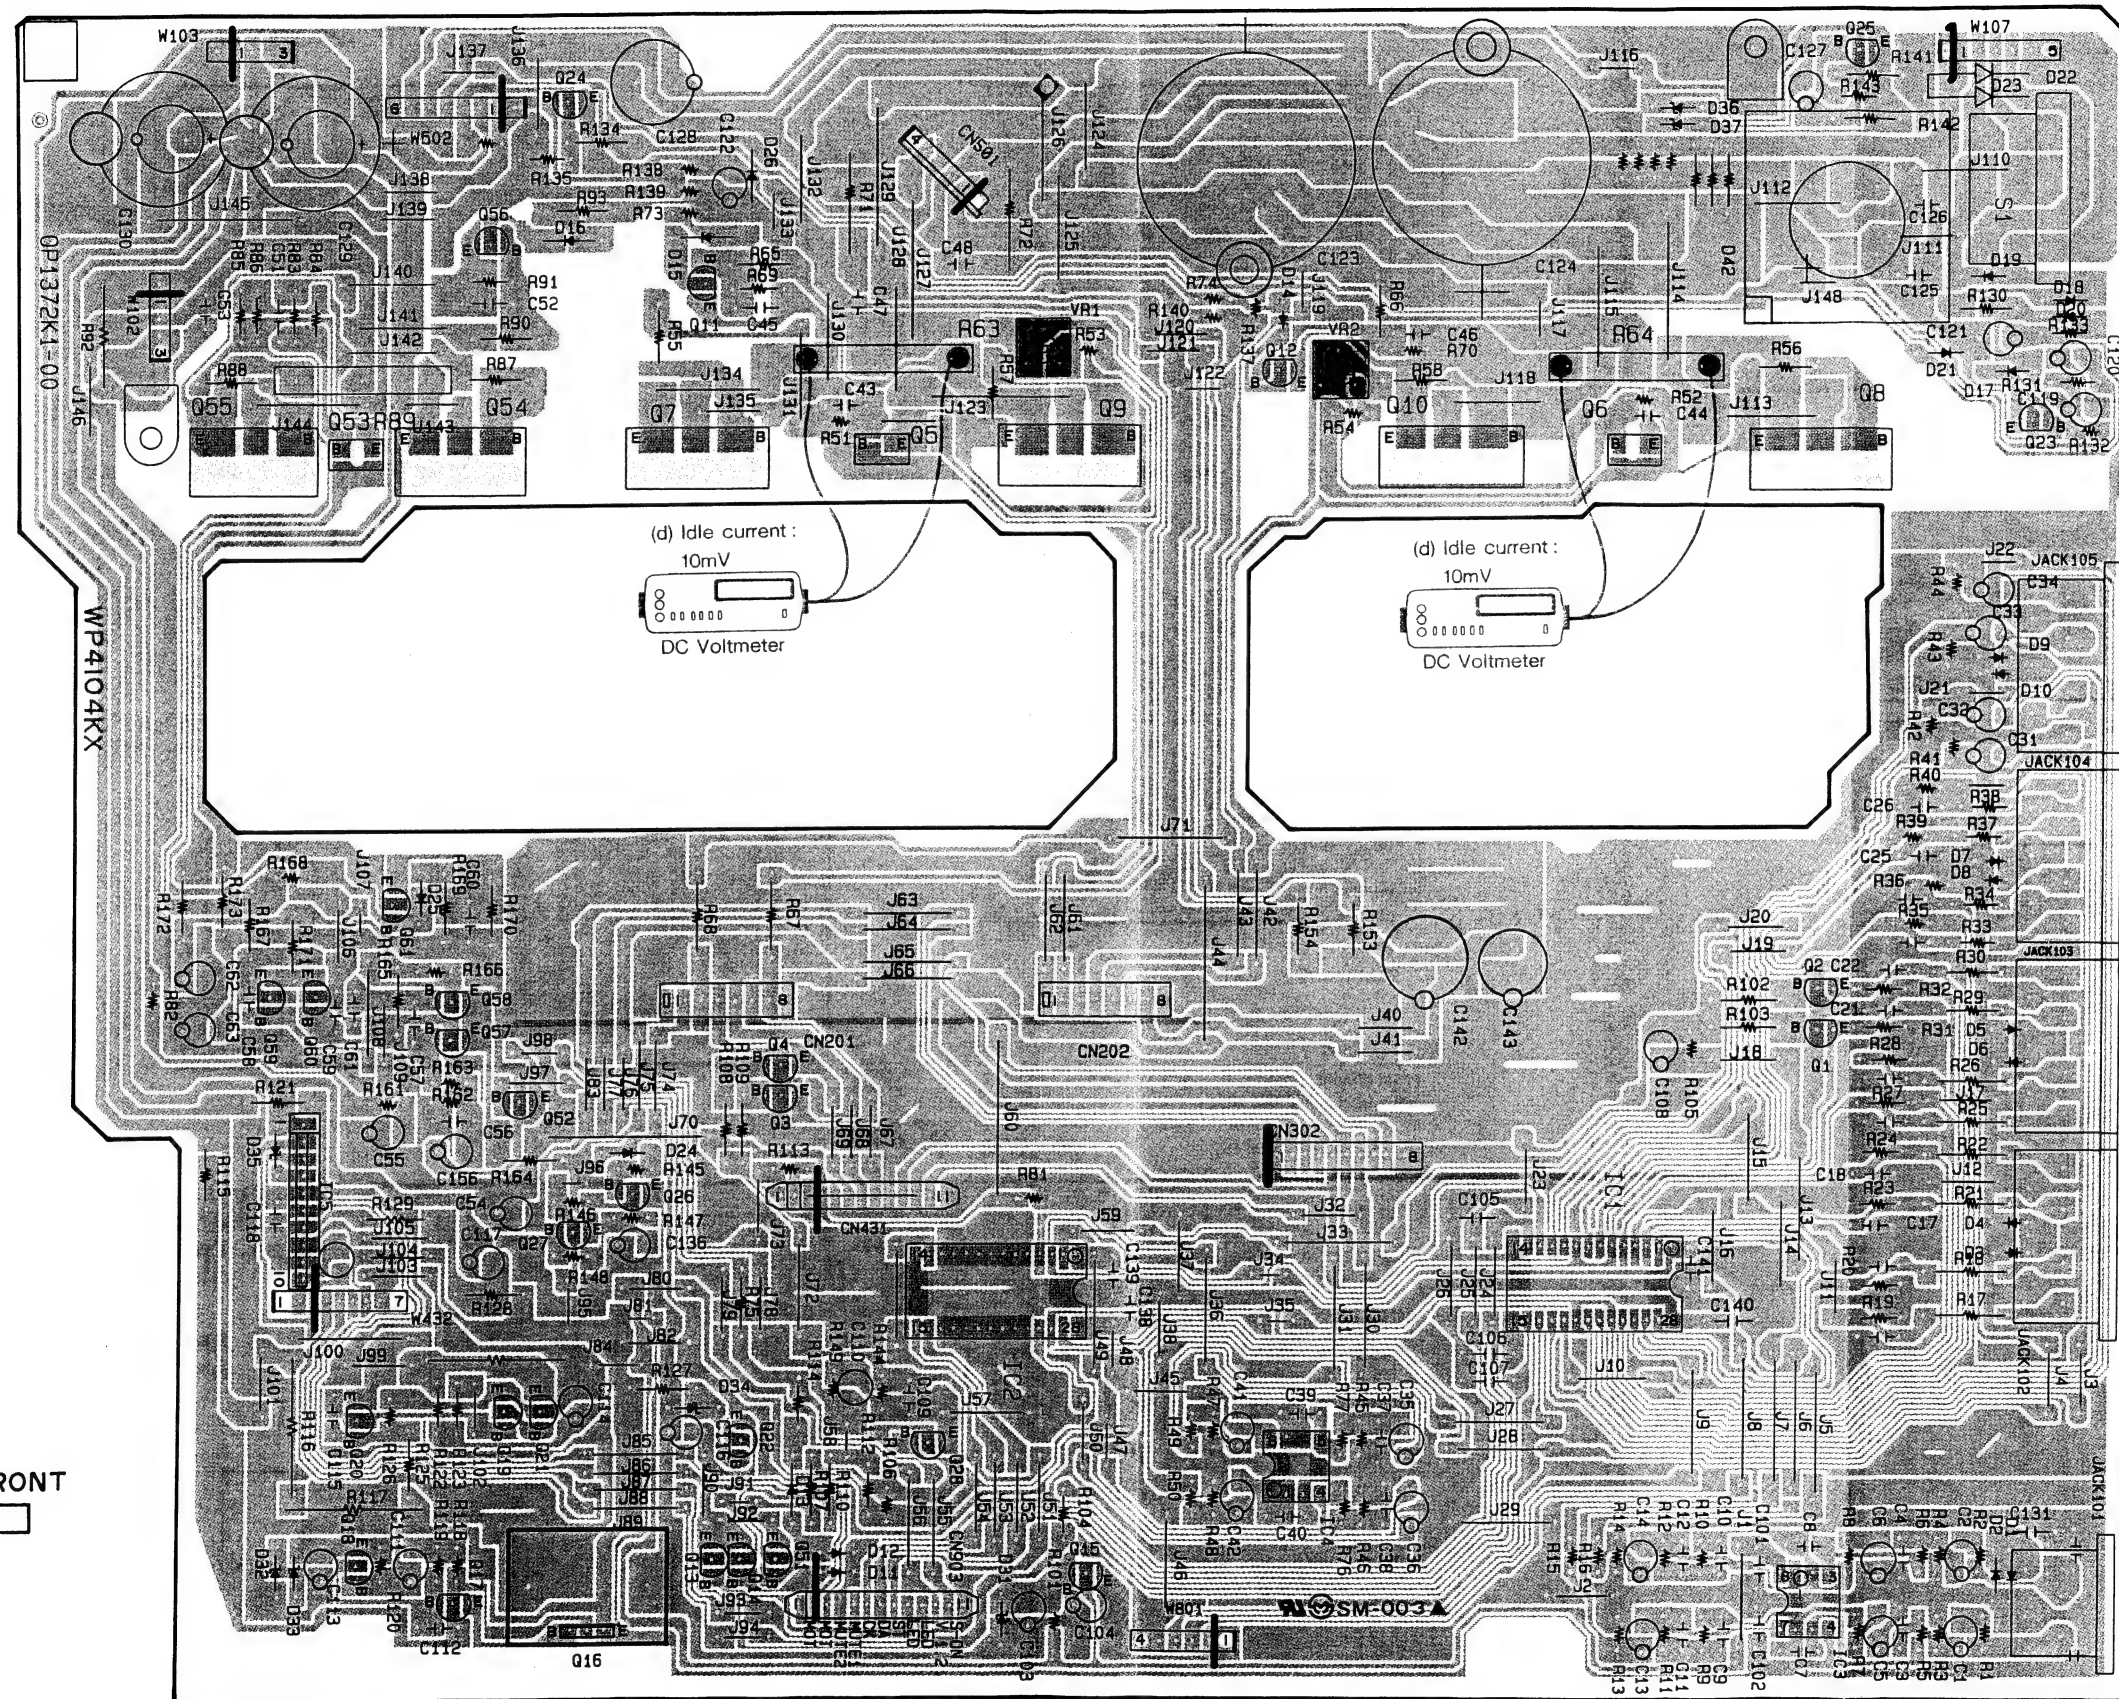

IMPEDANCE SELECTOR VIDEO 2 VIDEO 1 TAPE 2 TAPE 1 CD
A or B: A or B: LESS THAN 8Ω PLAY PLAY (MONITOR) L
8Ω OR MORE A and B: 8Ω OR MORE IN IN PLAY REC PLAY REC INPUT R
PHONO INPUT L

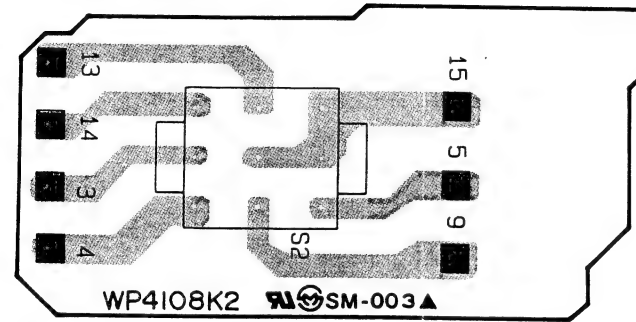

AC110-120V~ ◀▶ AC220-240V~

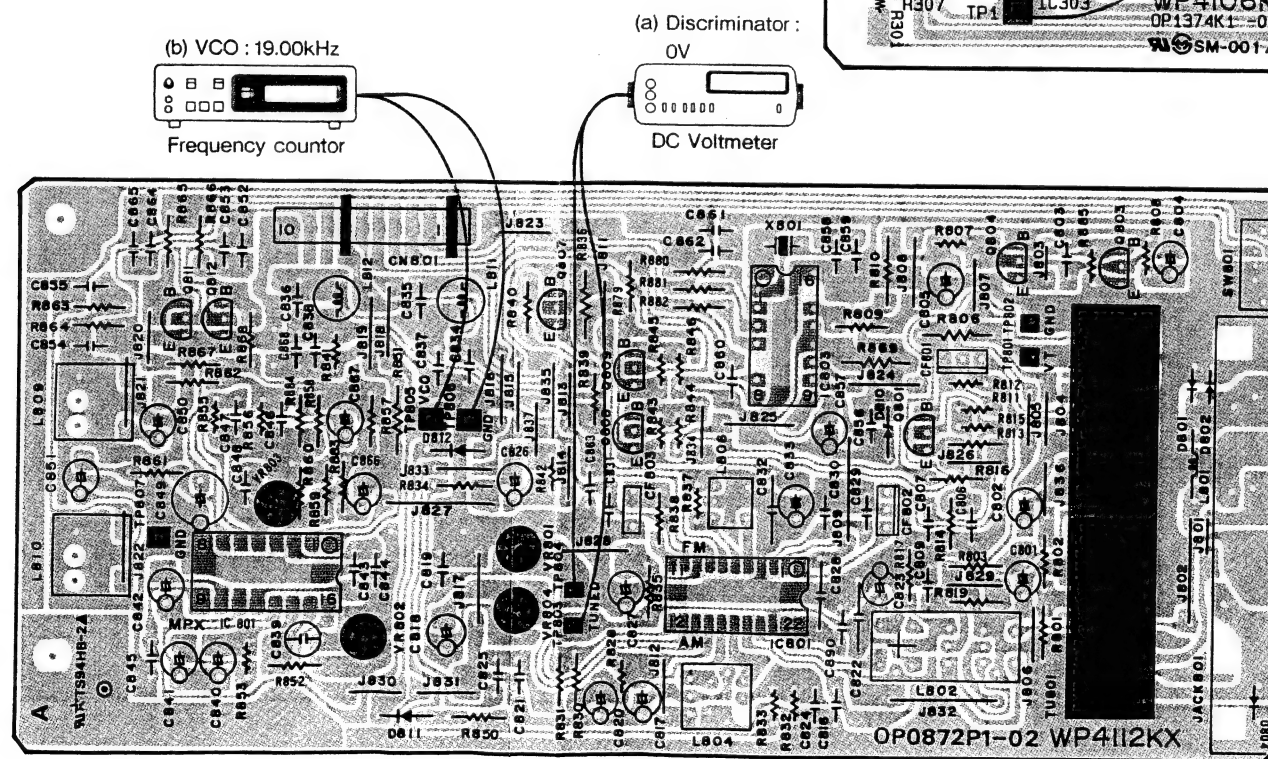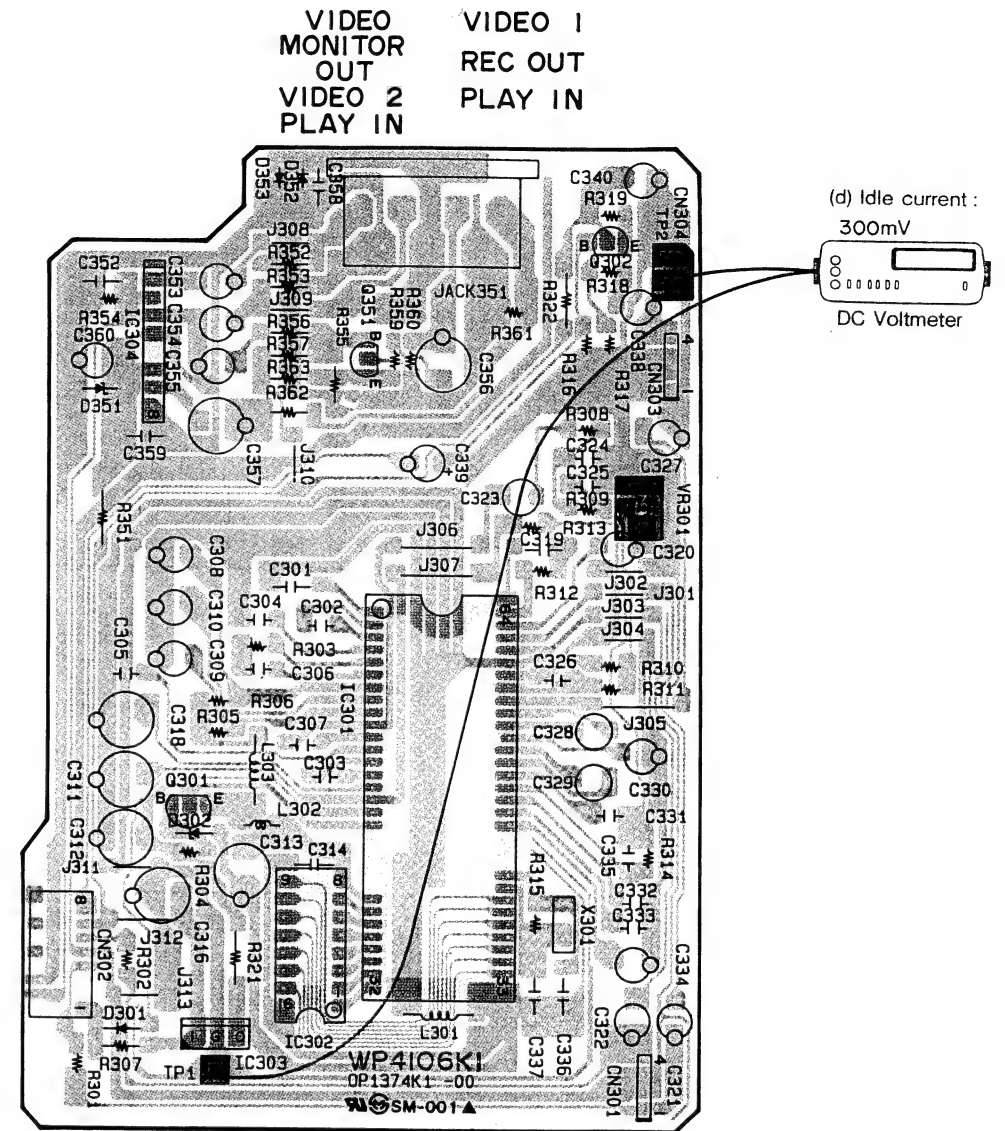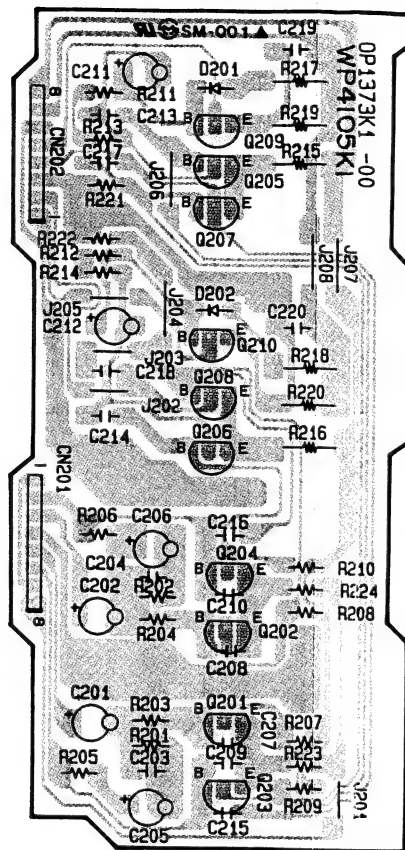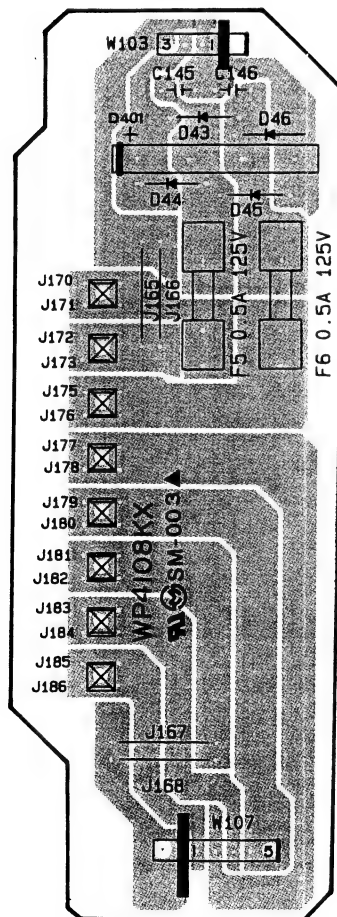

DE-EMPHASIS
CHANNEL SPACE
50 μ s FM50KHz
AM9KHz

75 μ s FM100KHz
AM10KHz


M, Y
TYPE

AM

GND

FM 75 Ω FM 300 Ω


VOLUME UNIT (WP4109K2)

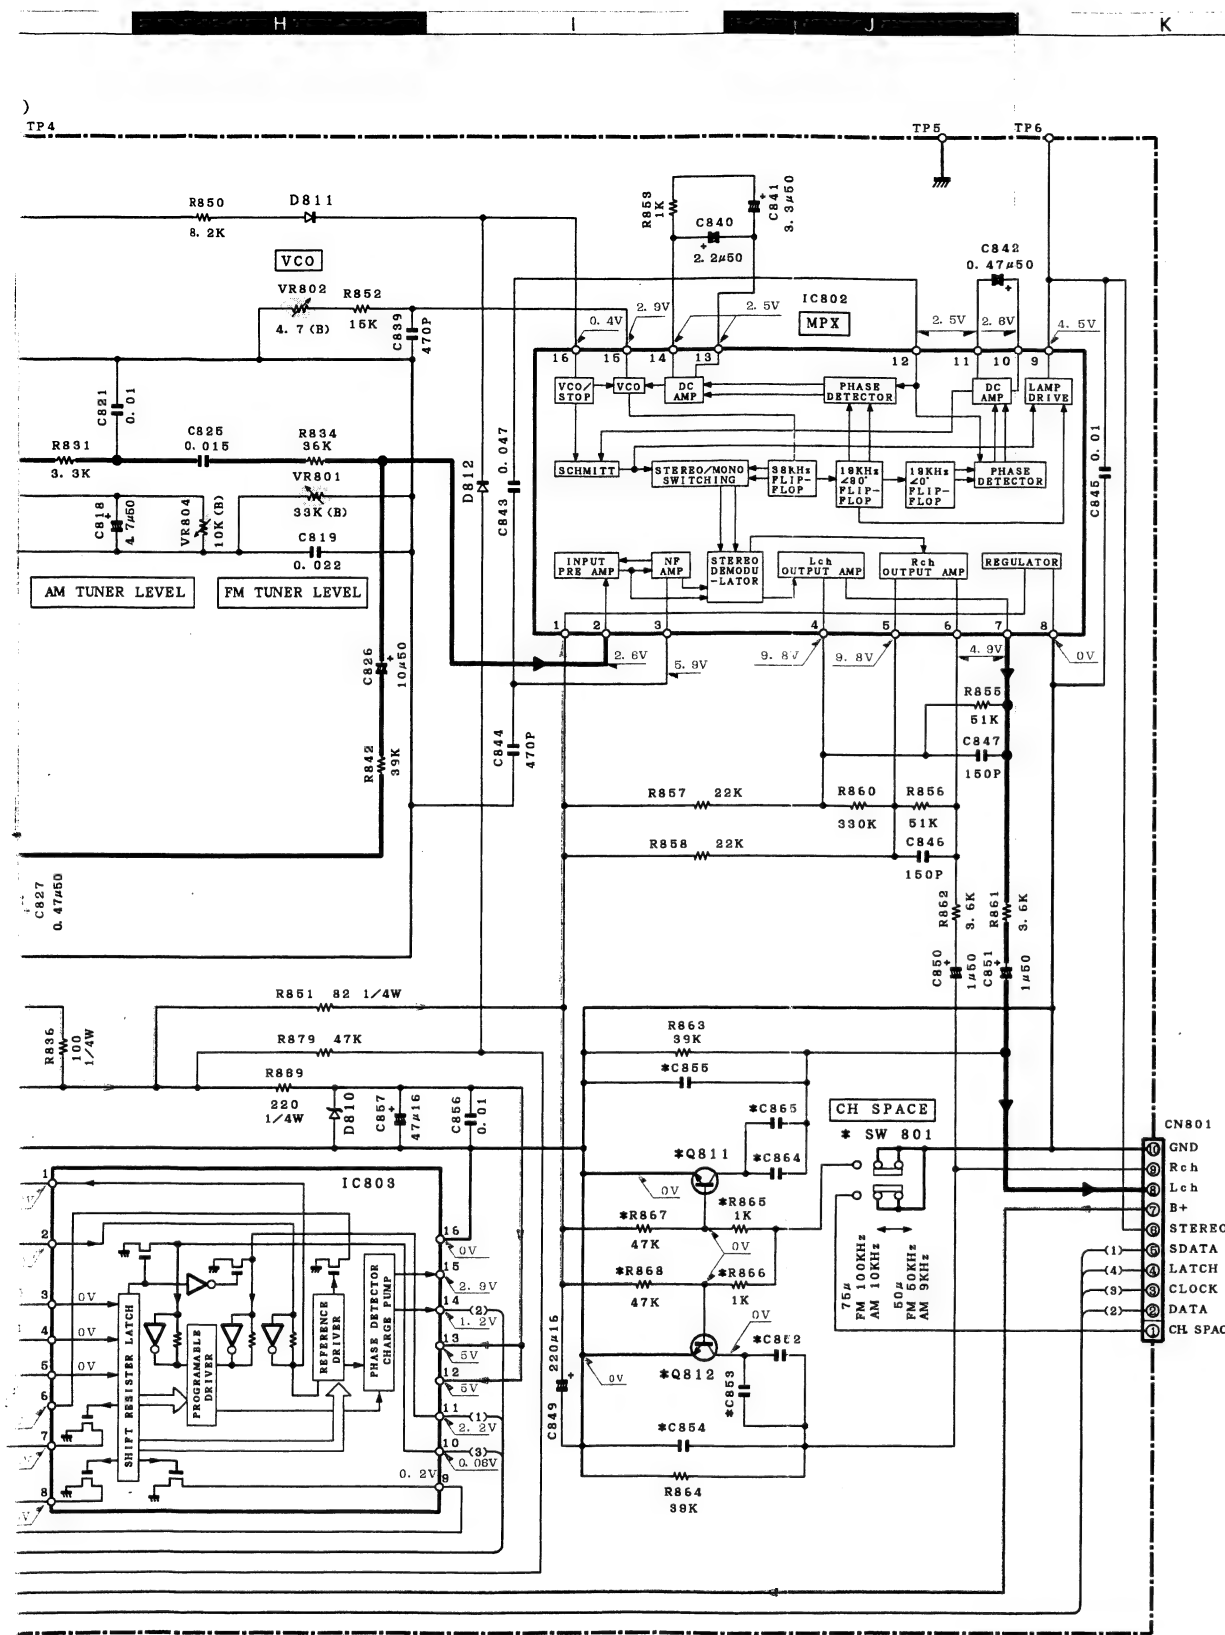


	C854	C855
	0.022μF	0.022μF
P	0.015μF	0.015μF
	0.015μF	0.015μF


FRONT UNIT



DESTINATION COUNTRY	Q903	D908	D924	R964	C908
U. S. A.	NO	NO	YES	NO	YES
CANADA	K	NO	YES	NO	YES
GENERAL MARKET	M	YES	NO	NO	YES
AUSTRALIA	X	NO	YES	NO	NO

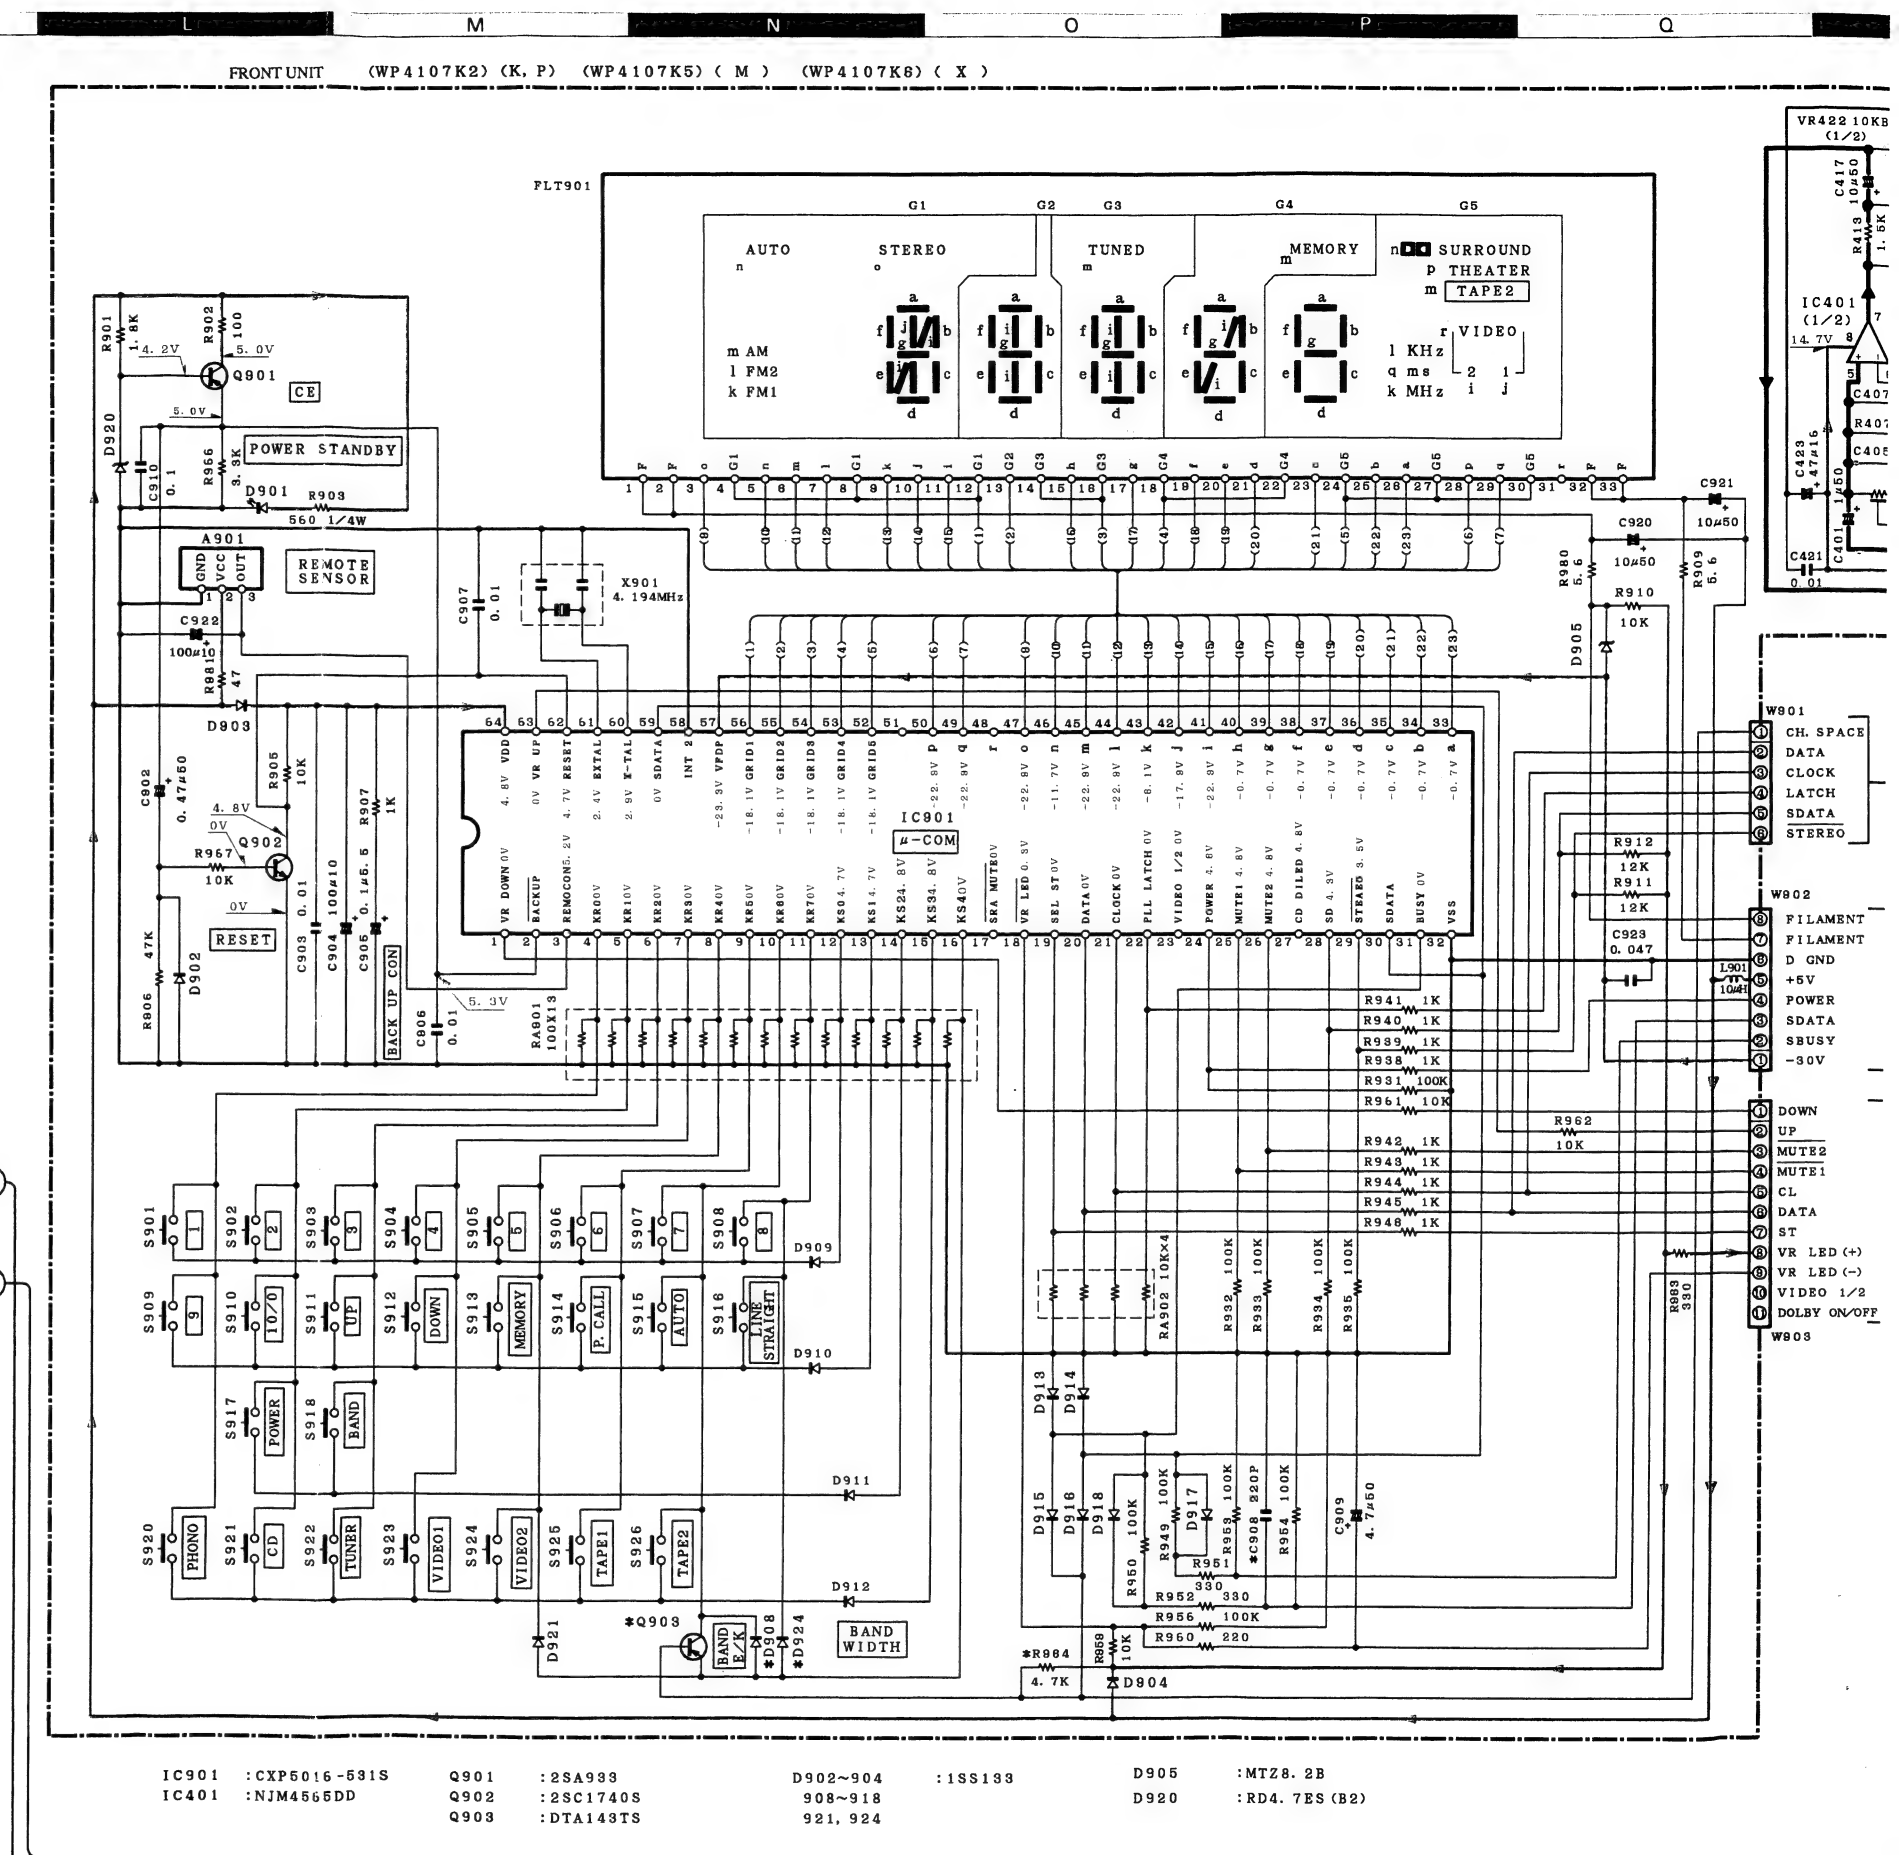



IC901 : CXP5016-531S	Q901 : 2SA933	D902~904 : 1SS133	D905 : MTZ8.2B
IC401 : NJM4565DD	Q902 : 2SC1740S	908~918 : 2SC1740S	D920 : RD4.7ES (B2)
	Q903 : DTA143TS	921, 924	

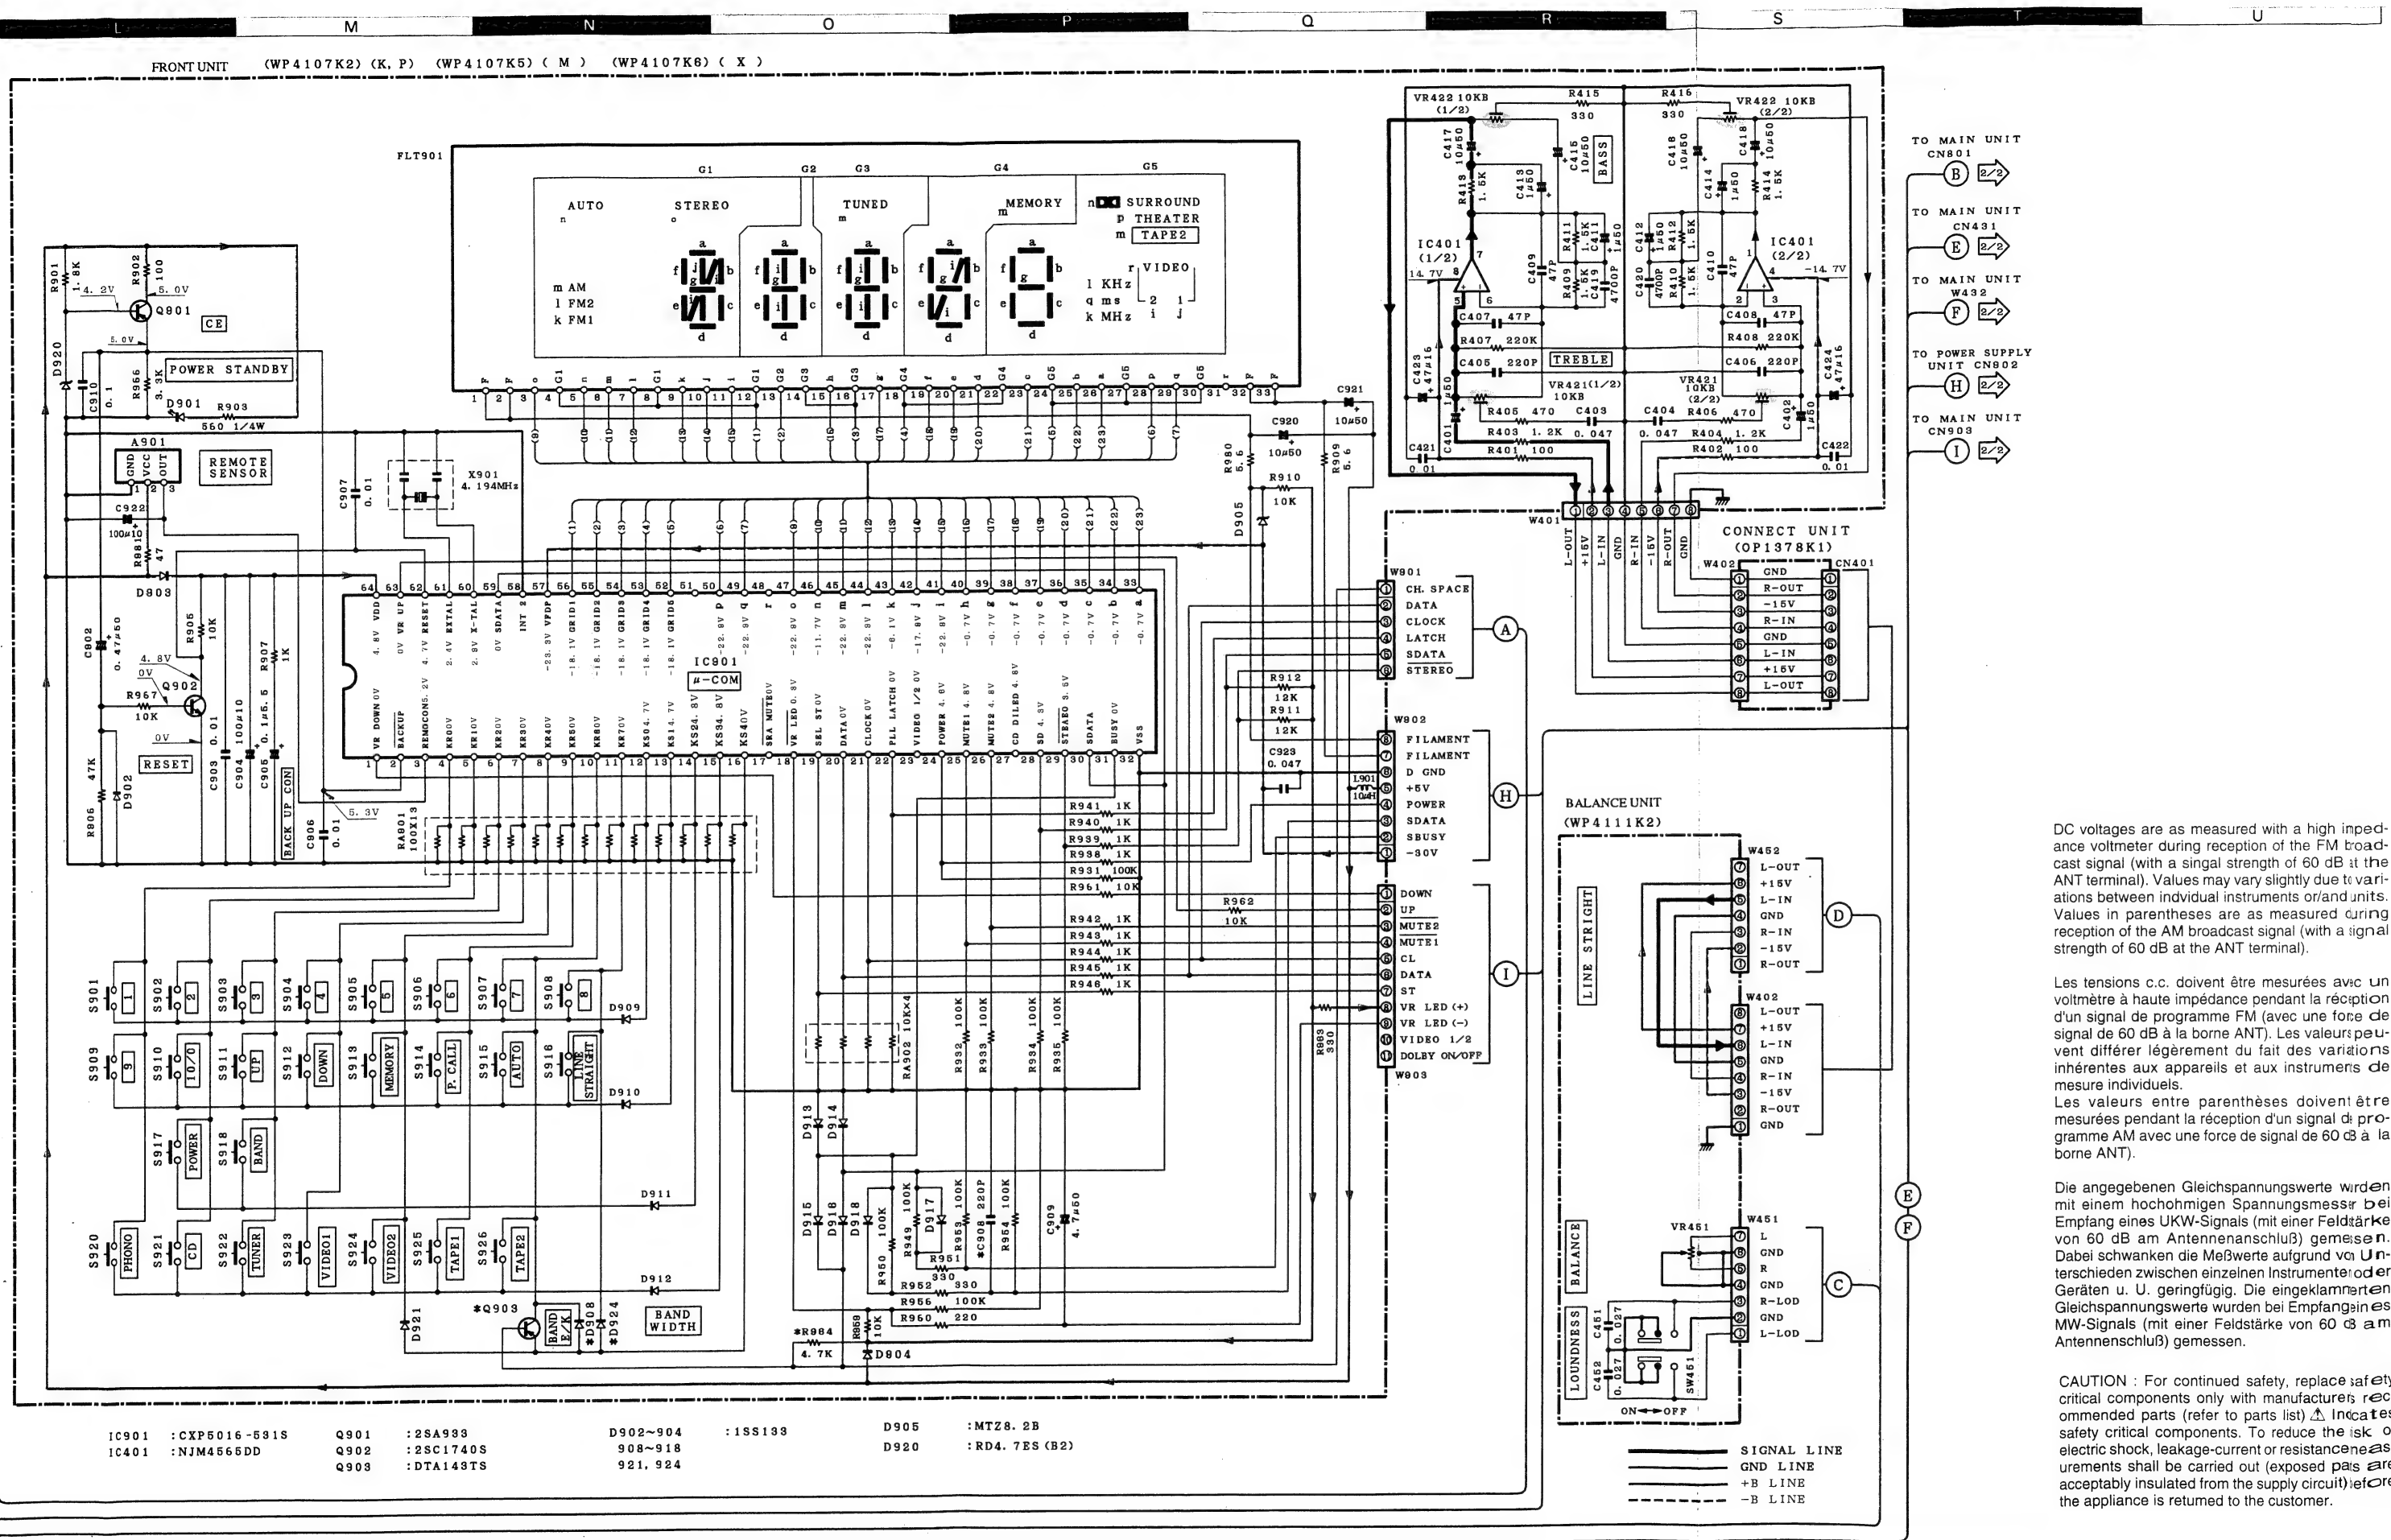

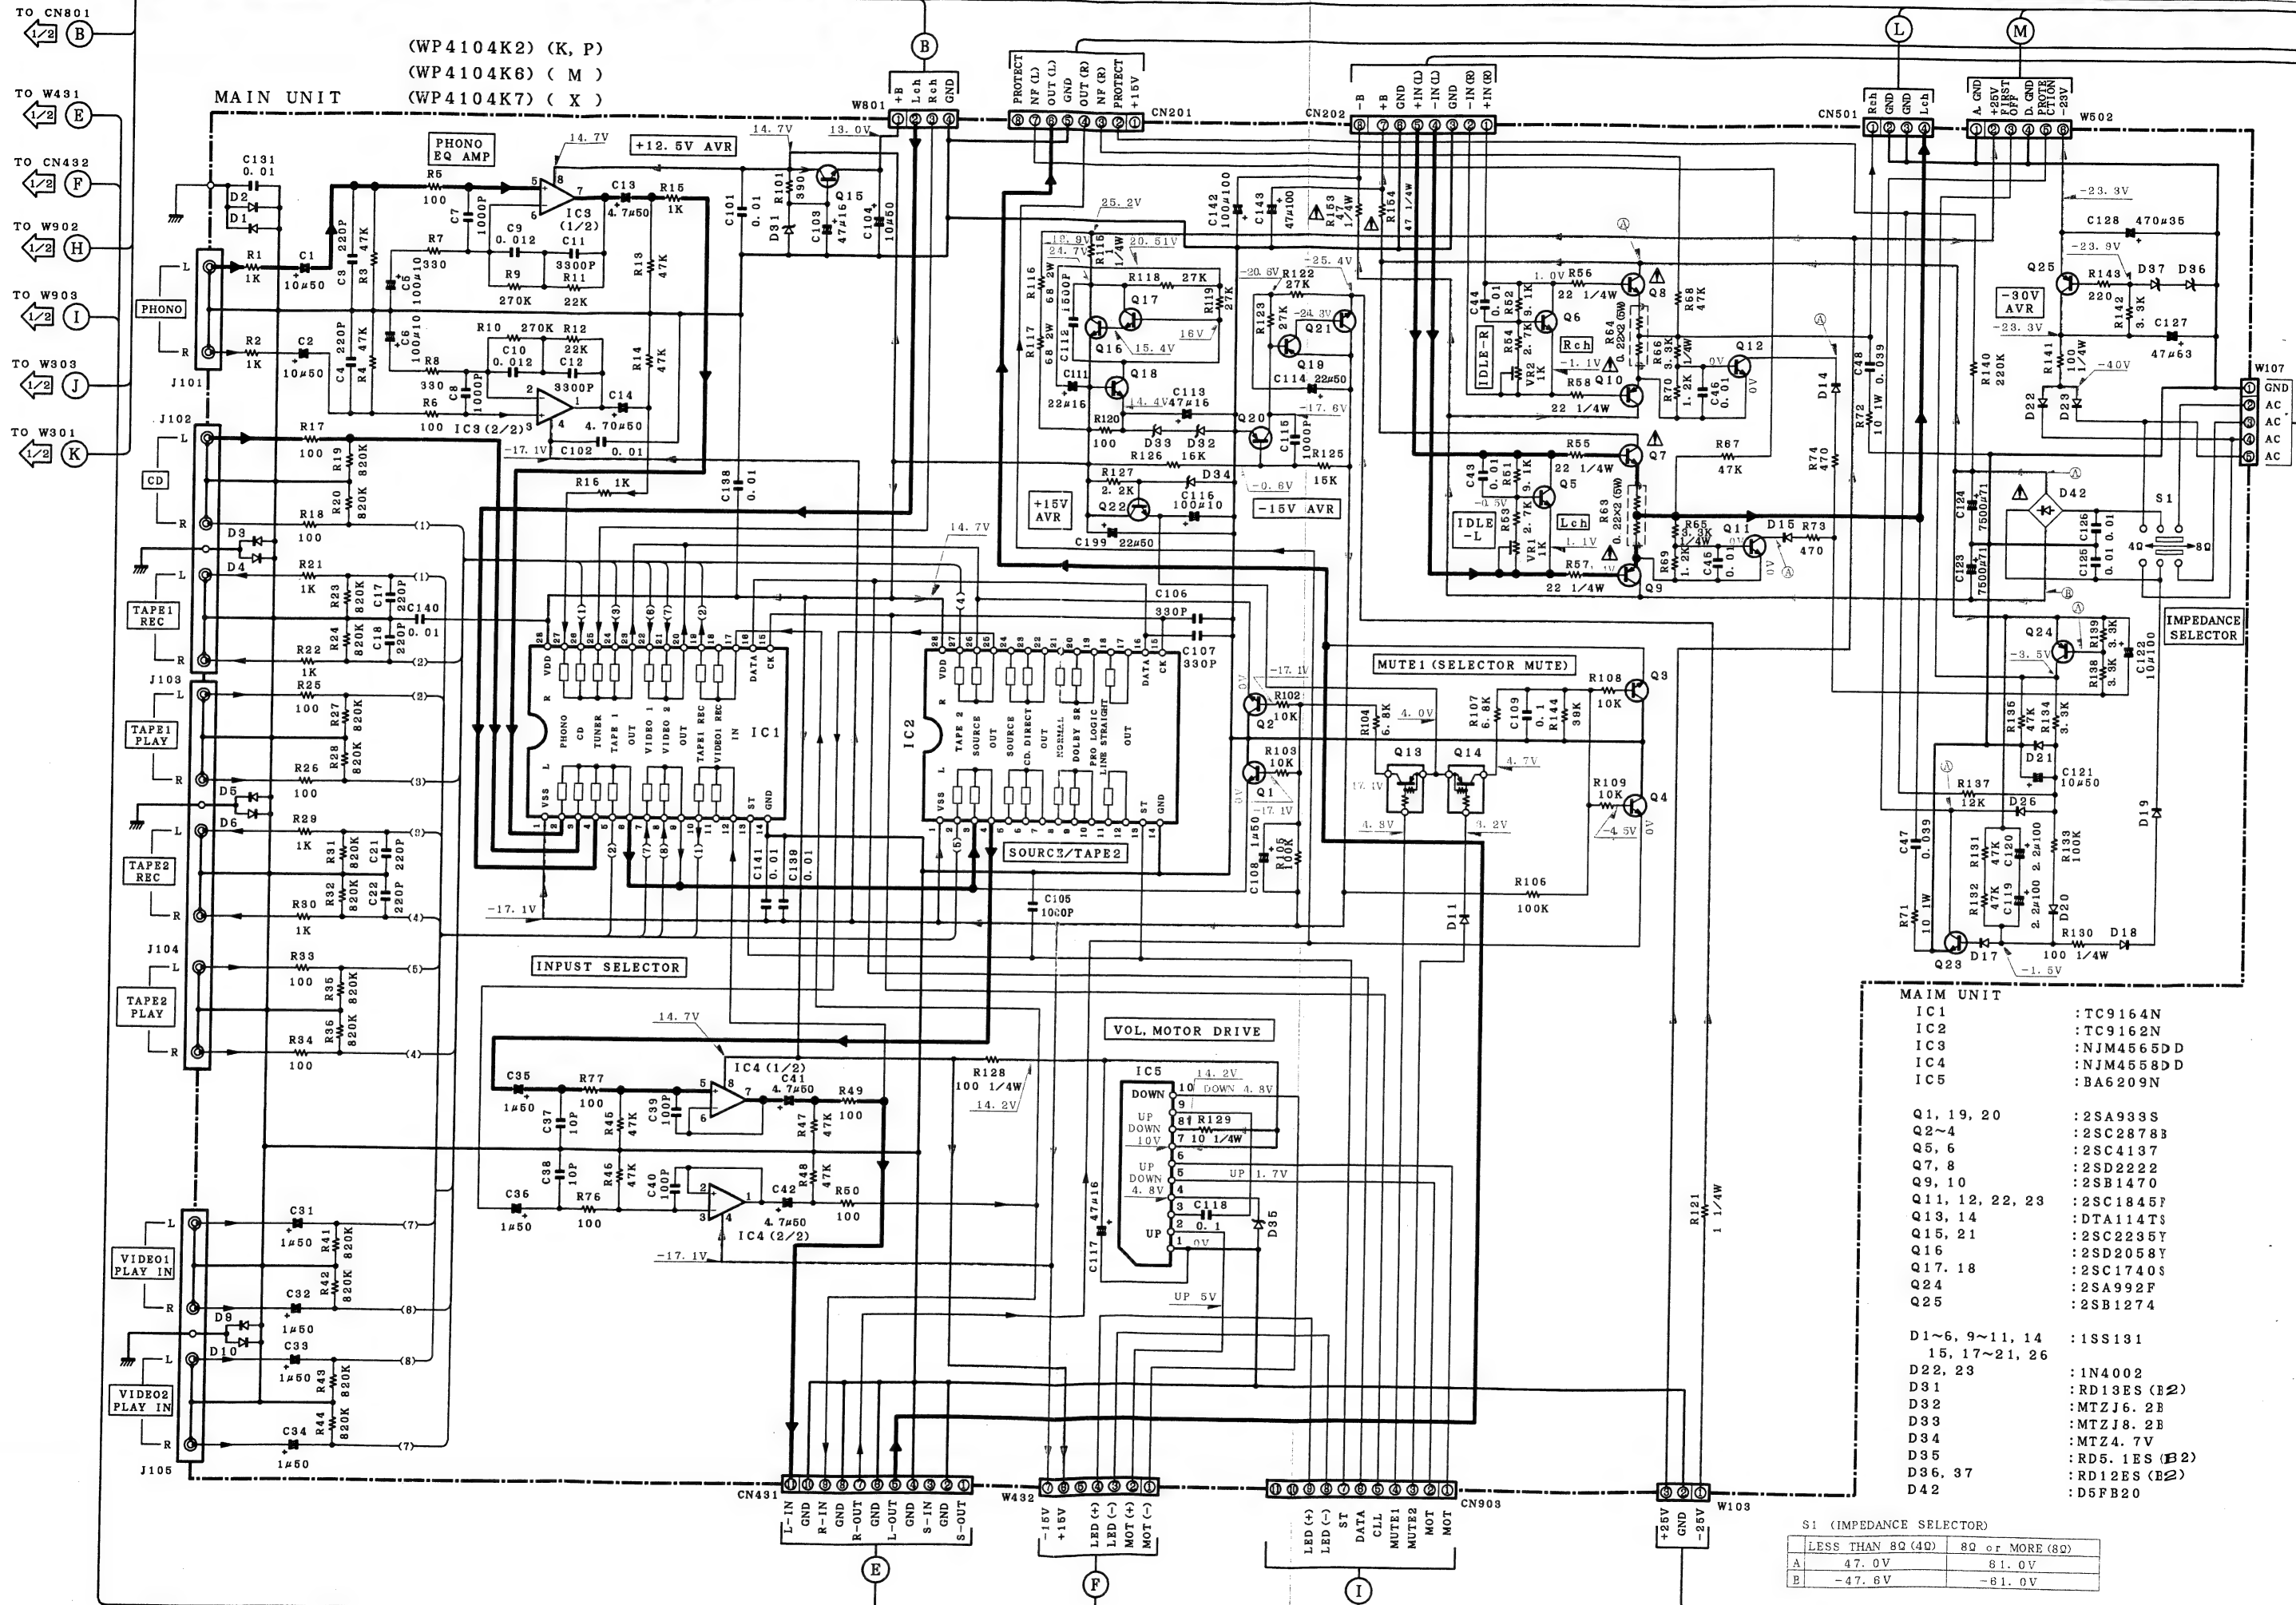


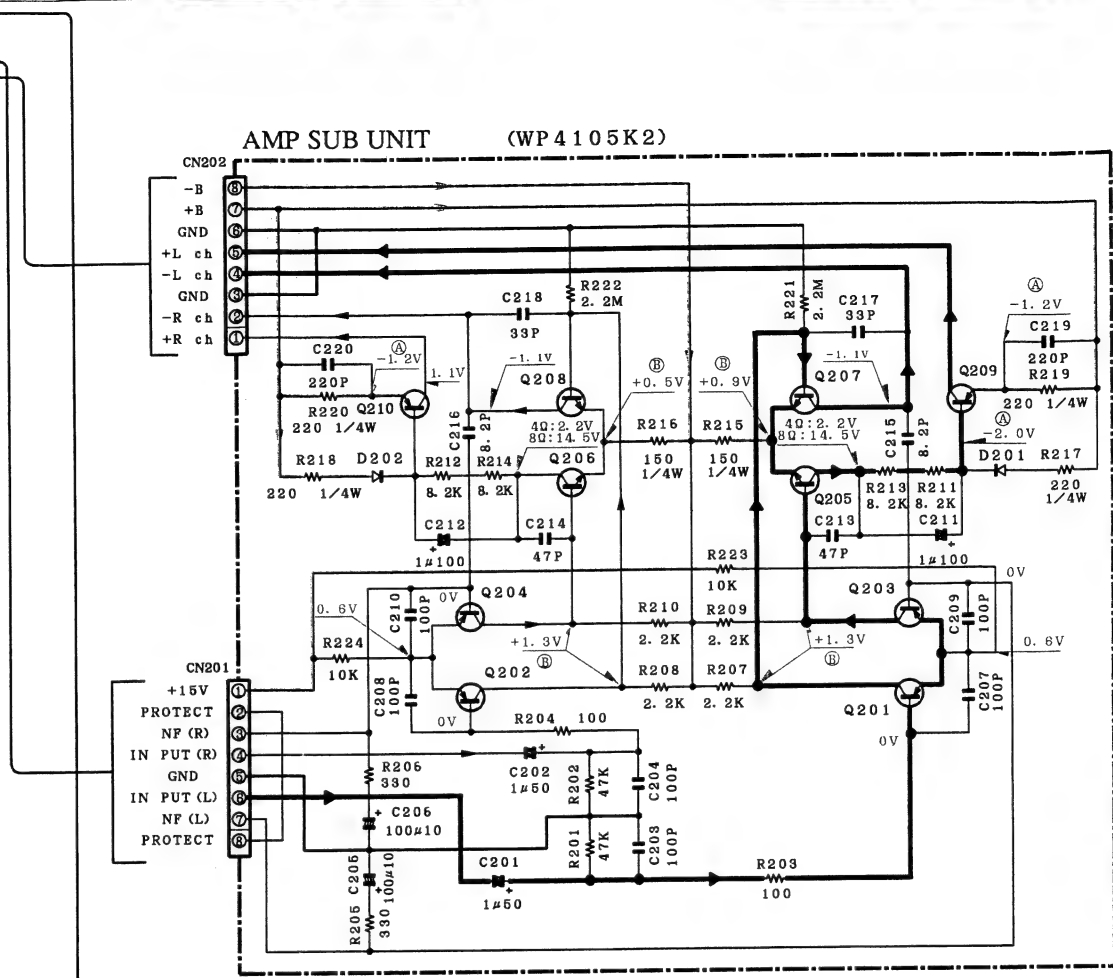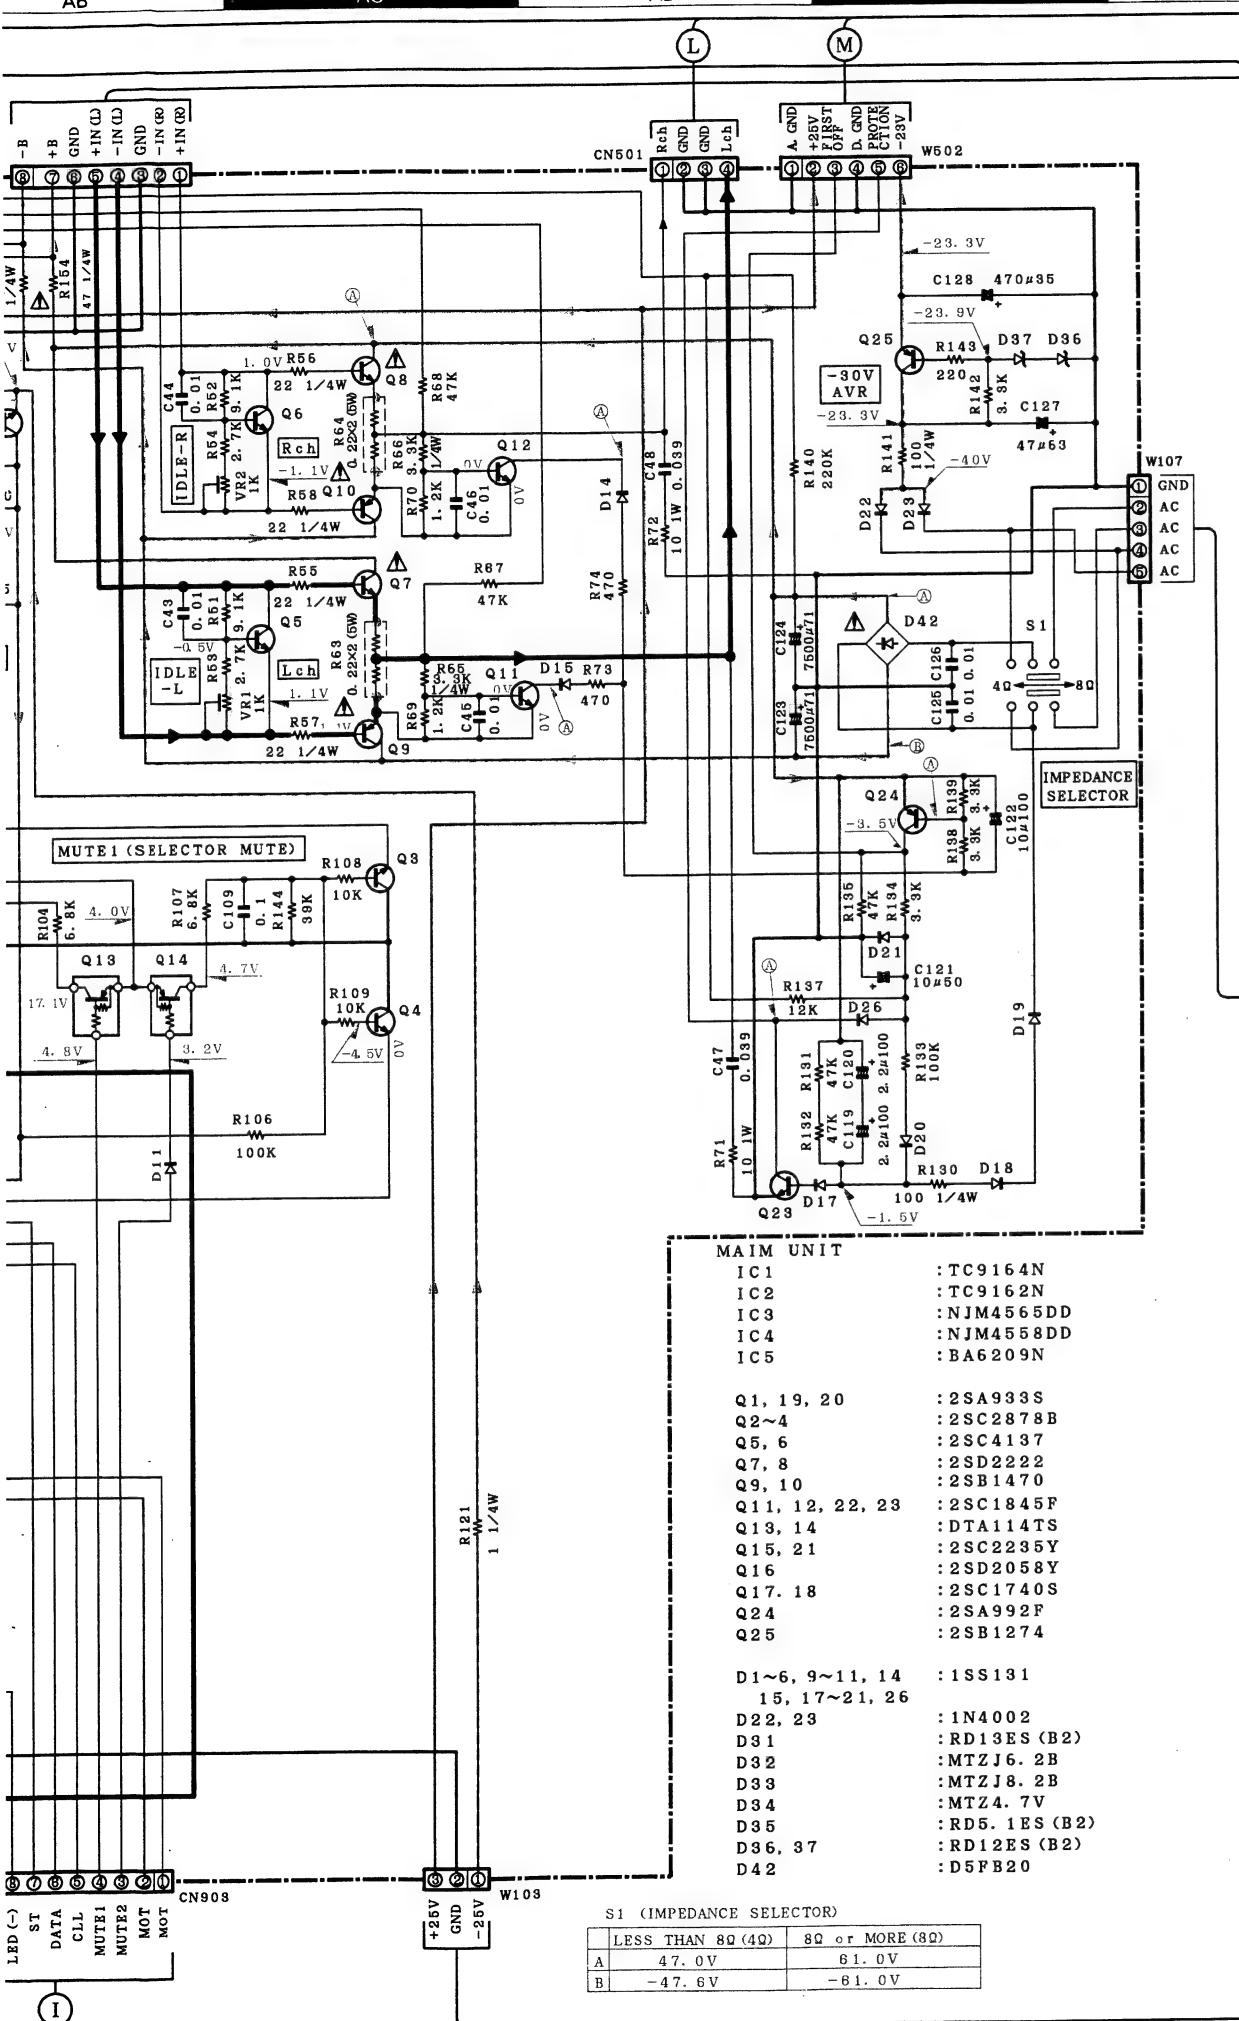


- SUB AMP**
- Q201~204 : 2SA992F
 - Q205~208 : 2SC1845F
 - Q209, 210 : 2SA992F
 - D201, 202 : 1SS133
- POWER**
- IC501 : #PC1237HA
 - Q501, 502 : 2SC2316 (Y)
 - Q503 : 2SD882
 - D501, 502 : 1N4002A
 - 509, 511~514 : 1SS133
 - D503~508 : 1SS133
 - 515, 516 : MTZJ6. 2B
 - D510 : MTZJ6. 2B

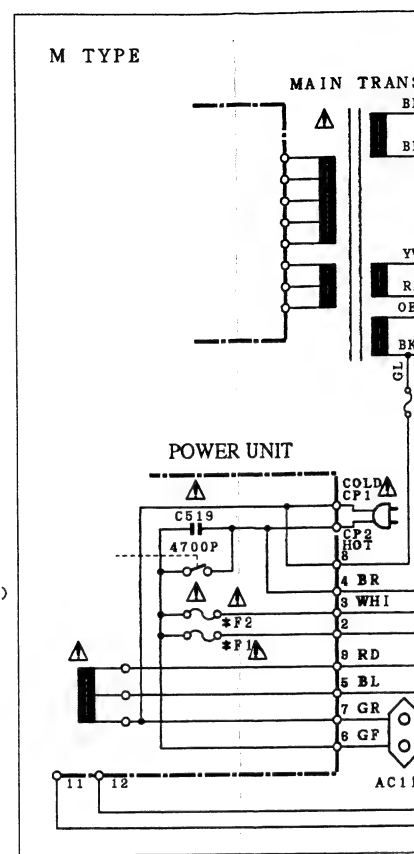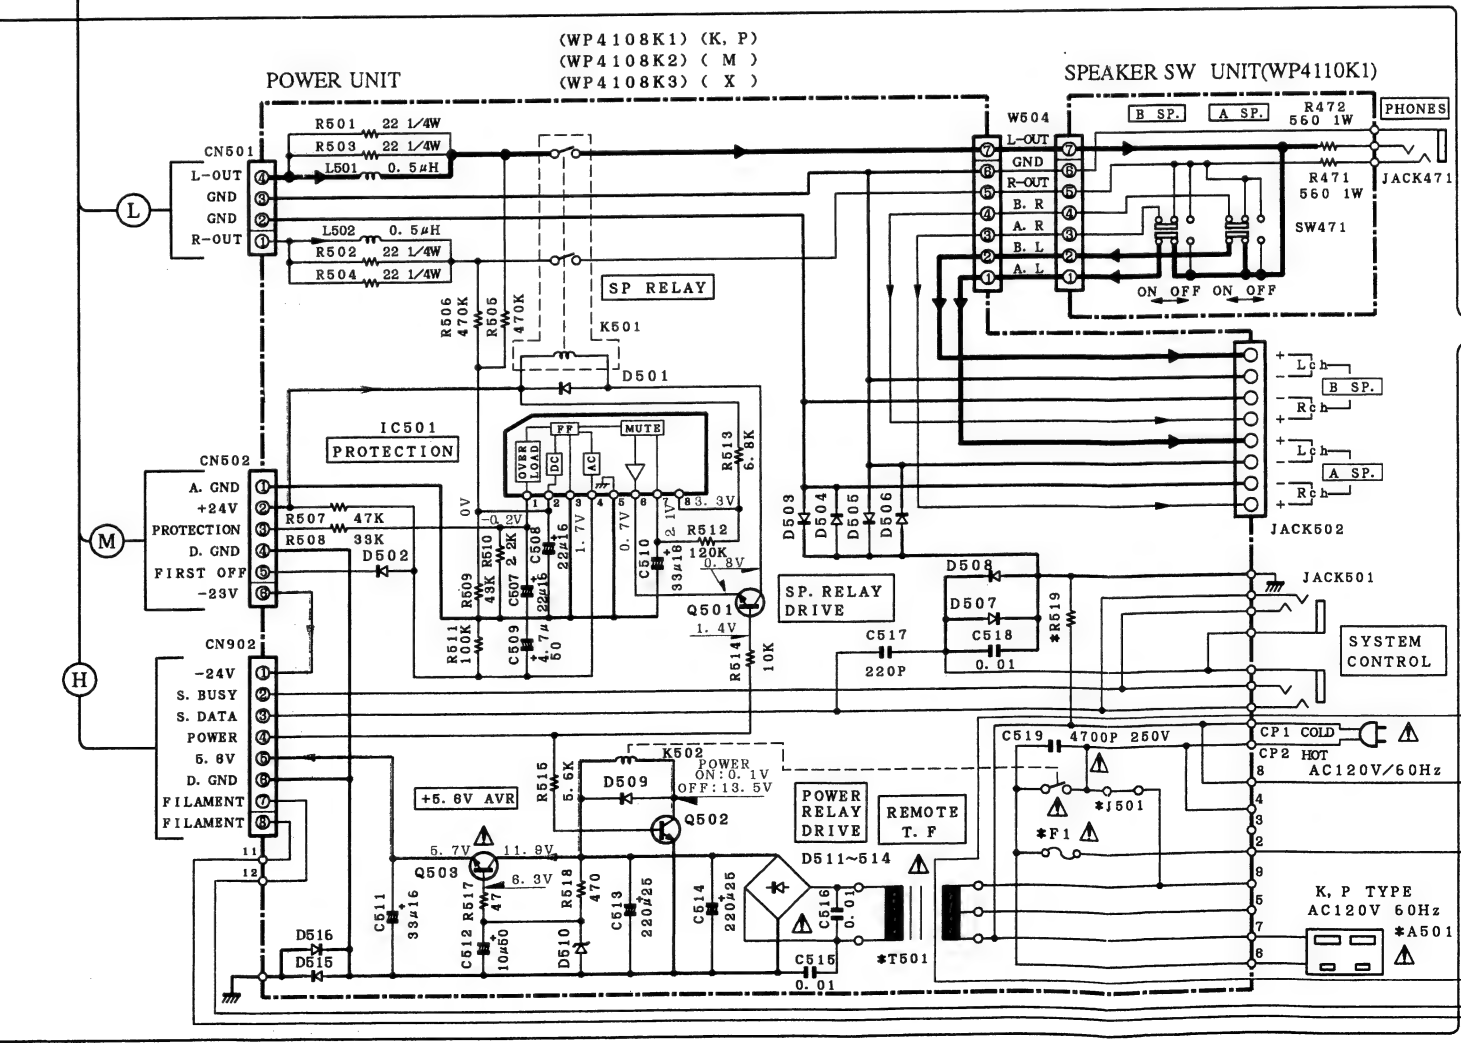

DESTINATION	COUNTRY	ABB.	F1	F2	R519	J
U. S. A.	K	125V	NO	2. 2M	Y	
CANADA	P	5A				
GENERAL MARKET	M	250V	T2. 5A	250V	NO	N
AUSTRALIA	X	250V	T2. 5A	NO	NO	Y

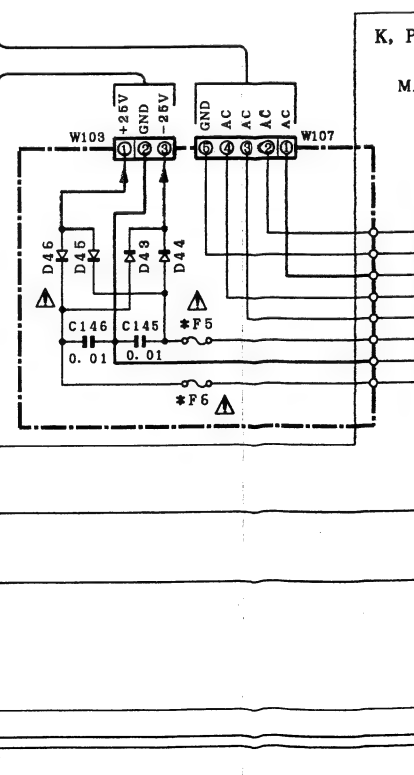

AMP SUB UNIT (WP4105K2)

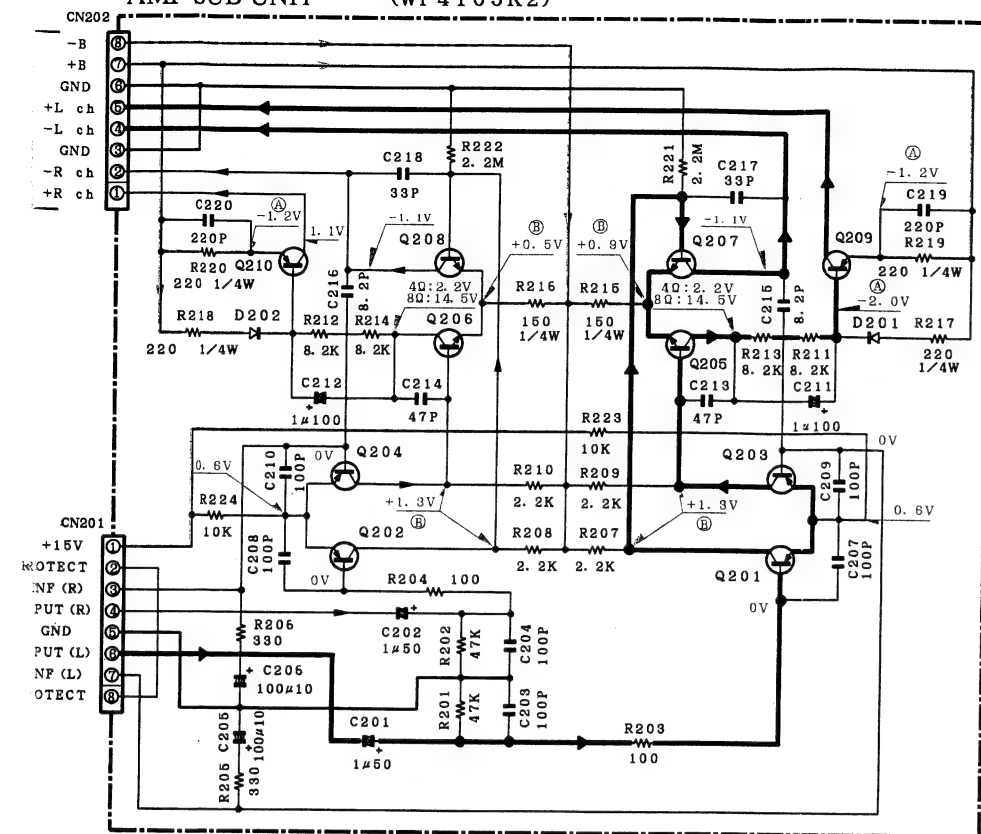

SUB AMP


Q201~204 : 2SA992F
 Q205~208 : 2SC1845F
 Q209, 210 : 2SA992F
 D201, 202 : 1SS133

POWER

IC501 : 4PC1237HA
 Q501, 502 : 2SC2316 (Y)
 Q503 : 2SD882
 D501, 502 : 1N4002A
 509, 511~514 : 1SS133
 515, 516 : MTZJ6.2B
 D510 : MTZJ6.2B


POWER UNIT

(WP4108K1) (K, P)
 (WP4108K2) (M)
 (WP4108K3) (X)

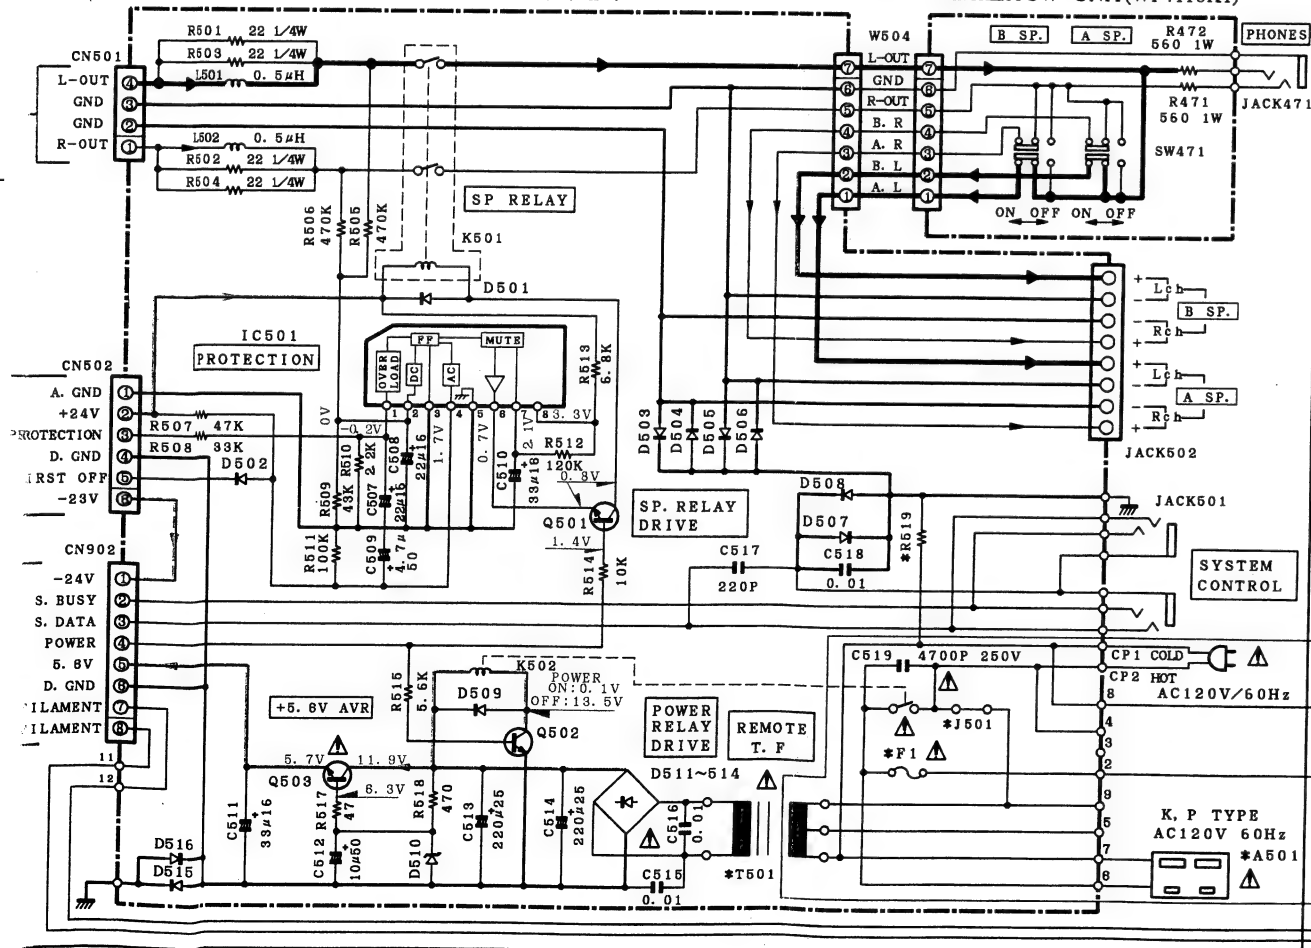


SPEAKER SW UNIT (WP4110K1)

M TYPE

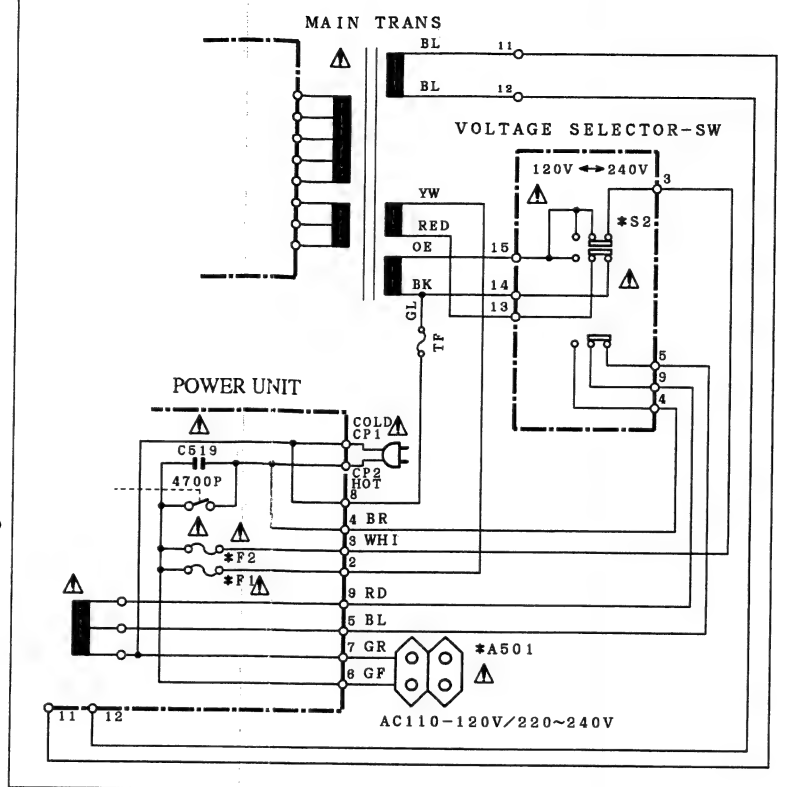

DESTINATION	COUNTRY	ABB.	F1	F2	R519	J501	A501	S2	T1	F5.6
U. S. A.	U. S. A.	K	125V	NO	2.2M	YES	YES	NO	L07-0778-08	0.5A/125V
CANADA	CANADA	P	5A	NO	2.2M	YES	YES	NO	L07-0778-08	0.5A/125V
GENERAL MARKET	GENERAL MARKET	M	250V	NO	2.2M	YES	YES	NO	L07-0790-08	0.5A/250V
AUSTRALIA	AUSTRALIA	X	250V	NO	2.2M	YES	NO	NO	L07-0789-08	0.5A/250V

K, P, X TYPE

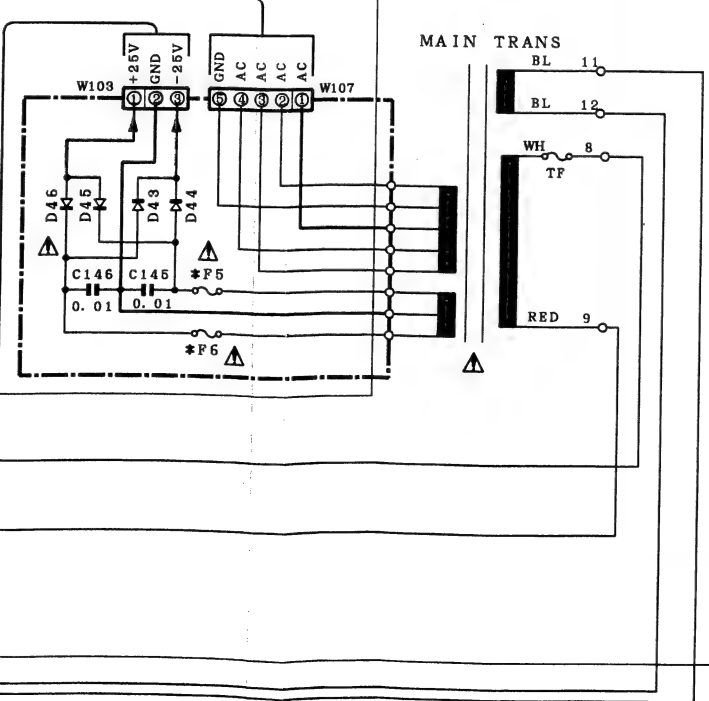


DC voltages are as measured with a high impedance voltmeter during reception of the FM broadcast signal (with a signal strength of 60 dB at the ANT terminal). Values may vary slightly due to variations between individual instruments or/and units. Values in parentheses are as measured during reception of the AM broadcast signal (with a signal strength of 60 dB at the ANT terminal).

Les tensions c.c. doivent être mesurées avec un voltmètre à haute impédance pendant la réception d'un signal de programme FM (avec une force de signal de 60 dB à la borne ANT). Les valeurs peuvent différer légèrement du fait des variations inhérentes aux appareils et aux instruments de mesure individuels.


Les valeurs entre parenthèses doivent être mesurées pendant la réception d'un signal de programme AM avec une force de signal de 60 dB à la borne ANT).

Die angegebenen Gleichspannungswerte wurden mit einem hochohmigen Spannungsmesser bei Empfang eines UKW-Signals (mit einer Feldstärke von 60 dB am Antennenanschluß) gemessen. Dabei schwanken die Meßwerte aufgrund von Unterschieden zwischen einzelnen Instrumenten oder Geräten u. U. geringfügig. Die eingeklammerten Gleichspannungswerte wurden bei Empfang eines MW-Signals (mit einer Feldstärke von 60 dB am Antennenanschluß) gemessen.

 
CAUTION: For continued safety, replace safety critical components only with manufacturer's recommended parts (refer to parts list). Indicates safety critical components. To reduce the risk of electric shock, leakage-current or resistance measurements shall be carried out (exposed parts are acceptably insulated from the supply circuit) before the appliance is returned to the customer.

2SC2235Y
2SC2878B

 
2SD882

2SA933S
2SC1740S
2SC1740S-R

 
2SC4137

2SB1470
2SD2222


2SB1274

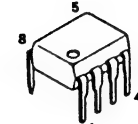


NJM4558DD

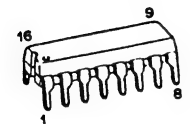



LM7001

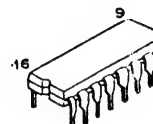


AN7470

 

UPC1237HA

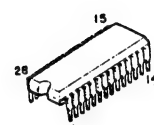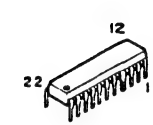TC9162N
TC9164N

LA1265

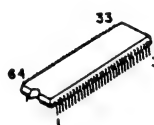


CXP5016-531S

— SIGNAL LINE
 — GND LINE
 — +B LINE
 - - - -B LINE

KR-A4050/5050 KR-A4050/5050

EXPLODED VIEW (UNIT)

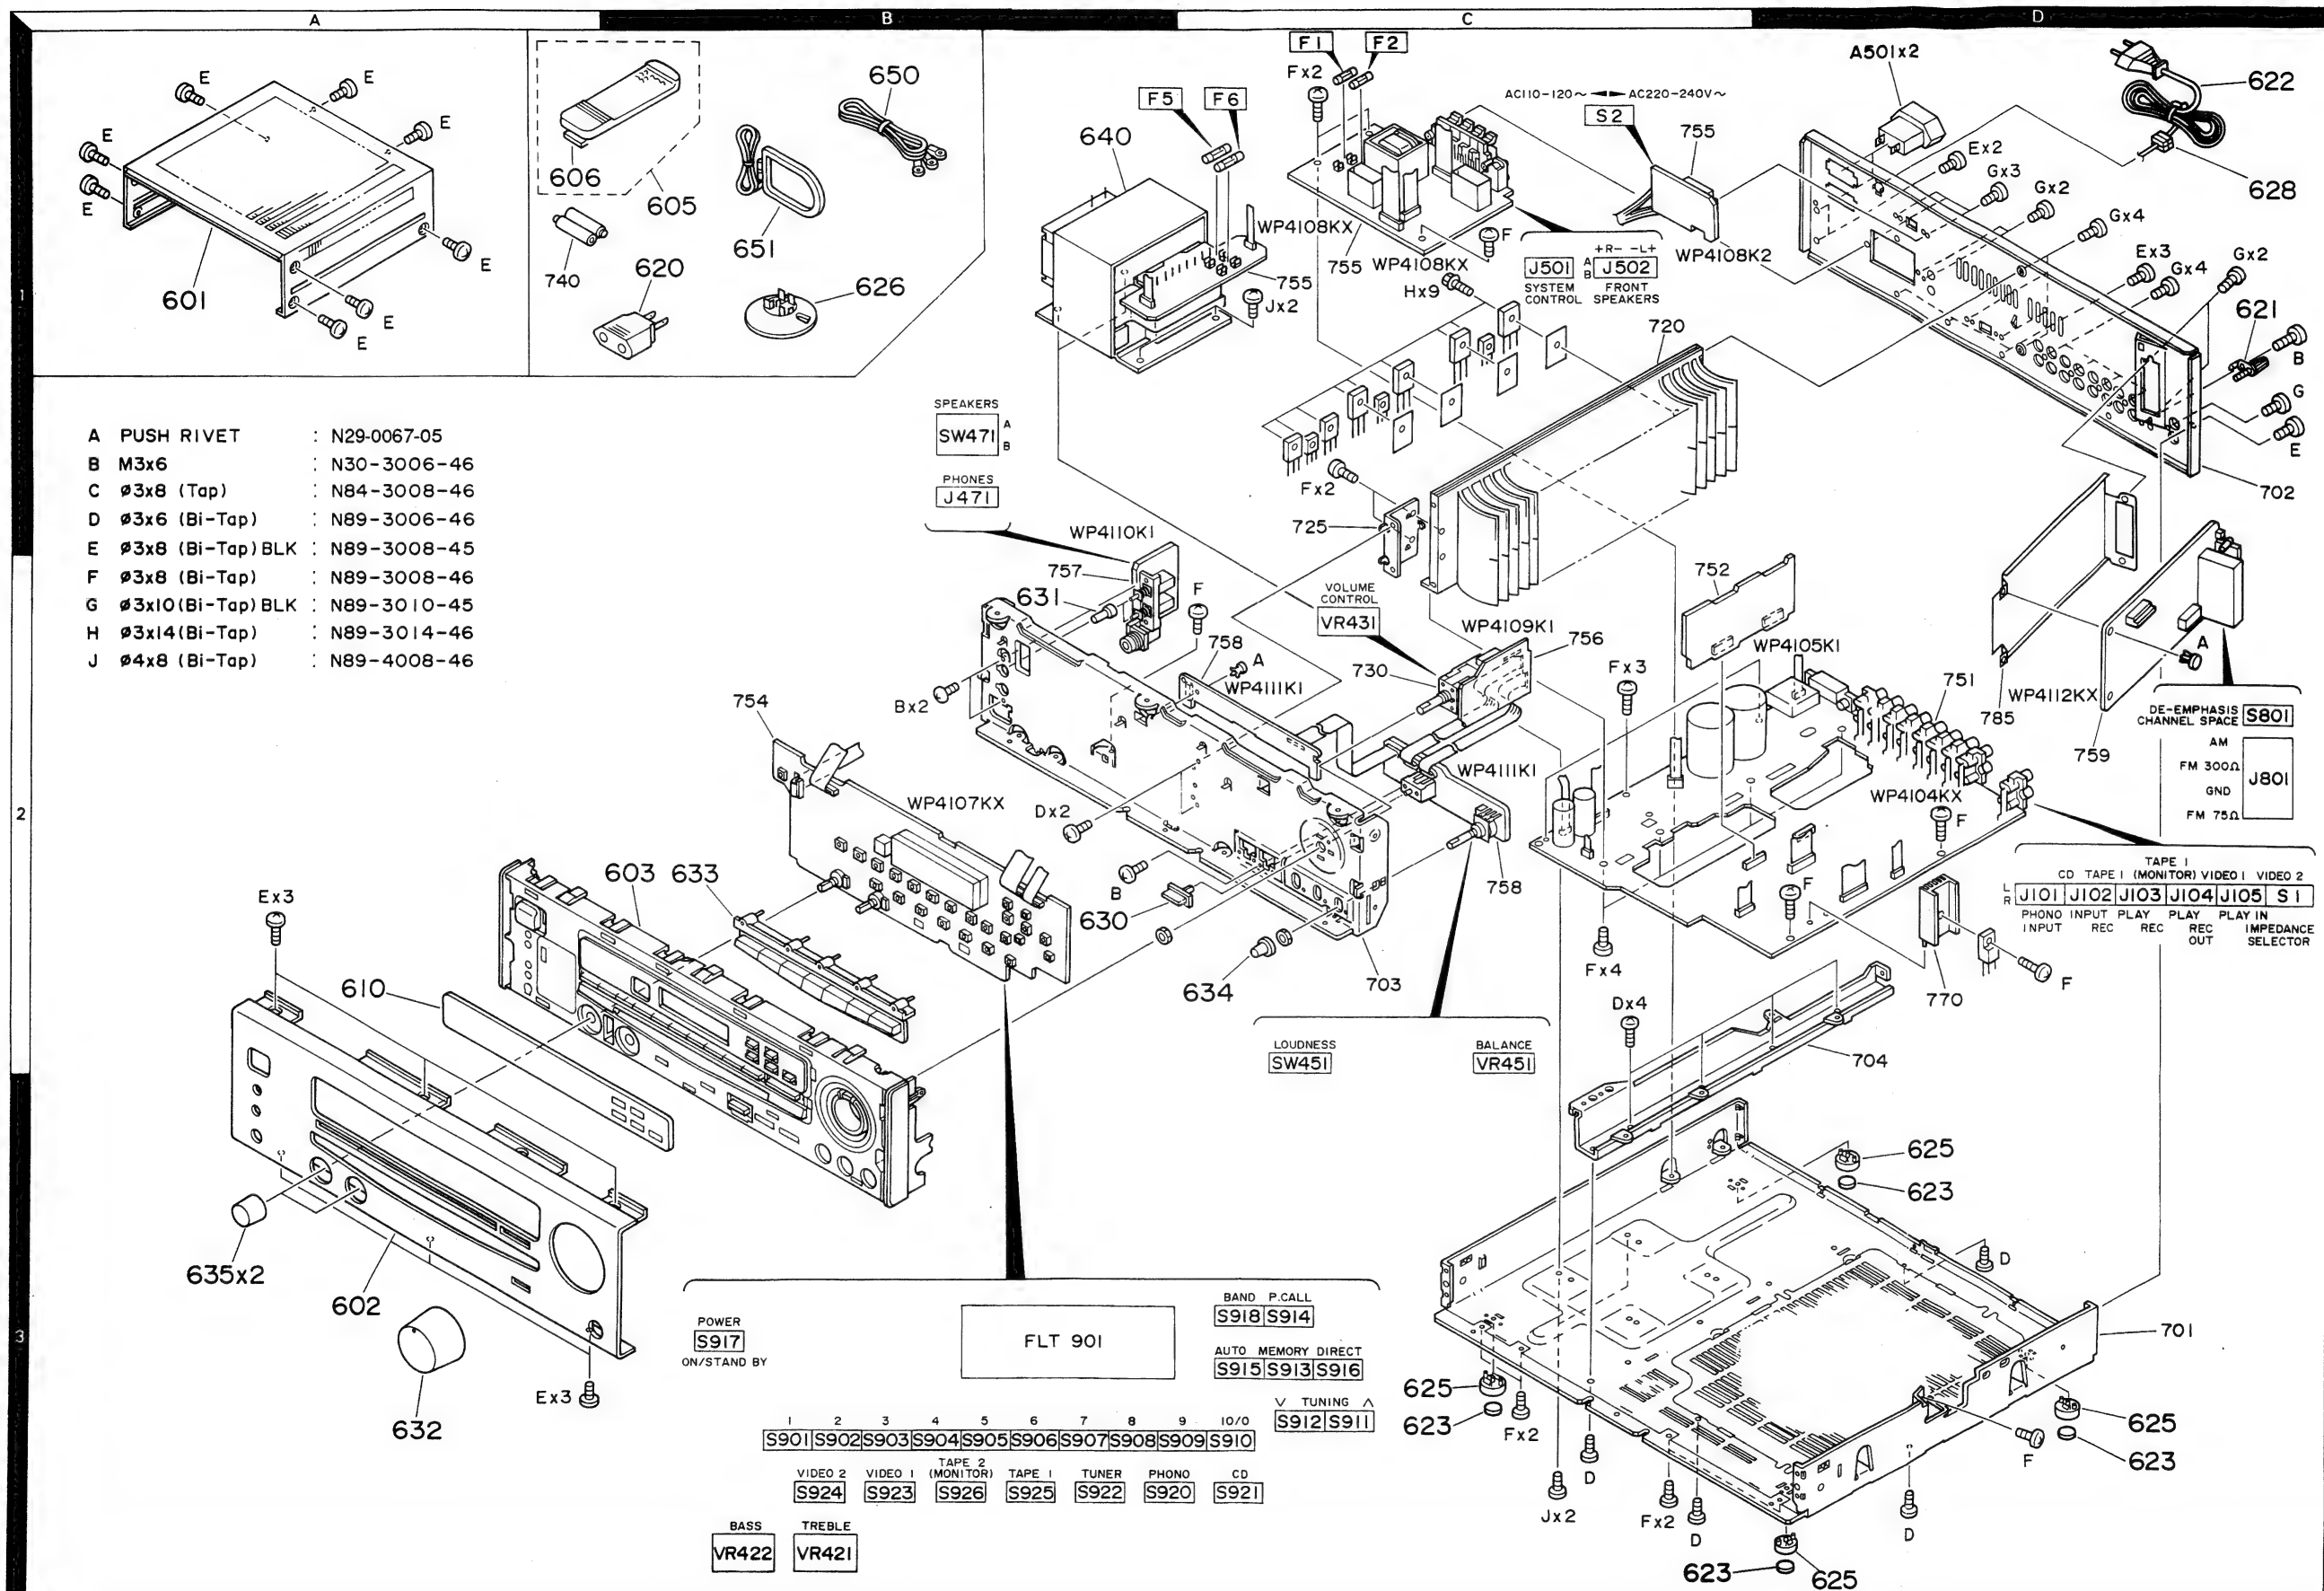

KR-A5050 K, P

KR-A4050/5050

PARTS LIST

KR-A4050/5050

PARTS LIST

UNIT LIST

UNIT NAME	K	P	M	X
MAIN UNIT	WP4104K2		WP4106K2	WP4107K7
SUB AMP UNIT	WP4105K2			
POWER UNIT	WP4108K1		WP4108K2	WP4108K3
FRONT UNIT	WP4107K2		WP4107K5	WP4107K6
VOLUME UNIT	WP4109K2			
SPEAKER SWITCH UNIT	WP4110K1			
BALANCE UNIT	WP4111K2			
TUNER UNIT	WP4112K2		WP4112K5	WP4112K6

NO.3

Ref. No. 参照番号	Address 位置	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕
R55 ~ 58		R014GB2E220J	FL-PR00F RD 22	J 1/4W
R63 , 64		R90-0187-05	MULTI-COMP 0.22X2	K 5W
R65 , 66		R014GB2E332J	FL-PR00F RD 3.3K	J 1/4W
R71 , 72		RN14BK3A100J	RN 10	J 1W
R115		R014GB2E010J	FL-PR00F RD 1.0	J 1/4W
R116, 117		RN14BK3D680J	RN 68	J 2W
R128		R014GB2E010J	FL-PR00F RD 1.0	J 1/4W
R129		R014GB2E101J	FL-PR00F RD 10	J 1/4W
R130		R014GB2E101J	FL-PR00F RD 100	J 1/4W
R141		R014GB2E101J	FL-PR00F RD 100	J 1/4W
R153 , 154		R014GB2E470J	FL-PR00F RD 47	J 1/4W
VR1 , 2		R12-1066-05	TRIMMING POT. IDLE ADJ 1K	
S1		S62-0032-08	SLIDE SWITCH IMPEDANCE SEL	
D1 ~ 6		1S5131	DIODE	
D9 ~ 11		1S5131	DIODE	
D14 , 15		1S5131	DIODE	
D17 ~ 21		1S5131	DIODE	
D22 , 23		1N4002	DIODE	
D26		1S5131	DIODE	
D31		R013ES(B2)	ZENER DIODE	
D32		MT236.2B	ZENER DIODE	
D33		MT236.2B	ZENER DIODE	
D34		MT24.7V	ZENER DIODE	
D35		R05-1ES(B2)	ZENER DIODE	
D36 , 37		MT1228(B2)	ZENER DIODE	
D42		DSF620	DIODE	
IC1		TC9164N	IC(16CH BITLATERAL SELECTOR SW)	
IC2		TC9162N	IC(ANALOG SWITCH ARRAY)	
IC3		NJM456500	IC(OP AMP X2)	
IC4		NJM455800	IC(OP AMP X2)	
IC5		BA6209N	IC(MOTOR DRIVER)	
Q1 ~ 4		2SC2878B	TRANSISTOR	
Q5 , 6		2SC4137	TRANSISTOR	
Q7 , 8		2SD2222	TRANSISTOR	
Q9 , 10		2SC1845F	TRANSISTOR	
Q11 , 12		DTA1143S	DIODE	
Q13 , 14		2SC2235Y	TRANSISTOR	
Q15		2SD2058Y	TRANSISTOR	
Q16		2SC1740S	TRANSISTOR	
Q17 , 18		2SA633S	TRANSISTOR	
Q19 , 20		2SC2235Y	TRANSISTOR	
Q21		2SC1845F	TRANSISTOR	
Q22 , 23		25A992F	TRANSISTOR	
Q24		2SB1274	TRANSISTOR	
Q25				
SUB AMP UNIT (WP4105K1)				
C201 , 202		CE04KW1H010K	ELECTRO 1.0UF	50WV
C203 , 204		CE04CH1H101J	CERAMIC 100PF	J
C205 , 206		CE04KW1A101M	ELECTRO 100UF	10WV
C207 ~ 210		CE04CH1H101J	CERAMIC 100PF	J
C211 , 212		CE04KW2A010M	ELECTRO 1.0UF	100WV
C213 , 214		CC45SL1H470J	CERAMIC 47PF	J

L:Scandinavia K:USA P:Canada
Y:Y(P:Far East, Hawaii) T:England E:Europe
X:AMF(E:Europe) A:Australia M:Other Areas
△ indicates safety critical components

NO.1

Ref. No. 参照番号	Address 位置	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕
KR-A5050				
601	1A	A01-3060-08	METALLIC CABINET	
602	3A	A60-0478-08	FRONT PANEL	
603	2B	A22-1667-08	SUB PANEL	
606	1A	A70-0953-08	REMOTE CONTROL ASSY	
	1A	A09-0068-01	BATTERY COVER	
610	2A	B10-1999-08	FRONT GLASS	
		B46-0092-23	WARRANTY CARD	
		B46-0096-33	WARRANTY CARD	
		B46-0121-23	WARRANTY CARD	
		B60-1213-08	INSTRUCTION MANUAL (ENGLISH)	X
		B60-1214-08	INSTRUCTION MANUAL (FRENCH)	P
		B60-1215-08	INSTRUCTION MANUAL (SPA, CHI)	M
620	1B	E03-0115-05	AC PLUG ADAPTER	M
621	1D	E21-0023-08	GND TERMINAL	M
622	1D	E30-0459-05	AC POWER CORD	M
622	1D	E30-0974-05	AC POWER CORD	KP
622	1D	E30-1341-05	AC POWER CORD	X
650	1D	E03-0055-05	AC OUTLET	M
623	3C, 3D	G13-0267-08	CUSHION	KPX
		H50-0685-08	ITEM CATIONBOX	M
		H50-0686-08	ITEM CATIONBOX	M
		H10-5574-08	POLYSTYRENE FOAMED FIXTURE	
		H25-0078-04	PROTECTION BAG	
625	3C, 3D	I02-1046-08	FOOT	
626	1B	I19-2815-04	ANTENNA HOLDER	
628	1D	J42-0198-08	AC CORD BUSHING	
630	2B	K27-2105-08	KN08 LOUDNESS	
631	2B	K27-2106-08	KN08 SPEAKERS	
632	3A	K27-2107-08	KN08 VOLUME	
633	2B	K27-2109-08	KN08 FUNCTION	
634	2C	K29-4444-08	KN08 BALANCE	
635	3A	K29-4445-08	KN08 BASS, TREBLE	
640	1B	L07-0777-08	TRANSFORMER	P
640	1B	L07-0786-08	TRANSFORMER	M
640	1B	L07-0787-08	TRANSFORMER	X
640	1B	L07-0788-08	TRANSFORMER	K
A	2C, 2D	N29-0067-05	PUSH RIVET	
B	2B	N30-3006-46	PAN HEAD MACHIN SCREW	
C	1D	N84-3008-46	TAPTITE SCREW	
D	3C, 3D	N89-3006-46	BINDING HEAD TAPTITE SCREW	
E	1A, 1D	N89-3008-45	BINDING HEAD TAPTITE SCREW	
F	3C, 3D	N89-3008-46	BINDING HEAD TAPTITE SCREW	
G	1D	N89-3010-45	BINDING HEAD TAPTITE SCREW	
H	1C	N89-3014-46	BINDING HEAD TAPTITE SCREW	
J	1C, 3C	N89-4008-46	BINDING HEAD TAPTITE SCREW	
650	1B	T90-0176-05	T TYPE ANTENNA	
651	1B	T90-0184-08	LOOP ANTENNA	

L:Scandinavia K:USA P:Canada
Y:Y(P:Far East, Hawaii) T:England E:Europe
X:AMF(E:Europe) A:Australia M:Other Areas
△ indicates safety critical components

NO.2

Ref. No. 参照番号	Address 位置	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕
MAIN UNIT (WP4104K1)				
C1 , 2		CE04KW1H100M	ELECTRO 100UF	50WV
C3 , 4		CE04CH1H221J	CERAMIC 220PF	J
C5 , 6		CE04CH1H101M	ELECTRO 100UF	10WV
C7 , 8		CE04CH1H102J	CERAMIC 100PF	J
C9 , 10		C092FM1H123J	MYLAR 0.012UF	J
C11 , 12		C092FM1H332J	MYLAR 3300PF	J
C13 , 14		CE04KW1H4R7M	ELECTRO 4.7UF	50WV
C17 , 18		CE04CH1H221J	CERAMIC 220PF	J
C21 , 22		CE04CH1H221J	CERAMIC 220PF	J
C31 ~ 36		CE04KW1H010M	ELECTRO 1.0UF	50WV
C37 , 38		CE04SSL1H100J	CERAMIC 10PF	J
C39 , 40		CE04SSL1H101J	CERAMIC 100PF	J
C41 , 42		CE04KW1H4R7M	ELECTRO 4.7UF	50WV
C43 ~ 46		CE04SSL1H103K	CERAMIC 0.010UF	K
C47 , 48		C092FM1H393J	MYLAR 0.039UF	J
C101 , 102		CE04SSL1H103K	CERAMIC 0.010UF	K
C103		CE04KW1C470M	ELECTRO 47UF	16WV
C104		CE04KW1H100M	ELECTRO 100UF	50WV
C105		CE04CH1H102J	CERAMIC 1000PF	J
C106 , 107		CE04SSL1H331K	CERAMIC 330PF	K
C108		CE04KW1H010M	ELECTRO 1.0UF	50WV
C109		C092FM1H104J	MYLAR 0.10UF	J
C110		CE04KW1C220M	ELECTRO 22UF	16WV
C111		CE04CH1H152J	CERAMIC 1500PF	J
C112		CE04KW1C470M	ELECTRO 47UF	16WV
C113		CE04KW1H104J	CERAMIC 0.10UF	J
C114		CE04KW1H202M	ELECTRO 22UF	50WV
C115		CE04KW1H102J	CERAMIC 1000PF	J
C116		CE04KW1A101M	ELECTRO 100UF	10WV
C117		CE04KW1C470M	ELECTRO 47UF	16WV
C118		CE04SEF1H104J	CERAMIC 0.10UF	J
C119 , 120		CE04KW2A2R2M	ELECTRO 2.2UF	100WV
C121		CE04KW2A100M	ELECTRO 100UF	50WV
C122		CE04KW2A100M	ELECTRO 100UF	100WV
C123 , 124		C90-1870-05	ELECTRO 7500UF	71WV
C125 , 126		CE04SEF1H103Z	CERAMIC 0.010UF	Z
C127		CE04KW1J470M	ELECTRO 47UF	63WV
C128		CE04KW1V471M	ELECTRO 470UF	35WV
C131		CE04SSL1H103K	CERAMIC 0.010UF	K
C138 ~ 141		CE04SSL1H103K	CERAMIC 0.010UF	K
C142		CE04KW2A101M	ELECTRO 100UF	100WV
C143		CE04KW2A470M	ELECTRO 47UF	100WV
C199		CE04KW1H220M	ELECTRO 22UF	50WV
JACK101		E70-0035-08	TERMINAL BOARD PHONO	
JACK102		E70-0036-08	TERMINAL BOARD CD, TAPE1 REC	
JACK103		E70-0037-08	TERMINAL BOARD TAPE1 PLA, TAPE2	
JACK105		E70-0038-08	TERMINAL BOARD VIDEO 1, 2 PLAY	
JACK151		E70-0038-08	TERMINAL BOARD SP EAKERS	
		J13-0084-08	FUSE HOLDER	
L151		L40-4781-17	SMALL FIXED INDUCTOR 0.5UH	
F	2C, 2D	N89-3008-46	BINDING HEAD TAPTITE SCREW	

L:Scandinavia K:USA P:Canada
Y:Y(P:Far East, Hawaii) T:England E:Europe
X:AMF(E:Europe) A:Australia M:Other Areas
△ indicates safety critical components

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.4

Ref. No. 参照番号	Address 位置	New Parts 新部品	Parts No. 部品番号	Description 部品名 / 規格	Destination 仕向	Remarks 備考
C215, 216 C217, 218 C219, 220		*	CC45CH1H8R2J CC45CH1H330J CC45CH1H221J	CERAMIC 8.2PF J CERAMIC 33PF J CERAMIC 220PF J		
R215, 216 R217-220			RD14GB2E151J RD14GB2E221J	FL-PROOF RD 150 J 1/4W FL-PROOF RD 220 J 1/4W		
D201, 202 Q201-204 Q205-208 Q209, 210			1SS133 2SA992F 2SC1845F 2SA992F	DIODE TRANSISTOR TRANSISTOR TRANSISTOR		
FRONT UNIT (WP4107KX)						
D901			B30-0413-05	LED (LTL4213(RED))		
C401, 402 C403, 404 C405, 406 C407-410 C411-414			CE04KW1H010M CQ92FM1H473J CC45CH1H221J CC45SL1H470J CE04KW1H010M	ELECTRO 1.0UF 50WV MYLAR 0.047UF J CERAMIC 220PF J CERAMIC 47PF J ELECTRO 1.0UF 50WV		
C415-418 C419, 420 C421, 422 C423, 424 C902			CE04KW1H100M CQ92FM1H472J CK45F1H103M CE04KW1C470M CE04KW1HR47M	ELECTRO 10UF 50WV MYLAR 4700PF J CERAMIC 0.010UF M ELECTRO 47UF 16WV ELECTRO 0.47UF 50WV		
C903 C904 C905 C906, 907 C908			CK45F1H103M CE04KW1A101M KHR-PX0001N3 CK45F1H103M CC45CH1H221J	CERAMIC 0.010UF M ELECTRO 100UF 10WV BACKUP 0.1UF 5.5WV CERAMIC 0.010UF M CERAMIC 220PF J	KP	
C909 C910 C920, 921 C922 C923		*	CE04KW1H4R7M CK45FF1H104Z CE04KW1H100M CE04KW1A101M CC45SL1H473K	ELECTRO 4.7UF 50WV CERAMIC 0.10UF Z ELECTRO 10UF 50WV ELECTRO 100UF 10WV CERAMIC 0.047UF K		
L901 X901			L40-1001-17 L78-0209-05	SMALL FIXED INDUCTOR 10UH RESONATOR 4.19MHz		
RA901 RA902 VR421, 422			R90-0483-05 R90-0809-05 R06-3078-08	MULTI-COMP 100KX13 J 1/6W MULTI-COMP 10KX4 J 1/6W POTENTIOMETER BASS, TREBLE 10KB		
SW901-918 SW920-926			S70-0008-08 S70-0008-08	TACT SWITCH KEY BOARD TACT SWITCH KEY BOARD		
D902-904 D905 D908 D909-918 D920			1SS133 MT28.2B 1SS133 1SS133 RD4.7B5(B2)	DIODE ZENER DIODE ZENER DIODE DIODE ZENER DIODE	X	
D921 D924 PLT901 IC401 IC901			1SS133 1SS133 CF1036C NJM45650D CXP5016-531S	DIODE DIODE FLUORESCENT INDICATOR TUBE IC(OP AMP X2) IC(4BIT MICROPROCESSOR)	KP	
Q901 Q902 Q903			2SA933 2SC1740S DTA143TS	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	M	

L:Scandinavia

K:USA

P:Canada

Y:FX(Far East, Hawaii)

T:England

E:Europe

Y:AAFES(Europe)

X:Australia

M:Other Areas

△ indicates safety critical components

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.5

Ref. No. 参照番号	Address 位置	New Parts 新部品	Parts No. 部品番号	Description 部品名 / 規格	Destination 仕向	Remarks 備考
A901			W02-1111-08	FRONT END UNIT		
POWER UNIT (WP4108KX)						
C145, 146 C507 C508 C509 C510, 511		*	CK45F2H103Z CE04KW1C220M CE04KW1C220M CE04KW1H4R7M CE04KW1C330M	CERAMIC 0.010UF Z ELECTRO 22UF 16WV ELECTRO 22UF 16WV ELECTRO 4.7UF 50WV ELECTRO 33UF 16WV		
C512 C513, 514 C515, 516 C517 C518			CE04KW1H100M CE04KW1E221M CK45F1H103M CC45CH1H221J CK45F1H103M	ELECTRO 10UF 50WV ELECTRO 220UF 25WV CERAMIC 0.010UF M CERAMIC 220PF J CERAMIC 0.010UF M		
C519			KHR-QM4726M6	CERAMIC 4700PF AC250V		
A501 JACK501 JACK502	1D		E03-0144-08 E11-0188-05 E70-0004-08	AC OUTLET PHONE JACK SYNCHRO TERMINAL BOARD SPEAKERS	KP	
F1 F1 F1 .2 F5 .6 F5 .6			F04-5022-05 F05-2525-05 F05-2525-05 F05-5016-05 F50-0024-08	FUSE UL 5A(125V) FUSE T2.5A(250V) FUSE T2.5A(250V) FUSE 0.5A/250V FUSE UL 0.5A/125V	KP X M MX KP	
L501, 502 T501 T501 T501			J13-0084-08 KHR-0C0701K1 L07-0778-08 L07-0789-08 L07-0790-08	FUSE HOLDER COIL 0.5UH TRANS FORMER TRANS FORMER TRANS FORMER	KP X M	
R501-504 RS19		*	RD14GB2E220J RD14BB2H225J	FL-PROOF RD 22 J 1/4W RD 2.2M J 1/2W	KP	
K501 K502 S2			S51-2092-05 S76-0032-08 S31-3010-05	MAGNETIC RELAY POWER MAGNETIC RELAY SPEAKER SLIDE SWITCH VOLTAGE SELECT	M	
D43-46 D501, 502 D503-508 D509 D510		*	1N4002A 1N4002A 1SS133 1N4002A MT2J6.2B	DIODE DIODE DIODE DIODE ZENER DIODE		
D511-514 D515, 516 IC501 Q501, 502 Q503		*	1N4002A 1SS133 UPC1237HA 2SC2316(Y) 2SD882	DIODE DIODE IC(POWER AMP) TRANSISTOR TRANSISTOR		
VOLUME UNIT (WP4109K1)						
C431 C432		*	CE04BW1C220M CC45SL1H104J	NP-ELEC 22UF 16WV CERAMIC 0.10UF J		
VR431		*	R29-5082-08	POTENTIOMETER VOLUME 100KB X3		
SPEAKER SWITCH UNIT (WP4110K1)						
JACK471			E11-0223-08	PHONE JACK HEAD PHONE		
R471, 472		*	RN14BK3A561J	RN 560 J 1W		
SW471			S62-0033-08	PUSH SWITCH SPEAKERS		

L:Scandinavia

K:USA

P:Canada

Y:FX(Far East, Hawaii)

T:England

E:Europe

Y:AAFES(Europe)

X:Australia

M:Other Areas

△ indicates safety critical components

PARTS LIST

KR-A4050/5050

KR-A5050 K, P

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.6

Ref. No. 参照番号	Address 位置	New Parts	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
BALANCE UNIT (WP4111K1)						
C451, 452			CQ92FM1H273J	MYLAR 0.027UF J		
VR451			R10-S071-08	POTENTIOMETER BALANCE		
SW451			S40-2376-05	PUSH SWITCH LOUNDNESS		
TUNER UNIT (WP4112KX)						
C801			CE04KW1H010M	ELECTRO 1.0UF 50WV		
C802			CE04KW1C470M	ELECTRO 47UF 16WV		
C803			CQ92FM1H273J	MYLAR 0.027UF J		
C804			CE04KW1H010M	ELECTRO 1.0UF 50WV		
C805			CE04KW1C470M	ELECTRO 47UF 16WV		
C806, 807			CK45F1H103M	CERAMIC 0.010UF M		
C809			CK45F1H223Z	CERAMIC 0.022UF Z		
C816			CK45F1H223Z	CERAMIC 0.022UF Z		
C817			CE04KW1H2R2M	ELECTRO 2.2UF 50WV		
C818			CE04KW1H4R7M	ELECTRO 4.7UF 50WV		
C819			CK45F1H223Z	CERAMIC 0.022UF Z		
C820			CE04KW1H3R3M	ELECTRO 3.3UF 50WV		
C821			CK45F1H103M	CERAMIC 0.010UF M		
C822			CK45F1H223Z	CERAMIC 0.022UF Z		
C823			CE04KW1H100M	ELECTRO 10UF 50WV		
C824			CK45F1H223Z	CERAMIC 0.022UF Z		
C825			CQ92FM1H153J	MYLAR 0.015UF J		
C826			CE04KW1H100M	ELECTRO 10UF 50WV		
C827			CE04KW1HR47M	ELECTRO 0.47UF 50WV		
C828-830			CK45F1H103M	CERAMIC 0.010UF M		
C831			CC45CH1H101J	CERAMIC 100PF J		
C832			CK45F1H103M	CERAMIC 0.010UF M		
C833			CE04KW1C470M	ELECTRO 47UF 16WV		
C839			CQ09PS1H471J	POLYSTY 470PF J		
C840			CE04KW1H2R2M	ELECTRO 2.2UF 50WV		
C841			CE04KW1H3R3M	ELECTRO 3.3UF 50WV		
C842			CE04KW1HR47M	ELECTRO 0.47UF 50WV		
C843			CQ92FM1H473J	MYLAR 0.047UF J		
C844			CK45B1H471K	CERAMIC 470PF K		
C845			CK45F1H103M	CERAMIC 0.010UF M		
C846, 847			CC45SL1H151K	CERAMIC 150PF K		
C849			CE04KW1C221M	ELECTRO 220UF 16WV		
C850, 851			CE04KW1H010M	ELECTRO 1.0UF 50WV		
C852			CQ92FM1H222J	MYLAR 2200PF J		
C853			CQ92FM1H562J	MYLAR 5600PF J		
C854, 855			CQ92FM1H153J	MYLAR 0.015UF J		
C854, 855			CQ92FM1H223J	MYLAR 0.022UF J		
C856			CK45F1H103M	CERAMIC 0.010UF M		
C857			CE04KW1C470M	ELECTRO 47UF 16WV		
C858, 859			CK45CH1H220J	CERAMIC 22PF J		
C860-862			CC45CH1H101J	CERAMIC 100PF J		
C863			CK45F1H103M	CERAMIC 0.010UF M		
C864			CQ92FM1H222J	MYLAR 2200PF J		
C865			CQ92FM1H562J	MYLAR 5600PF J		
C890			CC45CH1H220J	CERAMIC 22PF J		
JACK801			E70-0005-08	TERMINAL BOARD ANTENNA		

L:Scandinavia

K:USA

P:Canada

Y:PX(Far East, Hawaii)

T:England

E:Europe

Y:AFES(Europe)

X:Australia

M:Other Areas

⚠ indicates safety critical components.

KR-A5050 K, P

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.7

Ref. No. 参照番号	Address 位置	New Parts	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
CF801, 802			L72-0531-05	CERAMIC FILTER 10.7MHz		
CF803			L72-0096-05	CERAMIC FILTER		
L801			L40-1091-17	SMALL FIXED INDUCTOR 1UH		
L802			L39-0189-05	COIL		
L804			L30-0488-05	IFT-AM		
L806			L30-0439-05	IFT-FM		
X801			L77-1122-05	CRYSTAL RESONATOR 7.2MHz		
A	2D		N29-0067-05	PUSH RIVET		
R806			RD14GB2E101J	FL-PROOF RD 100 J 1/4W		
R810			RD14GB2E101J	FL-PROOF RD 100 J 1/4W		
R836			RD14GB2E101J	FL-PROOF RD 100 J 1/4W		
R851			RD14GB2E20J	FL-PROOF RD 82 J 1/4W		
R869			RD14GB2E221J	FL-PROOF RD 220 J 1/4W		
VR801			R12-3166-08	TRIM POT. 33KB FM TUNE LEVEL		
VR802			R12-1053-05	TRIM POT. 4.7KB VCO		
VR804			R12-3071-05	TRIM POT. 10KB AM TUNE LEVEL		
SW801			S62-0012-08	SLIDE SWITCH ch SEPALATION	M	
D801, 802			1SS133	DIODE		
D810			RD5.1ES(B2)	ZENER DIODE		
D811, 812			1SS133	DIODE		
IC801			LA1265	IC(FM/AM TUNER)		
IC802			AN7470	IC(FM MPX)		
IC803			LM7001	IC(PLL FREQUENCY SYNTHESIZER)		
Q801		*	2SC31940	TRANSISTOR		
Q803			2SC1740S	TRANSISTOR		
Q804			2SC1845F	TRANSISTOR		
Q808, 809			2SA933S	TRANSISTOR		
Q811, 812			2SC1740S	TRANSISTOR	M	
TU801			W02-1042-05	FM TUNER PACK	KPMX	

L:Scandinavia

K:USA

P:Canada

Y:PX(Far East, Hawaii)

T:England

E:Europe

Y:AFES(Europe)

X:Australia

M:Other Areas

⚠ indicates safety critical components.


KR-A4050/5050

PARTS LIST

KR-A4050/5050

CONTROLS & INDICATORS (E, T type)

Refer to page 20 for a description of the RDS feature.

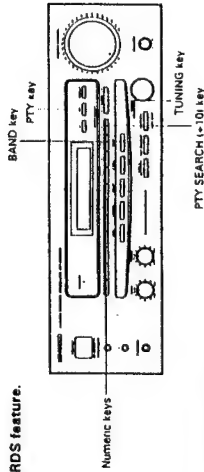

■ Searching for a desired program type

<PTY (Program Type Identification) Search>
By specifying the type of program (genre) you want to listen to, the tuner automatically searches for a station which is currently broadcasting a program of the specified type.

1 Set the broadcast band to FM.



2 Select the search mode.

 


When an RDS broadcast is received, the program type is shown in the display. If no PTY data is available or if the station is not an RDS station, "NONE" is displayed.

• Perform step 3 within 5 seconds after the program type appears on the display.

3 Select the desired program type. Select while "PTY" is lit.

Use the numeric keys to directly select one of the ten program types numbered 1 to 10.



Press the TUNING (P CALL) key to sequentially select from the fifteen available program types. Release the key when the desired program type is displayed.



 
4 Start the search.

Press while "PTY" is lit.

No sound is heard while "PTY" is blinking. If a program of the desired type cannot be found, "NO PROG" is displayed; then after several seconds the display returns to the original display.

If a program type name display changes temporarily to the frequency display and then to the station name display.

When searching for a Rock Music broadcast.



When a station is received.

Goes off.

To change to a different program type:

• Repeat steps 2 - 4

RDS (Radio Data System)

RDS is a system which transmits useful information (digital data) for FM broadcasts together with the broadcast signal. Tuners and receivers designed for RDS reception can extract the information from the broadcast signal for use with various functions such as automatic display of the station name.

This unit is equipped with the following functions utilizing RDS data:

(In some areas, some functions cannot be activated and some function names differ as follows.)

PTY (Program Type Identification) Search:

The tuner automatically searches for a station that is currently broadcasting a specified program type (genre).

AF (Alternative Frequencies) Search:

When a weak signal is received, the tuner automatically searches for alternative frequencies broadcasting the same program and selects the best signal.

PS (Program Service Name) Display: (refer to the table below.)

When an RDS broadcast is received, the station name is automatically displayed.

CT (Clock Time) Display: (refer to the table below.)

Some RDS stations transmit clock data along with the broadcast signal. When the CT display is selected with the "DISPLAY" key, the hour and minute are displayed.

DISPLAY key

Pressing the DISPLAY key changes the display contents. The display returns to the original display after about 5 seconds.



Display mode priority ranking

When an RDS broadcast is received:



 
1 PS (Program Service Name) Display:

When an RDS broadcast is received, the station name is automatically displayed. If no PS data is transmitted, the display changes to the 2 Frequency display.



2 Frequency Display:

The frequency of the current station is displayed.




3 CT (Clock Time) Display:

When an RDS broadcast is received, the hour and minute are shown on the display. If no clock data is available, the clock time is not displayed and the program service name is displayed.



Refer to page 20 for a description of the RDS feature.

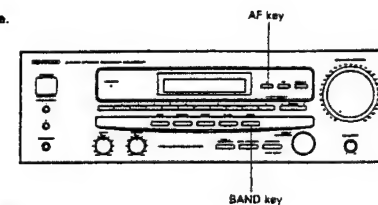


■ Searching for the best frequency

<AF (Alternative Frequencies) Search>

If more than one FM station is broadcasting the same program, this function will automatically select the station offering the strongest signal or the least interference. (The AF feature will not function if the **RDS** indicator is not lit.)

 1 Set the broadcast band to FM.



2 Receive an RDS broadcast station.

- Tune in the desired station and verify that the **RDS** indicator lights.
- After a short time, the "AF" indicator lights.
- After verifying that the "AF" indicator is lit, proceed to the next step.

Check that the indicator is lit.

 


3 Select the search mode.


Press the AF key



Display while the tuner is searching.



When a station is received.

 

After several seconds



- Scanning (station searching) starts.
- No sound is heard while searching is being carried out.
- When a station is found, the "AF" indicator goes out.
- After several seconds, the station name is displayed.


AF (Alternative Frequencies) Feature

- With some stations, it may take some time for the "AF" indicator to light.
- To obtain the best reception conditions, we recommend waiting a few minutes after the "AF" indicator lights before pressing the **AF** key.
- It is useful to use the number keys to preset (memorize) stations received with this AF function. (See page 18.)
- The selected frequency may vary depending on the signal conditions.
- There are some RDS stations which do not support this AF function. For such stations, the "AF" indicator does not light.


KR-A4050/5050

DISASSEMBLY FOR REPAIR

1. Remove the 6 screws ①, and the pull out the front panel out while pressing the 3 claws ② to remove the front panel.
2. The sub-panel can be removed when the 3 knobs ③, are removed and the undo the 2 claws ④ are released.
3. The headphone PCB, the MAIN VOL PCB and the balance PCB can be removed when the 4 screws ⑤, the 5 knobs ⑥ and the 4 nuts ⑦ are removed. To remove the balance PCB, however, it must be raised in the upward direction and then pulled to the backward direction.

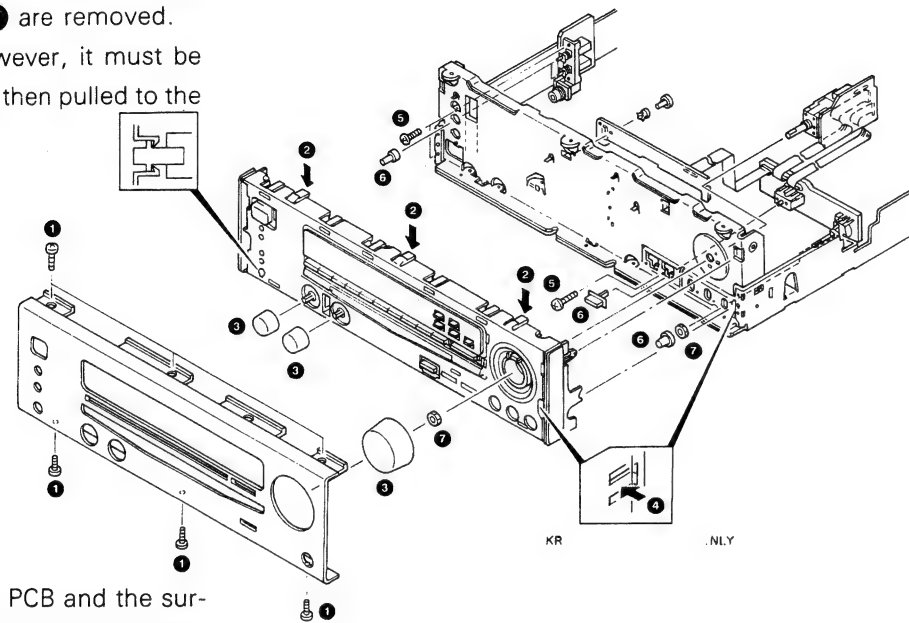


1. The tuner PCB, the power supply PCB and the surround PCB can be removed when the 8 screws ① are removed.

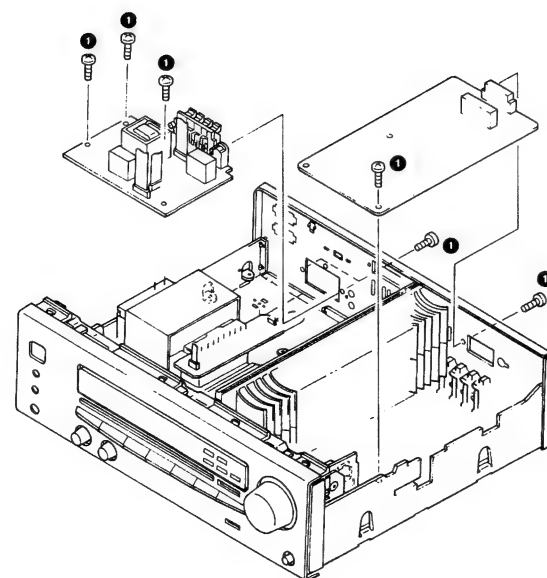


KR-A4050/5050

DISASSEMBLY FOR REPAIR

1. Repair can be carried out with the MAIN (AUDIO) PCB and the power supply PCB mounted on the rear panel when the 18 screws ① are removed.

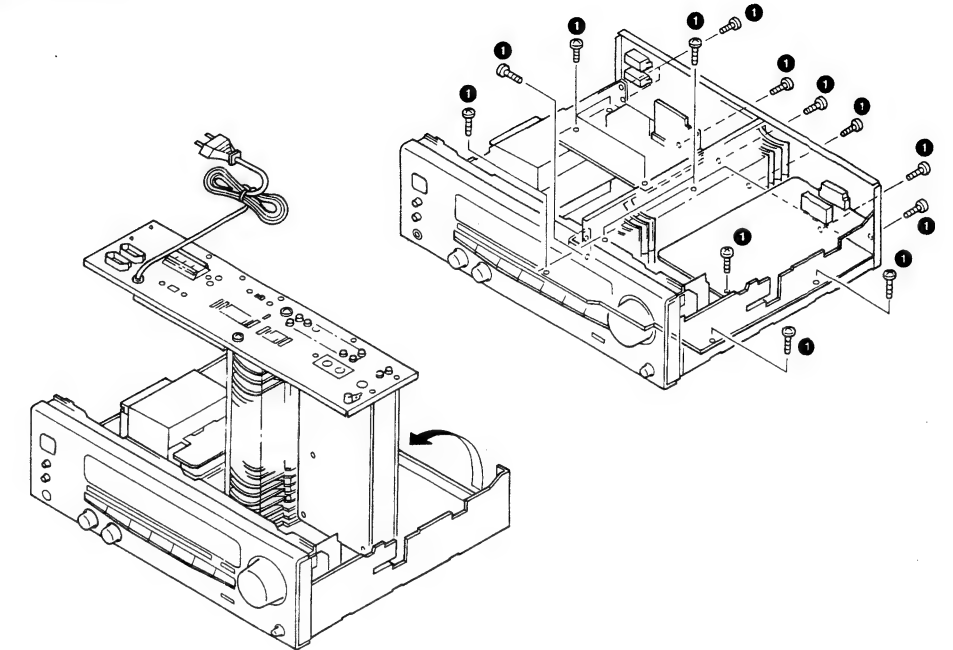


1. Cut the 4 places with a pair of nippers. ①, and remove the bottom panel from chassis.
2. Move the unit holder from the current position to the open mounting position.
3. Rotate the lid, which was cut off, by 180° degrees ②.
4. Insert the lids in the 2 places of the chassis ③, and mount them with the 3 screws ④.

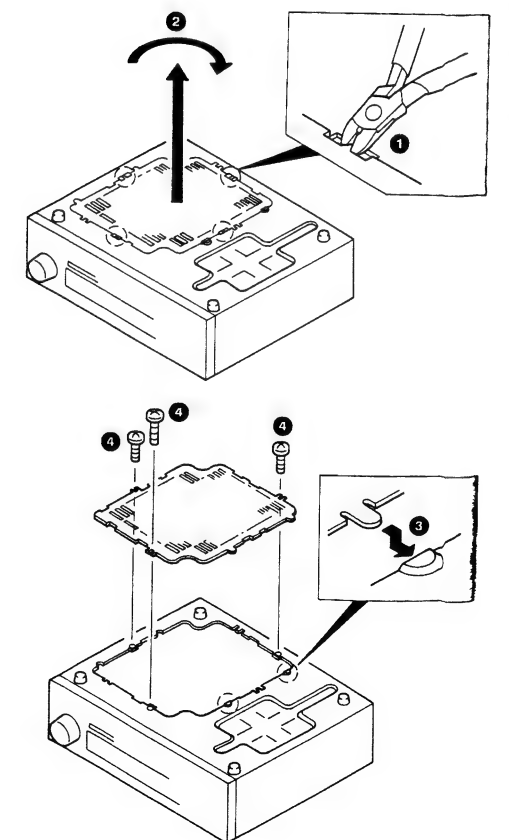

KR-A4050/5050 KR-A4050/5050

BLOCK DIAGRAM

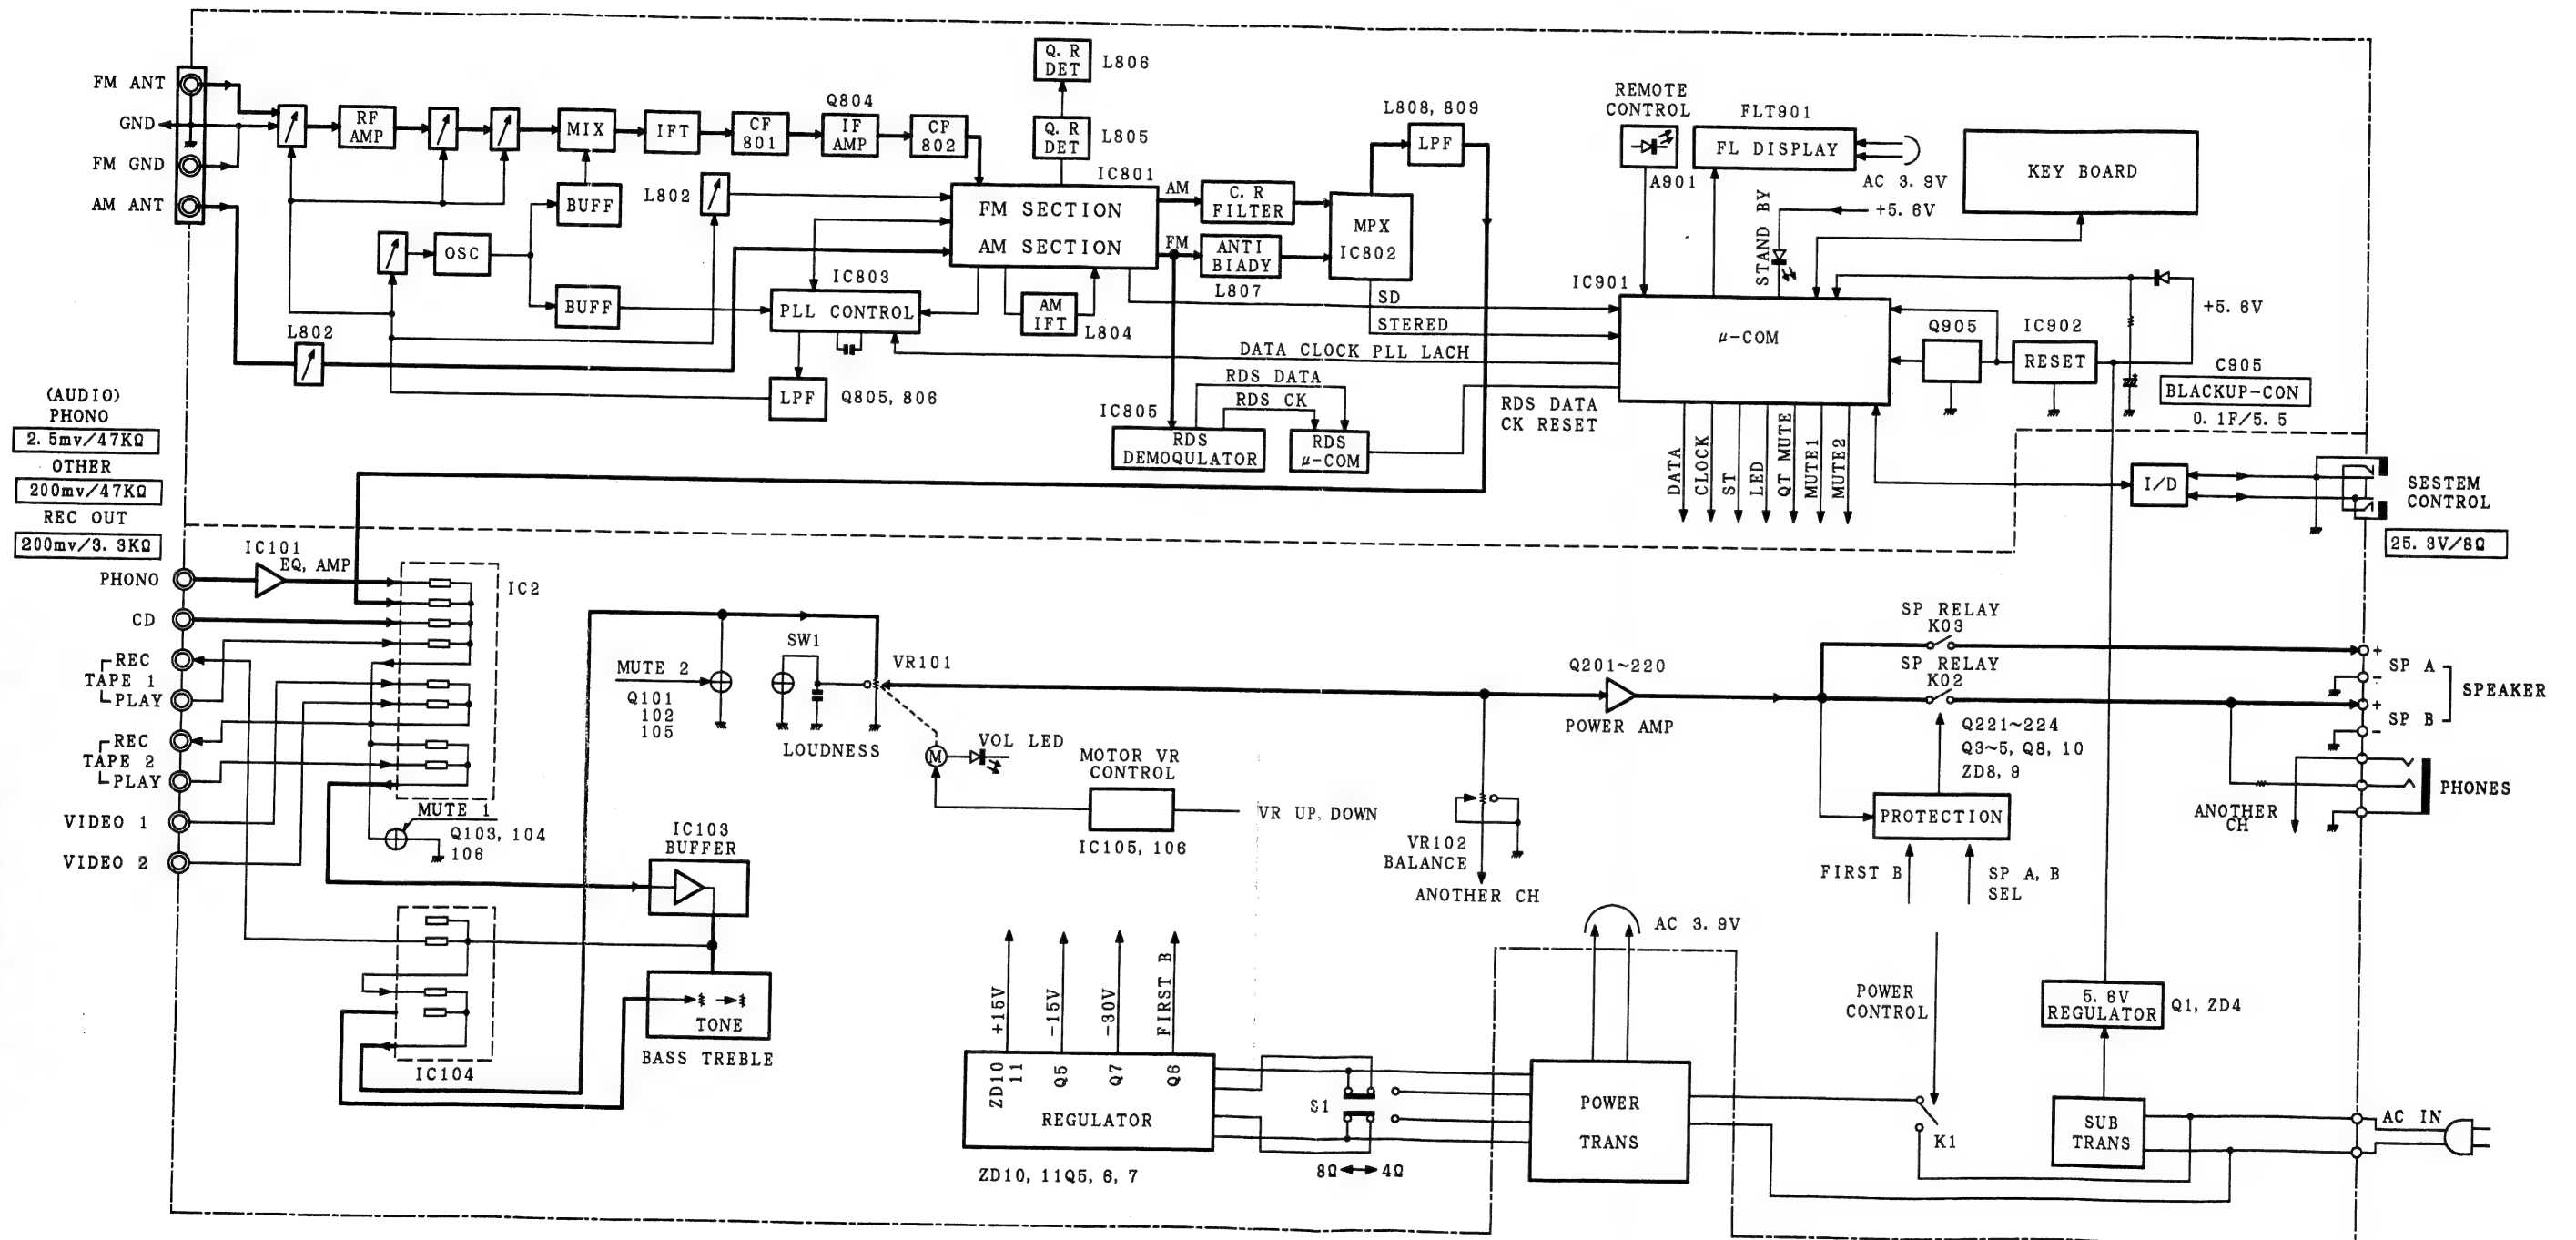

KR-A4050/5050 E

KR-A4050/5050

CIRCUIT DESCRIPTION

1. Function description

Features

AMP

Seven-position selector: (CD, TUNER, PHONO, TAPE1, TAPE2, VIDEO1, VIDEO2)

Six audio input terminals: (CD, PHONO, TAPE1, TAPE2, VIDEO1, VIDEO2)

Three audio output terminals: (TAPE1, TAPE2)

LINE STRAIGHT

Speaker A/B changeover.

TAPE 2 monitor.

TUNER

20ch random preset..

Tuning control by IF count.

Direct selection.

RDS function (E, T-TYPE only)

2. Conditions according to the destination and model

AMP

MODEL	DIODE SW		Surround function
	5	4	
KR-V7050	0	0	PRO-LOGIC, 3-STEREO, DSP, DSP-LOGIC
KR-V6050 (except E, T)	0	1	PRO-LOGIC, 3-STEREO
KR-A4050/A5050/V6050 (E, T only)	1	X	No surround

X: Don't Care

TUNER

Destination	DIODE SW				Band	Receiving Remarks	Channel Space	IF	RF	Note
	3	2	1	0						
K1	0	0	0	0	FM	87.5 MHz ~ 108.0 MHz	100 kHz	+ 10.7 MHz	50 kHz	
					AM	530 kHz ~ 1610 kHz	10 kHz	+ 450 kHz	10 kHz	
K2	0	0	1	0	FM	87.5 MHz ~ 108.0 MHz	100 kHz	+ 10.7 MHz	50 kHz	
					AM	530 kHz ~ 1700 kHz	10 kHz	+ 450 kHz	10 kHz	
E	0	1	0	0	FM	87.5 MHz ~ 108.0 MHz	50 kHz	+ 10.7 MHz	50 kHz	
					AM	531 kHz ~ 1602 kHz	9 kHz	+ 450 kHz	9 kHz	
E	1	1	0	0	FM	87.5 MHz ~ 108.0 MHz	50 kHz	+ 10.7 MHz	50 kHz	With RDS
					AM	531 kHz ~ 1602 kHz	9 kHz	+ 450 kHz	9 kHz	

[DIODE MATRIX: <X14> DIODE SW NO.]

μ-com	PIN NO.	55	56	57	58	59	60
PIN NO.	PIN NAME	KR5	KR4	KR3	KR2	KR1	KR0
61	KS7	Channel space	AM 1610/1700	RDS No/Yes	DSP. DOL/ DOL ONLY	SURROUND Yes/No	(X)
DIODE SW NO.		2	1	3	4	5	0
<X13> DIODE Ref. No.		D923		D922		D921	—

KR-A4050/5050 E

KR-A4050/5050

CIRCUIT DESCRIPTION

- Diode SW 0 →
- Diode SW 1 → AM band range/K TYPE only
0: AM NARROW
1: AM WIDE
- Diode SW 2 → Channel base (Products bound for M: Changeover with switch)
0: FM 100 kHz/step, AM 10 kHz/step
1: FM 50 kHz/step, AM 9 kHz/step
- Diode SW 3 → With/without RDS/E TYPE only
0: Without RDS
1: With RDS
- Diode SW 4 → Surround mode
0: DOLBY function & DSP function
1: DOLBY function only
- Diode SW 5 → With/without surround
0: With surround
1: Without surround

3. Initial state

- ① POWER OFF
- ② AMP system
 - Audio selector TUNER
 - Video system selector VIDEO1
 - Speaker A ON
 - Speaker B OFF
 - TAPE2 MONITOR OFF
 - LINE STRAIGHT OFF
- ③ TUNER system
 - Band FM
 - Frequency Lower limit of FM (87,5 MHz)
 - TUNING mode AUTO TUNING (AUTO STEREO)
 - P. CH indication --ch
- ④ Test frequency

	K1 TYPE		K2 TYPE		E TYPE	
01ch	FM	98.00 MHz	FM	98.00 MHz	FM	98.00 MHz
02ch	FM	108.00 MHz	FM	108.00 MHz	FM	108.00 MHz
03ch	AM	630 kHz	AM	630 kHz	AM	630 kHz
04ch	AM	990 kHz	AM	990 kHz	AM	990 kHz
05ch	AM	1440 kHz	AM	1440 kHz	AM	1440 kHz
06ch	AM	1610 kHz	AM	1700 kHz	AM	1602 kHz
07ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
08ch	FM	98.50 MHz	FM	98.50 MHz	FM	98.50 MHz
09ch	AM	530 kHz	AM	530 kHz	AM	531 kHz
10ch	FM	89.10 MHz	FM	89.10 MHz	FM	89.10 MHz
11ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
12ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
13ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
14ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
15ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
16ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
17ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
18ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
19ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz
20ch	FM	87.50 MHz	FM	87.50 MHz	FM	87.50 MHz

(Initial setting)

Insert the AC power cord plug in The electrical outlet while pushing the "POWER" key.

KR-A4050/5050 E

KR-A4050/5050

CIRCUIT DESCRIPTION

4. Test mode

Main unit test mode

1) Setting method

Turn the AC power ON while pushing the "TUNING DOWN" key.

2) Cancellation method

Turn the AC power OFF.

3) Contents

① Start of the main unit test mode

The operation gets in the test mode through a main unit key, when the AC power is turned ON while pushing the "TUNING DOWN" key. Three operations are carried out in this case.

- Automatic power ON
- All fluorescent character display tubes and LED light up
- Initialization of all states except POWER ON/OFF
The "all indications lit up" state is canceled by pushing any key of the main unit. The states changed during the test mode are initialized when the main unit test mode is canceled (AC power OFF).

② Automatic motor VR UP/DOWN (AMP)

The (16-second UP → 16-second DOWN → Stop) operation of the motor VR is carried out when the "TAPE 2" key is operated.

Therefore, "TAPE 2 MONITOR" can not be changed over during the main unit test mode.

③ MUTE signal output (AMP)

No control of selector MUTE (MUTE 1) is carried out.

④ Test mode operation of 0~9, +10 (TUNER)

- a) When the +10 key is not operated, the channels 1 to 9 (keys 1 to 9), as well as the channel 10 (key 0) can be called.
- b) When the key +10 is operated once, the channels 11 to 19 (keys 1 to 9) as well as the channel 20 (key 0), can be called.
- c) When the +10 key is operated once again, the operation returns to the case "a) When the +10 key is not operated".

⑤ Processing of keys available only in the remote controller

- a) Processing related to the AMP: None
- b) Processing related to the TUNER: None

⑥ Cancellation of the main unit test mode

The test mode is canceled, and the operation returns to the initial state when the AC power is turned OFF during the test mode.

KR-A4050/5050

CIRCUIT DESCRIPTION

Timing Chart

① POWER ON

Port number of the μ -Com
POWER (13)

/MUTE1 (53)

/MUTE2 (12)

SEL IC (9, 10, 54)

Electrical VOL IC (9, 10, 46)


SPEAKER RELAY (14~16)

FL DRIVE (1~7, 61~80)

LED DRIVE (18)

Serial communication (41, 42)

PLL IC (9~11)

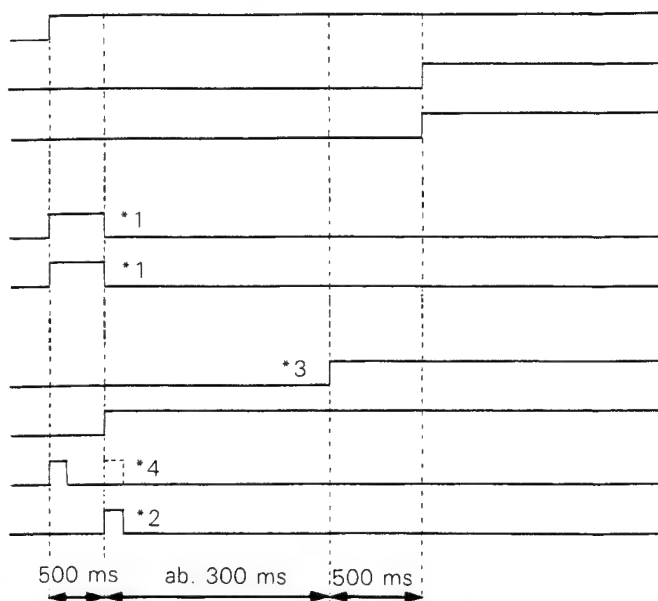

*1. Output of data to the selector IC and the electronic VOL. IC is continued during the time t1 to prevent unstable state of the IC. Moreover, resistors are connected without fail in series with the control lines of the selector IC and the electronic volume IC.

*2. This signal is outputted when the forcible MONO control signal of the TUNER is outputted from the port of the PLL IC (receiver).

*3. Protection detection is started immediately before connecting the SPEAKER RELAY.

*4. The SYSTEM ON code is outputted after the time t1 in the case of single item as well as system component AMP. and RECEIVER.

② POWER OFF

POWER (13)

/MUTE1 (53)

/MUTE2 (12)

SEL IC (9, 10, 54)


Electrical VOL IC
(9, 10, 46)

SPEAKER RELAY
(14~16)

FL DRIVE
(1~7, 61~80)
LED, DRIVE (18)

Serial communication
(41, 42)

PLL IC*2 (9~11)

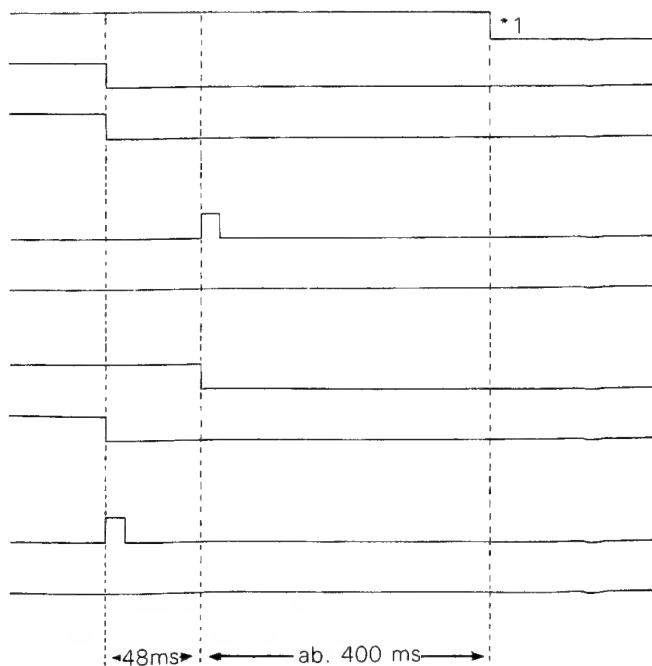


*1. The disconnection of the AC OUTLET is delayed to drop the mechanism of the DECK connected to the AC OUTLET (SWITCHED).

*2. This signal is outputted in the case of receiver.

CIRCUIT DESCRIPTION

③ Selector changeover

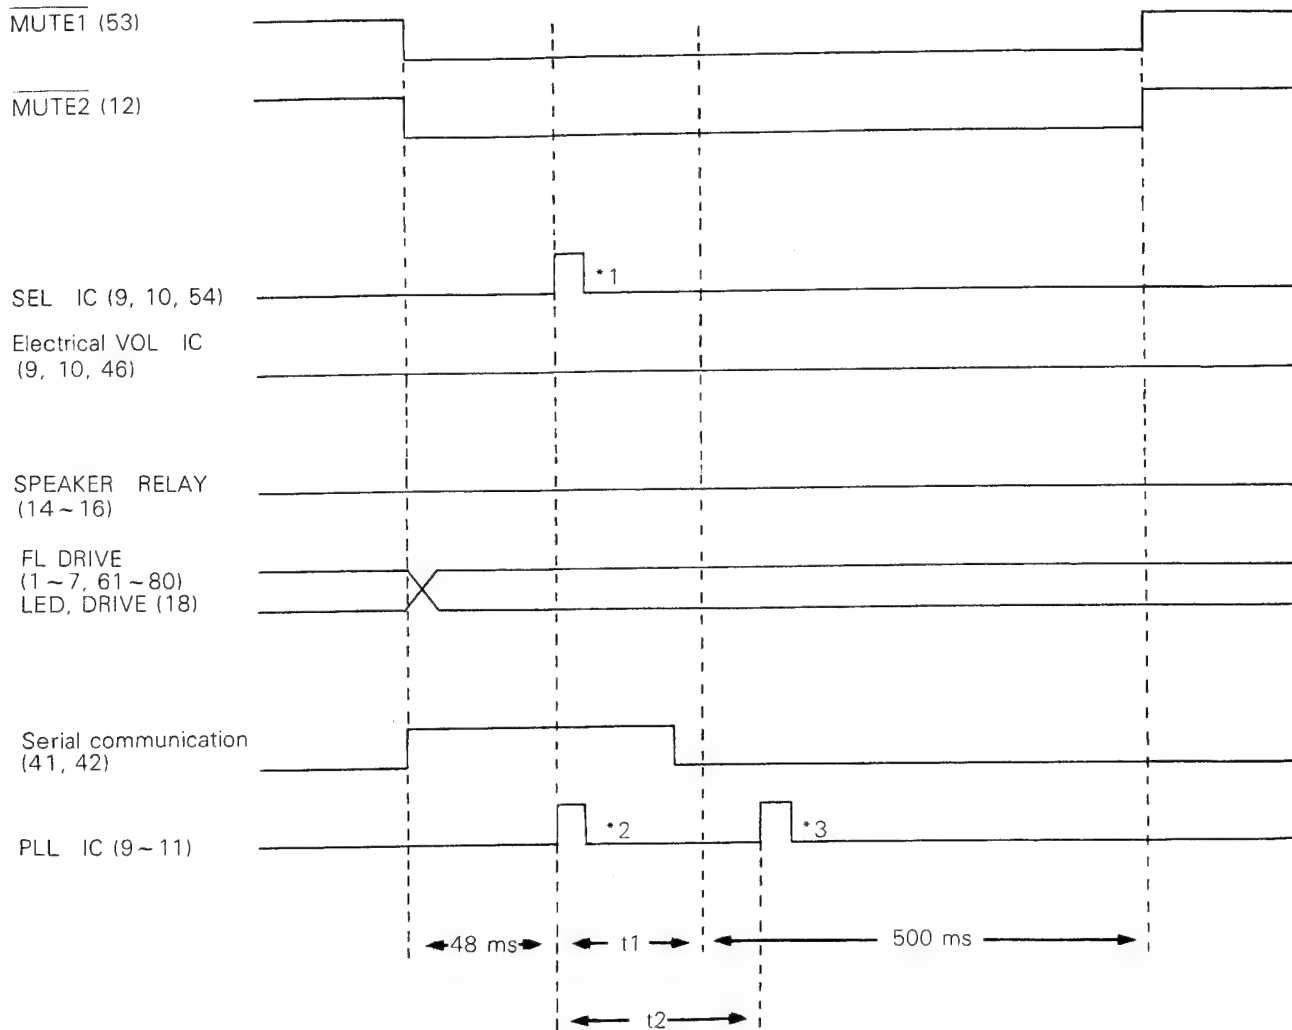

t1: Data transmission time to the selector IC, DSP IC, etc.

t2: 80 ms (+80 ms) IF COUNT time

*1. Pay special attention to the oscillation when switching. In particular, before switching the input selector, make sure of opening the REC OUT SW once.

Since data before changeover are left in the RAM for DELAY when the surround is composed by using DSP IC and the like, data of the current surround mode are sent once again to the DSP IC and the like after clearing the RAM for DELAY.


*2. Receivers without TUNER MUTE set the lower frequency limit of AM in the PLL IC, except when the selector is set to TUNER.

*3. The IF count completion data is set with this timing when IF count is being carried out.

KR-A4050/5050

CIRCUIT DESCRIPTION

④ AF SEARCH

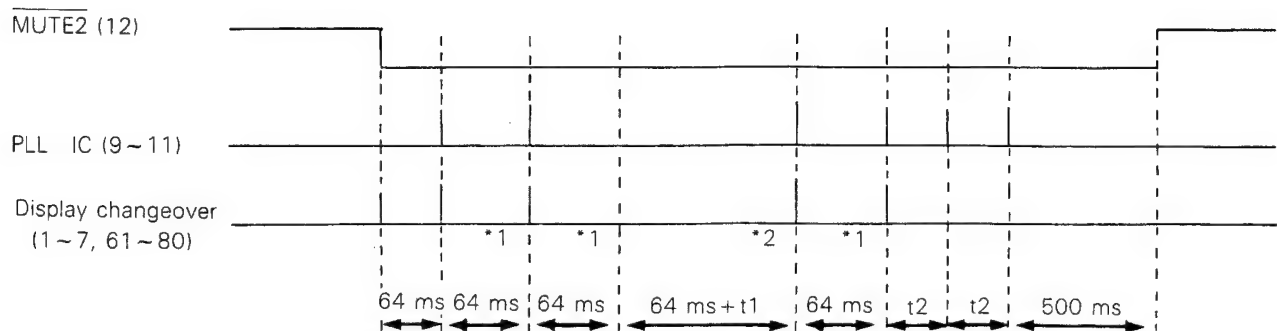


t1: 560 ms (RDS CHECK)

t2: 80 ms (Once or twice/IF count time)

*1: When SD = High (Without station)

*2: When SD = Low (With station)

⑤ PTY SEARCH

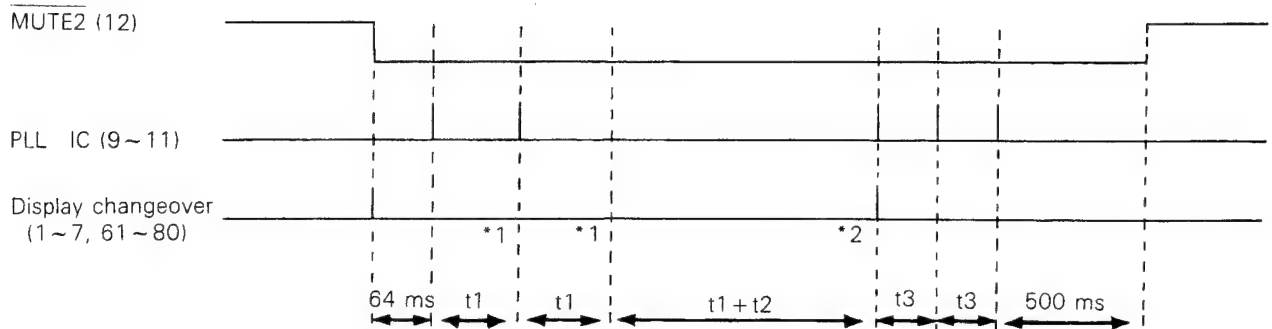

t1: 32 ms (BAND EDGE = 64 ms)

t2: 480 ms + 240 ms (RDS CHECK)

t3: 80 ms (Once or twice/IF count time)

*1: When SD = High (Without station)


*2: When SD = Low (With station)

KR-A4050/5050

CIRCUIT DESCRIPTION

Microprocessor: μ PD78044GF-021 (Front PCB : IC901)

μ Com port layout

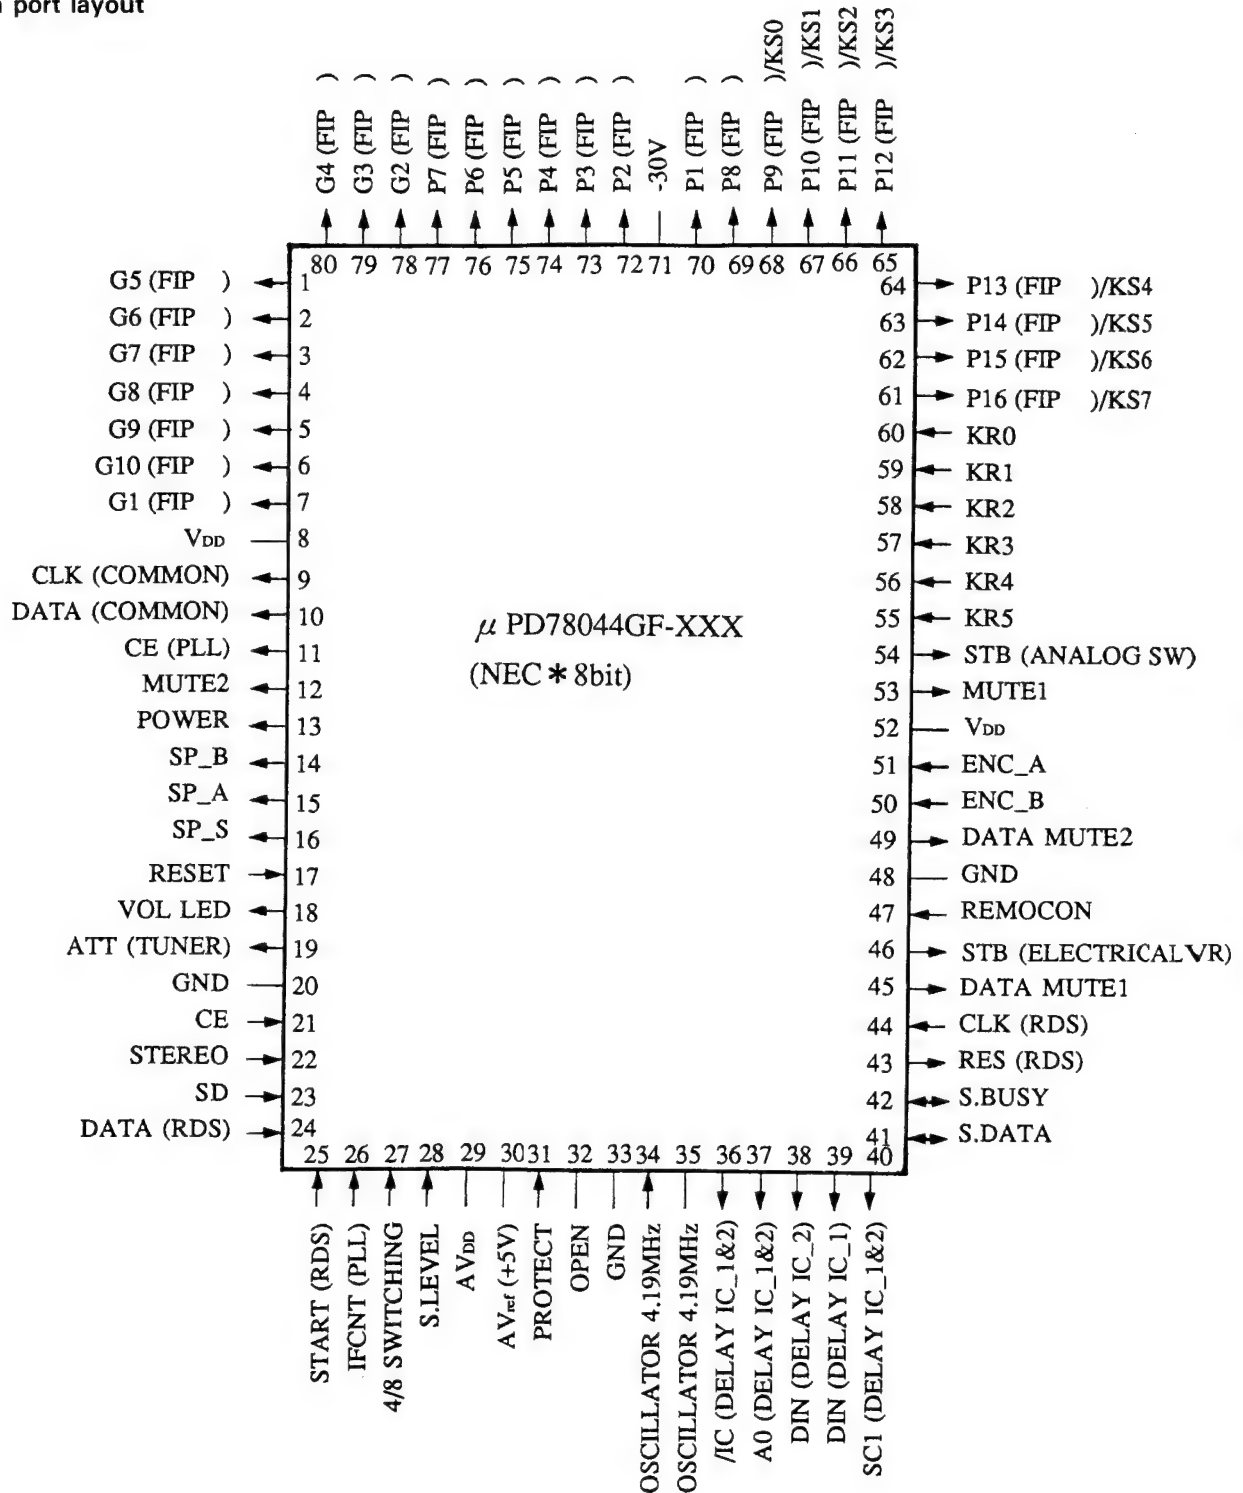


KR-A4050/5050 E

KR-A4050/5050

CIRCUIT DESCRIPTION

Microprocessor periphery block Diagram

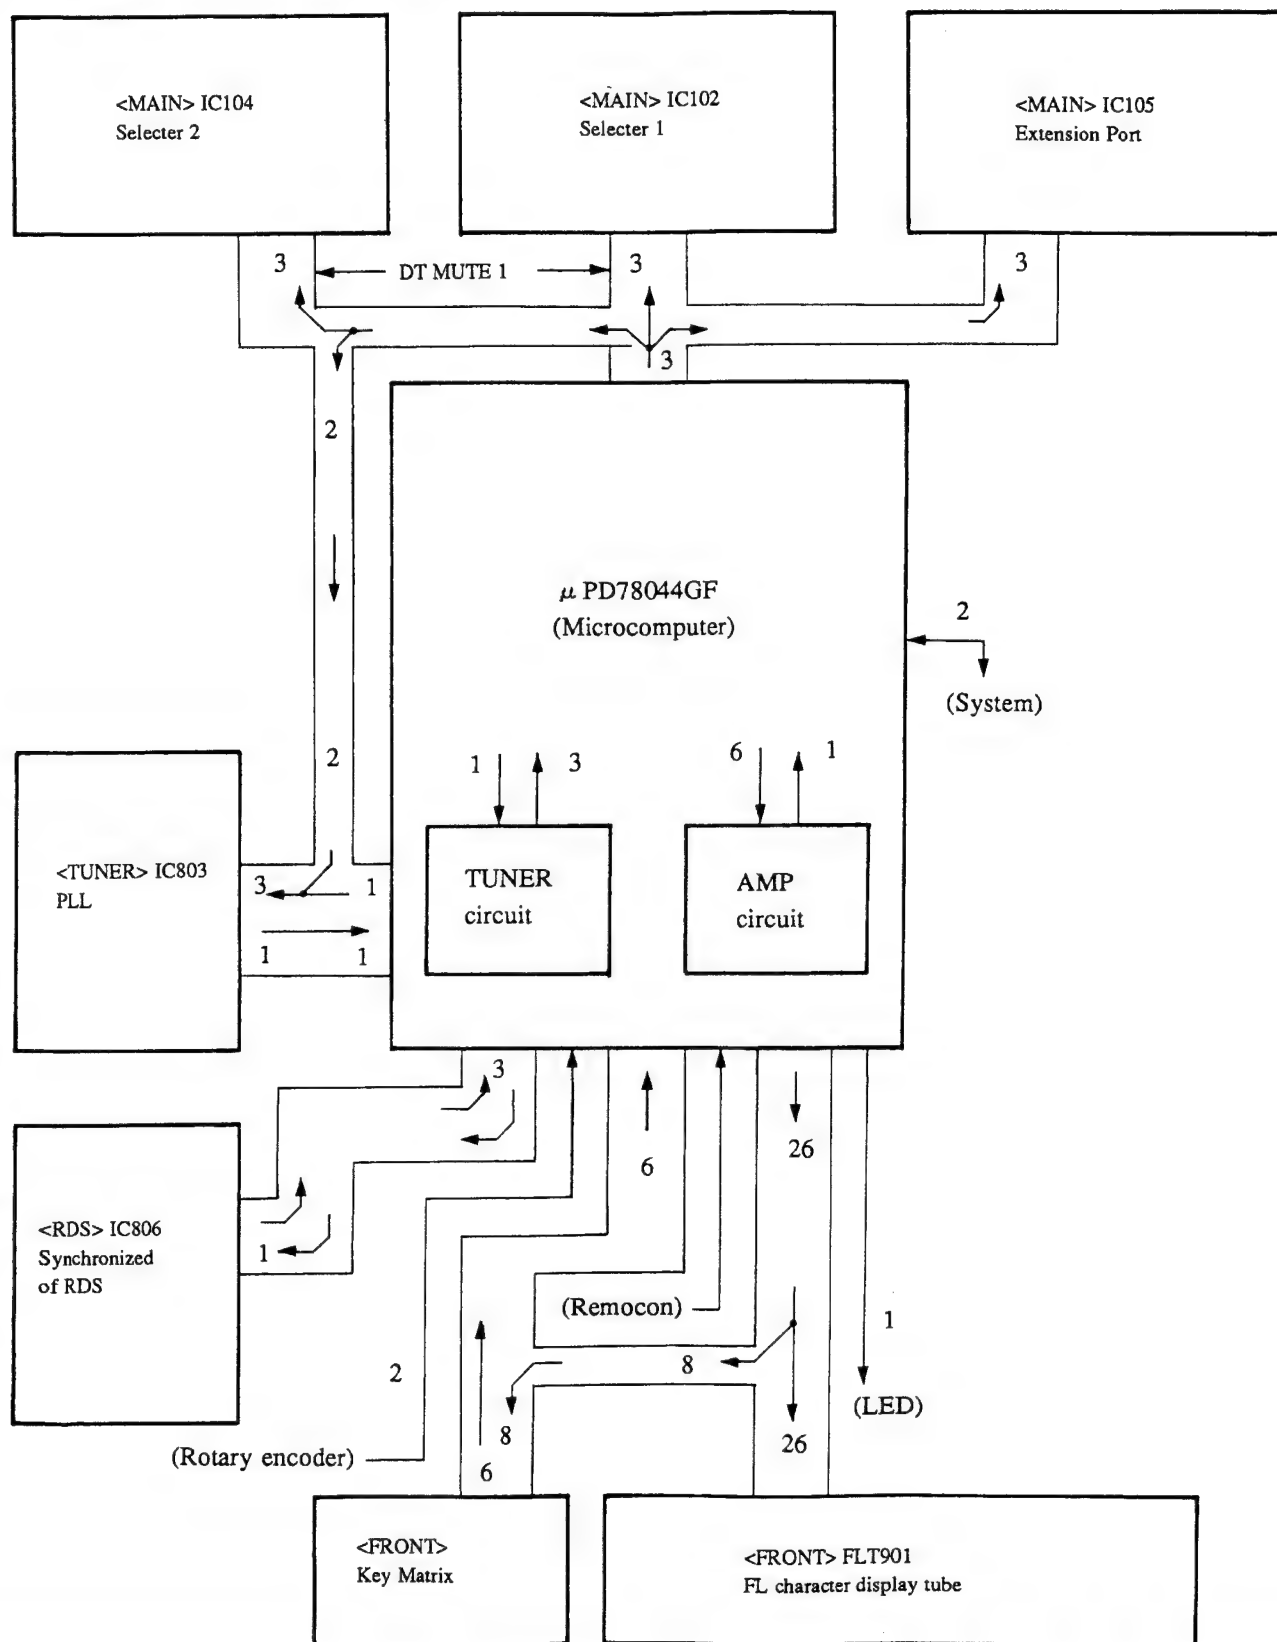

KR-A4050/5050

CIRCUIT DESCRIPTION

Pin description

Pin Number	Port I/O	Name	Description
1	OUT	G5	FL grid 5
2	OUT	G6	FL grid 6
3	OUT	G7	FL grid 7
4	OUT	G8	FL grid 8
5	OUT	G9	FL grid 9
6	OUT	G10	FL grid 10
7	OUT	G1	FL grid 1
8	—	V _{DD}	Microprocessor power supply
9	OUT	CLK (COMMON)	Clock for control IC (ANALOG SW/PLL IC/Electronic VOL)
10	OUT	DATA (COMMON)	Data for control IC (ANALOG SW/PLL IC/Electronic VOL)
11	OUT	CE (PLL)	PLL CE
12	OUT	MUTE2	Amplifier MUTE control H: MUTE OFF L: MUTE ON
13	OUT	POWER	Power relay control H: POWER ON L: POWER OFF
14	OUT	SP__B	Speaker B relay control H: SP__B ON L: SP__B OFF
15	OUT	SP__A	Speaker A relay control H: SP__A ON L: SP__A OFF
16	OUT	SP__S	Surround speaker relay control H: SP__S ON L: SP__S OFF
17	IN	RESET	Microprocessor reset
18	OUT	VOL LED	VOLUME LED control H: LED OFF L: LED ON
19	OUT	ATT (TUNER)	Attenuator control H: ATT ON L: ATT OFF
20	—	GND	A/D power supply
21	IN	CE	Microprocessor CE
22	IN	STEREO	Stereo signal detection H: MONAURAL L: STEREO
23	IN	SD	Tuning signal detection H: NOT TUNED L: TUNED
24	IN	DATA (RDS)	RDS data
25	IN	START (RDS)	RDS start bit
26	IN	IFCNT (PLL)	IF CNT data (PLL DO)
27	IN	4/8 Changeover	Speaker impedance switching H: 4 Ω L: 8 Ω
28	IN	S. LEVEL	SIGNAL level (A/D)
29	—	AV _{DD}	A/D power supply
30	—	AV _{ref}	A/D reference voltage (+5 V)
31	IN	PROTECTION	Protection detection H: PROTECTION L: NORMAL
32	—	OPEN	
33	—	V _{SS} (GND)	Microprocessor power supply
34	IN	X1	4.19 MHz oscillator
35	OUT	X2	4.19 MHz oscillator
36	OUT	/IC (DELAY1 & 2)	DELAY IC 1 & 2 initial clearing
37	OUT	A0 (DELAY 1 & 2)	DELAY IC 1 & 2 address/data
38	OUT	DIN (DELAY 1)	DELAY IC 1 data
39	OUT	DIN (DELAY 2)	DELAY IC 2 data
40	OUT	SC1 (DEALY 1 & 2)	DELAY IC 1 & 2 clock

KR-A4050/5050 E

KR-A4050/5050

CIRCUIT DESCRIPTION

Pin Number	Port I/O	Name	Description
41	I/O	S. DATA	8 bit system DATA
42	I/O	S. BUSY	8 bit system BUSY
43	OUT	RESET (RDS)	RDS reset
44	IN	CLK (RDS)	RDS clock
45	OUT	DT MUTE 1	Data MUTE 1 H: DATA MUTE ON L: DATA MUTE OFF
46	OUT	STB (Electrical VOL)	Electronic VOL STB
47	IN	REMOCON	Remote controller input
48	—	GND	
49	OUT	DT MUTE 2	Data MUTE 2 H: DATA MUTE ON L: DATA MUTE OFF
50	IN	ENC__B	Encoder input B
51	IN	ENC__A	Encoder input A
52	—	V _{DD}	Microprocessor power supply
53	OUT	MUTE 1	Selector MUTE control H: MUTE OFF L: MUTE ON
54	OUT	STB (ANALOG SW)	Analog SW STB
55	IN	KR5	Key return 5
56	IN	KR4	Key return 4
57	IN	KR3	Key return 3
58	IN	KR2	Key return 2
59	IN	KR1	Key return 1
60	IN	KR0	Key return 0
61	OUT	P16/KS7	FL segment 16/Key scan 7
62	OUT	P15/KS6	FL segment 15/Key scan 6
63	OUT	P14/KS5	FL segment 14/Key scan 5
64	OUT	P13/KS4	FL segment 13/Key scan 4
65	OUT	P12/KS3	FL segment 12/Key scan 3
66	OUT	P11/KS2	FL segment 11/Key scan 2
67	OUT	P10/KS1	FL segment 10/Key scan 1
68	OUT	P9/KS0	FL segment 9/Key scan 0
69	OUT	P8	FL segment 8
70	OUT	P1	FL segment 1
71	—	— 30 V (Vload)	FL drive power supply
72	OUT	P2	FL segment 2
73	OUT	P3	FL segment 3
74	OUT	P4	FL segment 4
75	OUT	P5	FL segment 5
76	OUT	P6	FL segment 6
77	OUT	P7	FL segment 7
78	OUT	G2	FL grid 2
79	OUT	G3	FL grid 3
80	OUT	G4	FL grid 4

ADJUSTMENT

AM. Section : If alignment point is "—", Confirm the value.
If not, replace the front end pack.

NO.	ITEM	INPUT SETTINGS	OUTPUT SETTINGS	TUNER SETTINGS	ALIGNMENT POINTS	ALIGN FOR	FIG.
FM SECTION		SELECTOR : FM					
1	DISCRIMINATOR	(A) 98.0MHz 1kHz, ± 40 kHz dev 60dB μ (ANT. input)	Connect a DC voltmeter between TP801 and TP802. (TUNER UNIT)	AUTO or MONO 98.0MHz	L805 (TUNER UNIT)	0 V	(a)
2	DISCRIMINATOR	(C) 98.0MHz 1kHz, ± 40 kHz dev 60dB μ (ANT. input)	Connect a Distortion meter (1kHz)	AUTO or MONO 98.0MHz	L806 (TUNER UNIT)	MINIMUM Distortion (L or R)	(b)
3	DISCRIMINATOR	(C) 98.0MHz 1kHz, ± 40 kHz dev 60dB μ (ANT. input)	Connect a DC voltmeter between TP801 and TP802.	AUTO or MONO 98.0MHz	L806 (TUNER UNIT)	0 V	(a)
4	DISTORTION (STEREO)	(C) 98.0MHz 1kHz, ± 40 kHz dev Selector : L or R Pilot : ± 6.0 kHz dev 60dB μ (ANT. input)	(B)	98.0MHz	IFT (FRONT end PACK)	Minimum distortion (L or R)	(c)
5	SEPARATION	(C) 98.0MHz 1kHz, ± 40 kHz dev Pilot : 6kHz dev Selector : L or R 60dB μ (ANT. input)	(B)	AUTO 98.0MHz	VR803 (TUNER UNIT)	MINIMUM CROSSTALK	(b)
6	TUNING LEVEL	(A) 98.0MHz 0 dev 17dB μ (ANT. input)	(B)	AUTO or MONO 98.0MHz	VR801 (TUNER UNIT)	Adjust VR802 and stop at the point where FLT 901 (TUNED) goes on.	(d)
AM SECTION		SELECTOR : AM					
(1)	TUNING LEVEL	(D) 999MHz 26dB μ (ANT. input)	(B)	—	VR804 (TUNER UNIT)	Adjust VR801 and stop at the point where FLT901 (TUNED) goes on.	(b)
AUDIO SECTION							
(2)	IDLE CURRENT	—	Connect a DC voltmeter across CP1 (L) CP2 (R) (MAIN UNIT)	volume : 0	VR201 (L) VR202 (R) (MAIN UNIT)	10mV	(e)

KR-A4050/5050

REGLAGE

Section AM : Sile point d'alignement est-, confirmer la valeur.
Sinon, remplacer le bloc avac.

N°	ITEM	REGLAGE DE L'ENTREE	REGLAGE DE LA SORTIE	REGLAGE DU TUNER	POINT DE L'ALIGNEMENT	ALIGNER POUR	FIG.
SECTION MF		SELECTEUR : FM					
1	DISCRIMINATEUR	(A) 98.0MHz 1kHz, ±40kHz dév 60dBμ (Entrée ANT)	Relier un voltmètre CC entre les TP801 et TP802 (TUNER UNIT)	AUTO ou MONO 98.0MHz	L805 (TUNER UNIT)	0 V	(a)
2	DISCRIMINATEUR	(C) 98.0MHz 1kHz, ±40kHz dév 60dBμ (Entrée ANT)	Relier un clistorsionmètre (1kHz)	AUTO ou MONO 98.0MHz	L806 (TUNER UNIT)	Distorsion minimale (L ou R)	(b)
3	DISCRIMINATEUR	(C) 98.0MHz 1kHz, ±40kHz dév 60dBμ (Entrée ANT)	Relier un voltmètre CC entre les TP801 et TP802 (TUNER UNIT)	AUTO ou MONO 98.0MHz	L805 (TUNER UNIT)	0 V	(a)
4	DISTORTION (STEREO)	(C) 98.0MHz 1kHz, ±40kHz dév Selection : L ou R Signal pilote : ±6.0kHz dév 60dBμ (Entrée ANT)	(B)	98.0MHz	IFT (Tête H.F.)	Distorsion minimale. (L ou R)	(c)
5	SEPARATION	(C) 98.0MHz 1kHz, ±40kHz dév Selection : L ou R Signal Pilot : 6kHz dév 60 dBμ (Entrée ANT)	(B)	AUTO 98.0MHz	VR803 (TUNER UNIT)	Diaphonie minimale.	(b)
6	NIVEAU D'ACCORDER	(A) 98.0MHz 0 dév 17dBμ (Entrée ANT)	(B)	AUTO ou MONO 98.0MHz	VR801 (TUNER UNIT)	Ajuster VR802 et arrêter le mouve- ment de moment où le FL901 (TUNED) s'allume.	(d)
SECTION MA		SELECTEUR : AM					
(1)	NIVEAU D'ACCORDER	(D) 999kHz 26dBμ (Entrée ANT)	(B)	—	VR804 (TUNER UNIT)	Ajuster VR801 et arrêter le mou- vement de moment où le FL901 (TUNED) s' allume	(d)
SECTION AUDIO							
(1)	COURANE DE PLARISATION	—	Couonner un voltmètre CC sur CP1 (L) CP2 (R) (MAIN UNIT)	volume : 0	VR201 (G) VR202 (D) (MAIN UNIT)	10mV	(e)

KR-A4050/5050


ABGLEICH

MW-Teil : Wenn der Ausrichtpunkt—ist, den Wert überprüfen.
Wenn nicht, die Fronteinheit auswechseln.


NR	GEGENSTAND	EINGANGS-EINSTELLUNG	AUSGANGS-EINSTELLUNG	TUNER-EINSTELLUNG	ABGLEICH-PUNKTE	ABGLEICHEN FÜR	ABB.
UKW-EMPfangSABTEILUNG				WÄHLER : FM			
1	DISKRIMINATOR	(A) 98.0MHz 1kHz. ± 40 kHz Hub 60dB μ (ANT-Eingang)	Einen Gleichspannungsmesser zwischen TP801 UND TP802 anschließen. (TUNER UNIT)	AUTO oder MONO 98.0MHz	L805 (TUNER UNIT)	0 V	(a)
2	DISKRIMINATOR	(C) 98.0MHz 1kHz. ± 40 kHz Hub 60dB μ (ANT-Eingang)	Einen Klirrfaktor. (1kHz)	AUTO oder MONO 98.0MHz	L806 (TUNER UNIT)	Minimal Klirrfaktor. (L oder R)	(b)
3	DISKRIMINATOR	(C) 98.0MHz 1kHz. ± 40 kHz Hub 60dB μ (ANT-Eingang)	Einen Gleichspannungsmesser zwischen TP801 UND TP802 anschließen.	AUTO oder MONO 98.0MHz	L805 (TUNER UNIT)	0 V	(a)
4	KLIRRFaktor (STEREO)	(C) 98.0MHz 1kHz, ± 40 kHz Hub Wähler : L oder R Piloten : ± 6.0 kHz Hub 60 dB μ (ANT-Eingang)	(B)	98.0MHz	IFT (Frontend)	Minimal Klirrfaktor. (L ou R)	(c)
5	STEREO KANAL TRENNUNG	(C) 98.0MHz 1kHz, ± 40 kHz Hub Wähler : L oder R Piloten : 6kHz Hub 60dB μ (ANT-Eingang)	(B)	AUTO 98.0MHz	VR803 (TUNER UNIT)	Minimales übersprechen.	(b)
6	ABSTIMM PEGEL	(A) 98.0MHz 0 Hub 17dB μ (ANT-Eingang)	(B)	AUTO oder MONO 98.0MHz	VR801 (TUNER UNIT)	Den Pegel widerstand aufdrehen, und dem VR802 Halt geben wobei den FL901 (TUNED) anzeiger leuchtet wird.	(d)
MW-EMPfangSABTEILUNG				WÄHLER : AM			
(1)	ABSTIMM PEGEL	999kHz 26dB μ (ANT-Eingang)	(B)	—	VR804 (TUNER UNIT)	Den Pegel widerstand aufdrehen, und dem VR801 Halt geben wobei den FL901 (TUNED) anzeiger leuchtet wird.	(d)
AUDIO —ABTEILUNG							
(1)	LEERLAUFSTROM	—	Einen Gleichspannungsmesser über CP1 (L) CP2 (R) anschließen. (MAIN UNIT)	Volume : 0	VR201 (G) VR202 (D) (RECEIVER UNIT)	10mV	(e)

KR-A4050/5050

ADJUSTMENT / REGLAGE / ABGLEICH

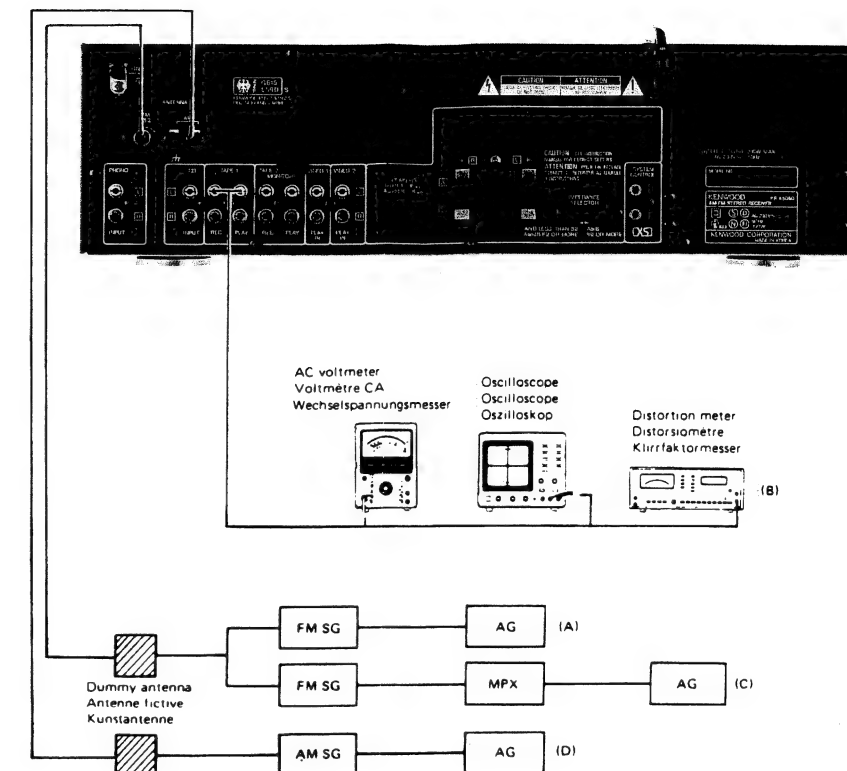


System connections/Raccordements du système/System-Anschlüsse

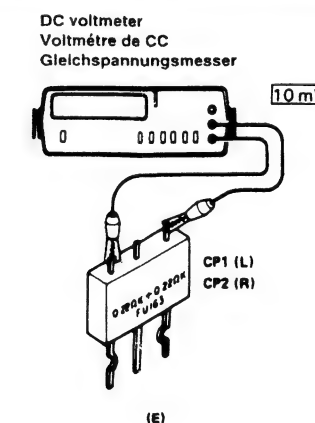




KR-A4050/5050 KR-A4050/5050

WIRING DIAGRAM

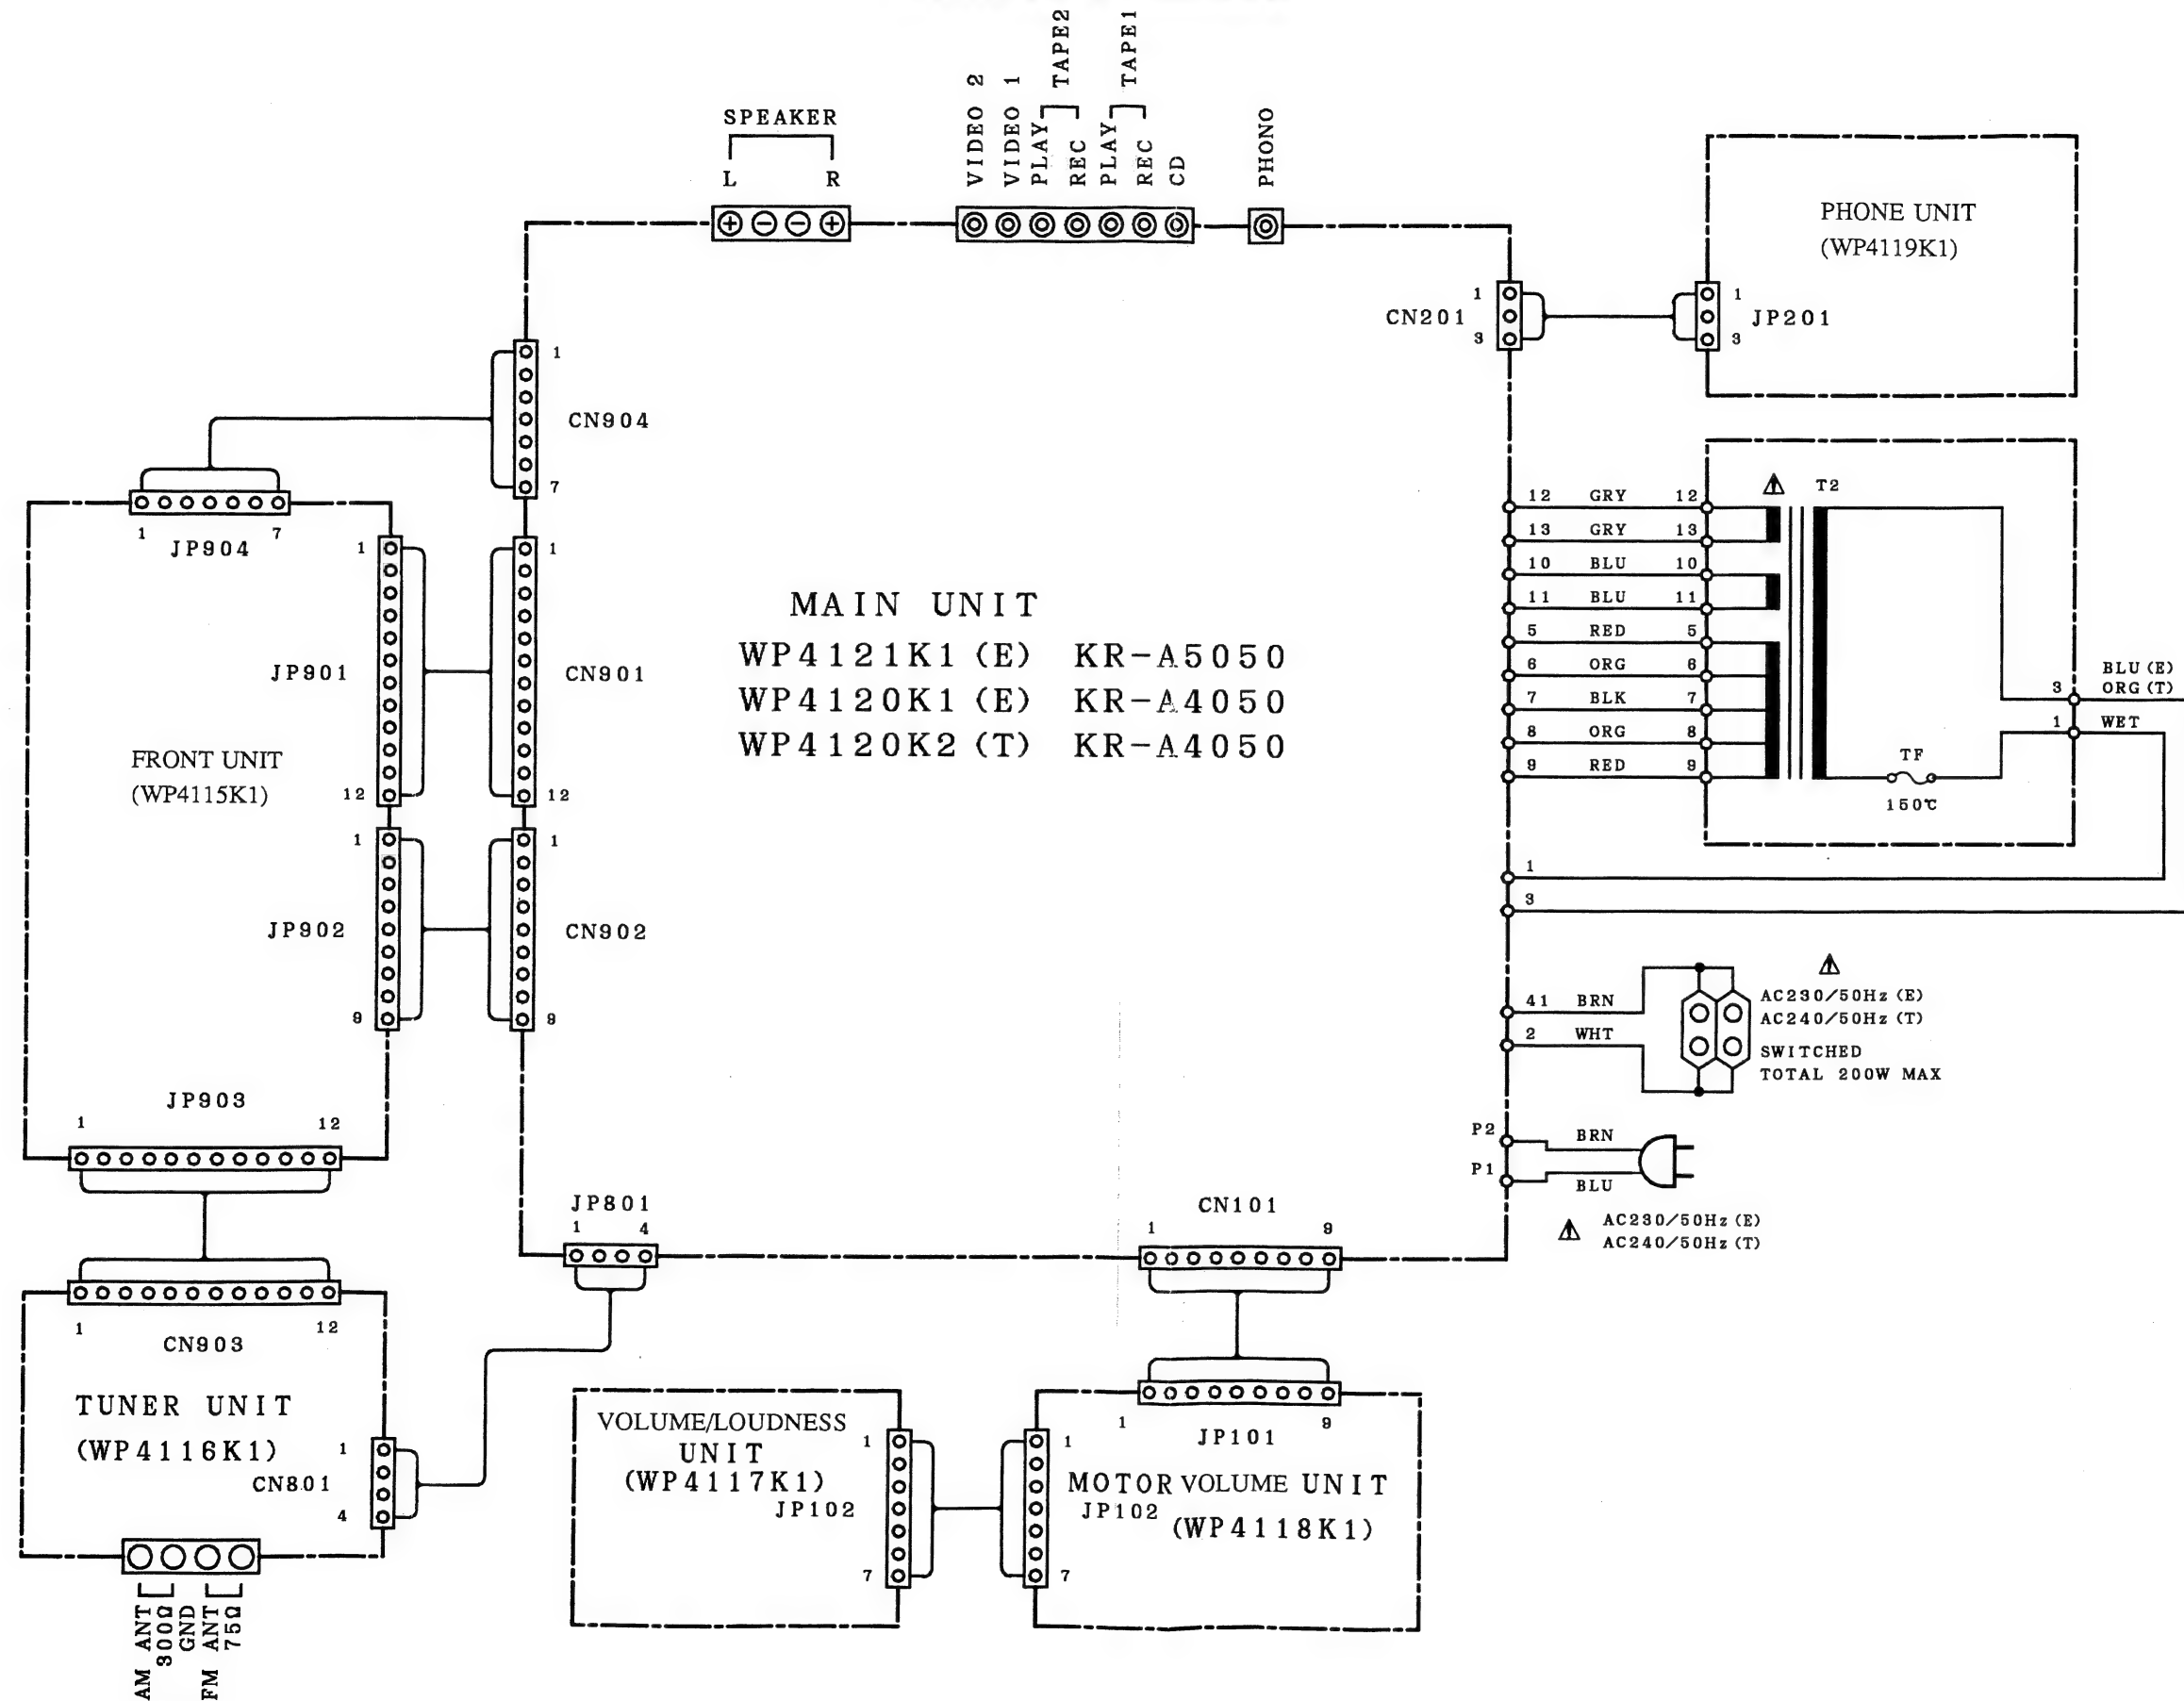


KR-A4050/5050 E

PC BOARD (Component side view)

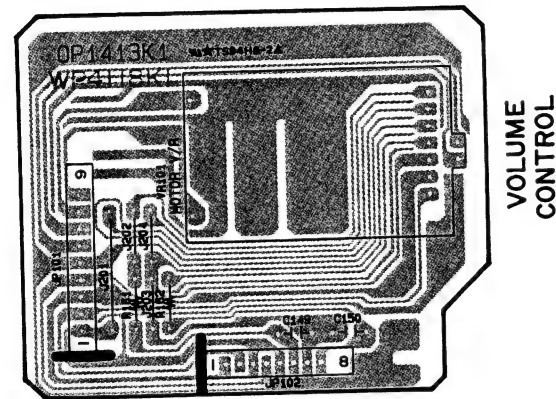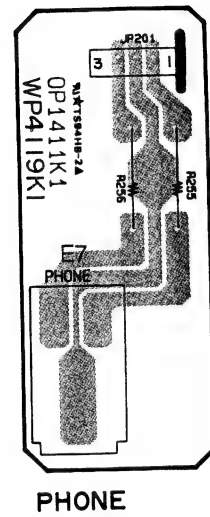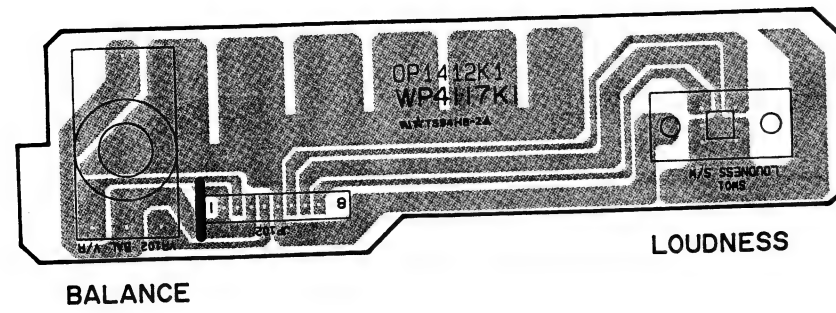


AM ANT
300Ω

FM ANT
75Ω

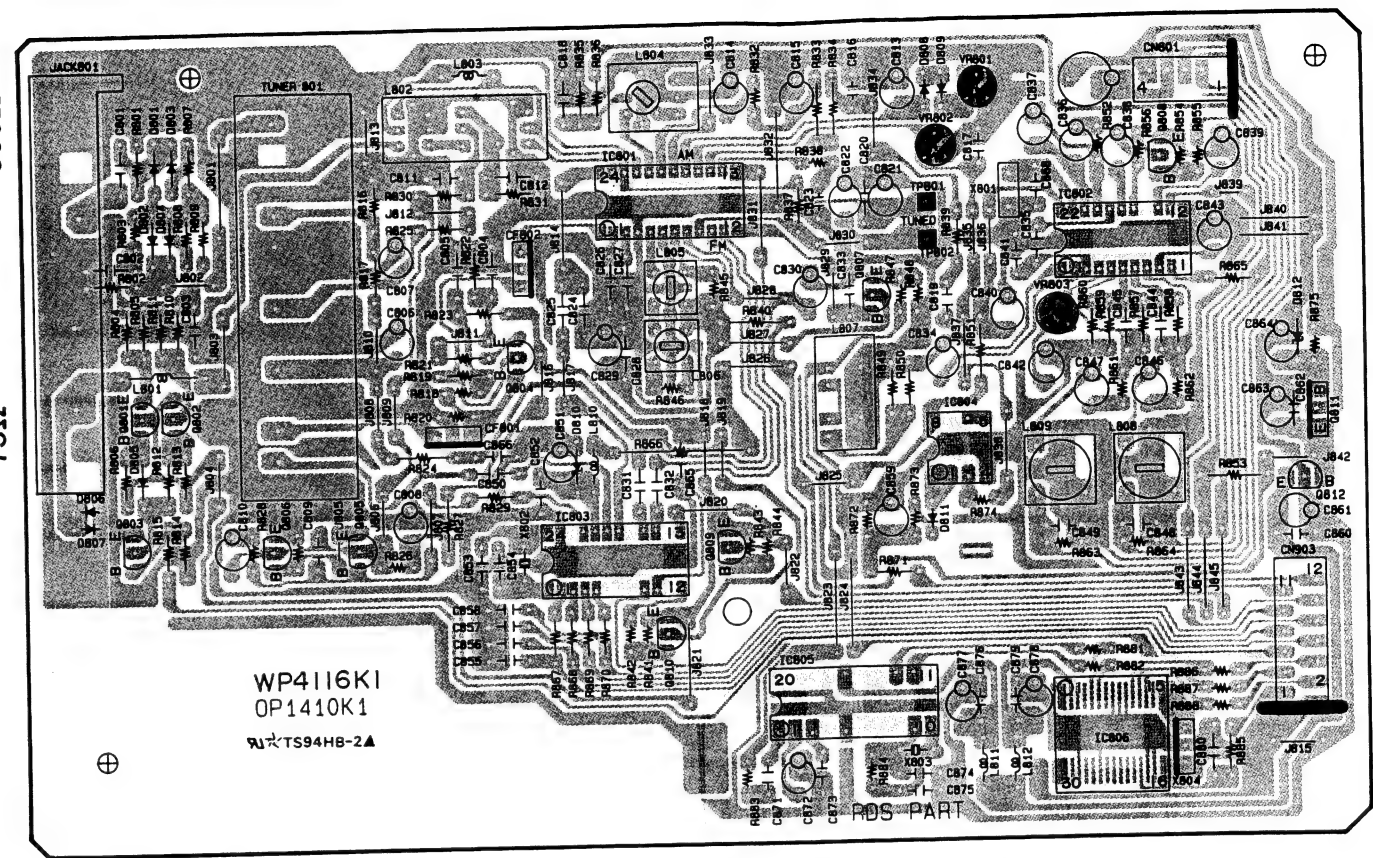


FRONT
↓

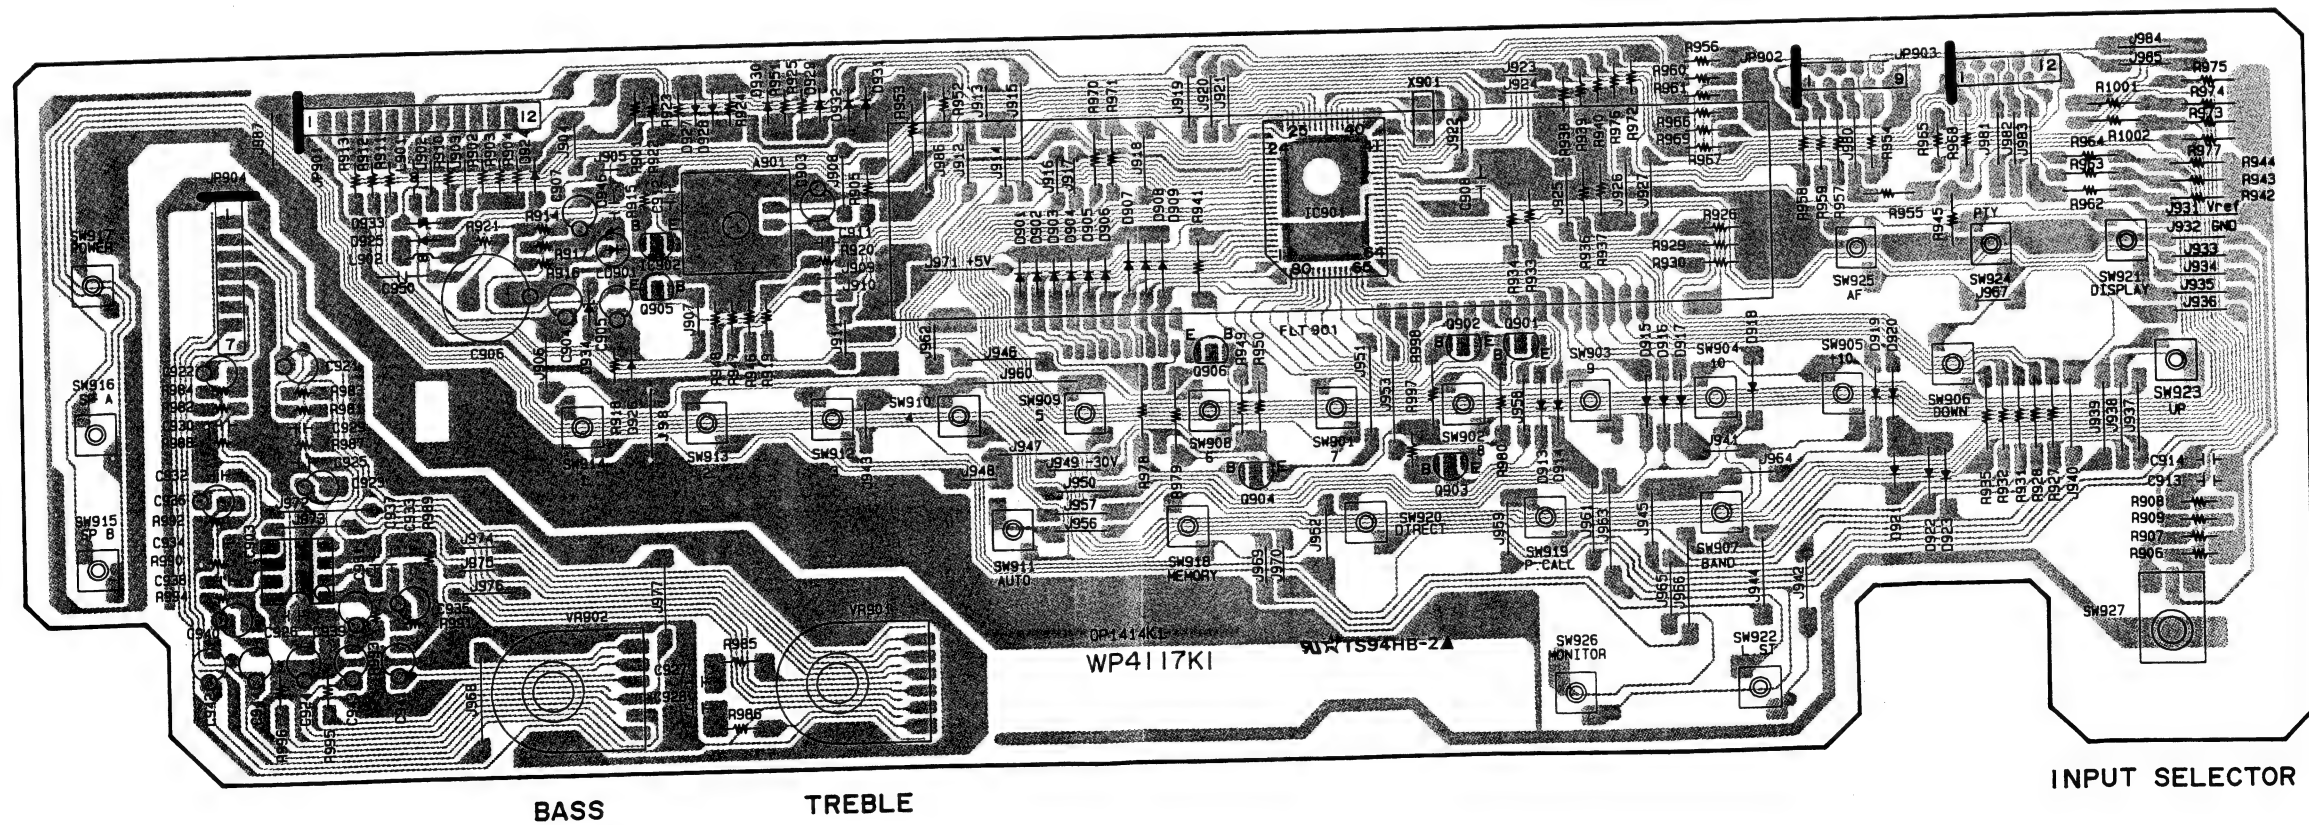


Refer to the schematic diagram for the values of resistors and capacitors.

PC BOARD (Component side view)

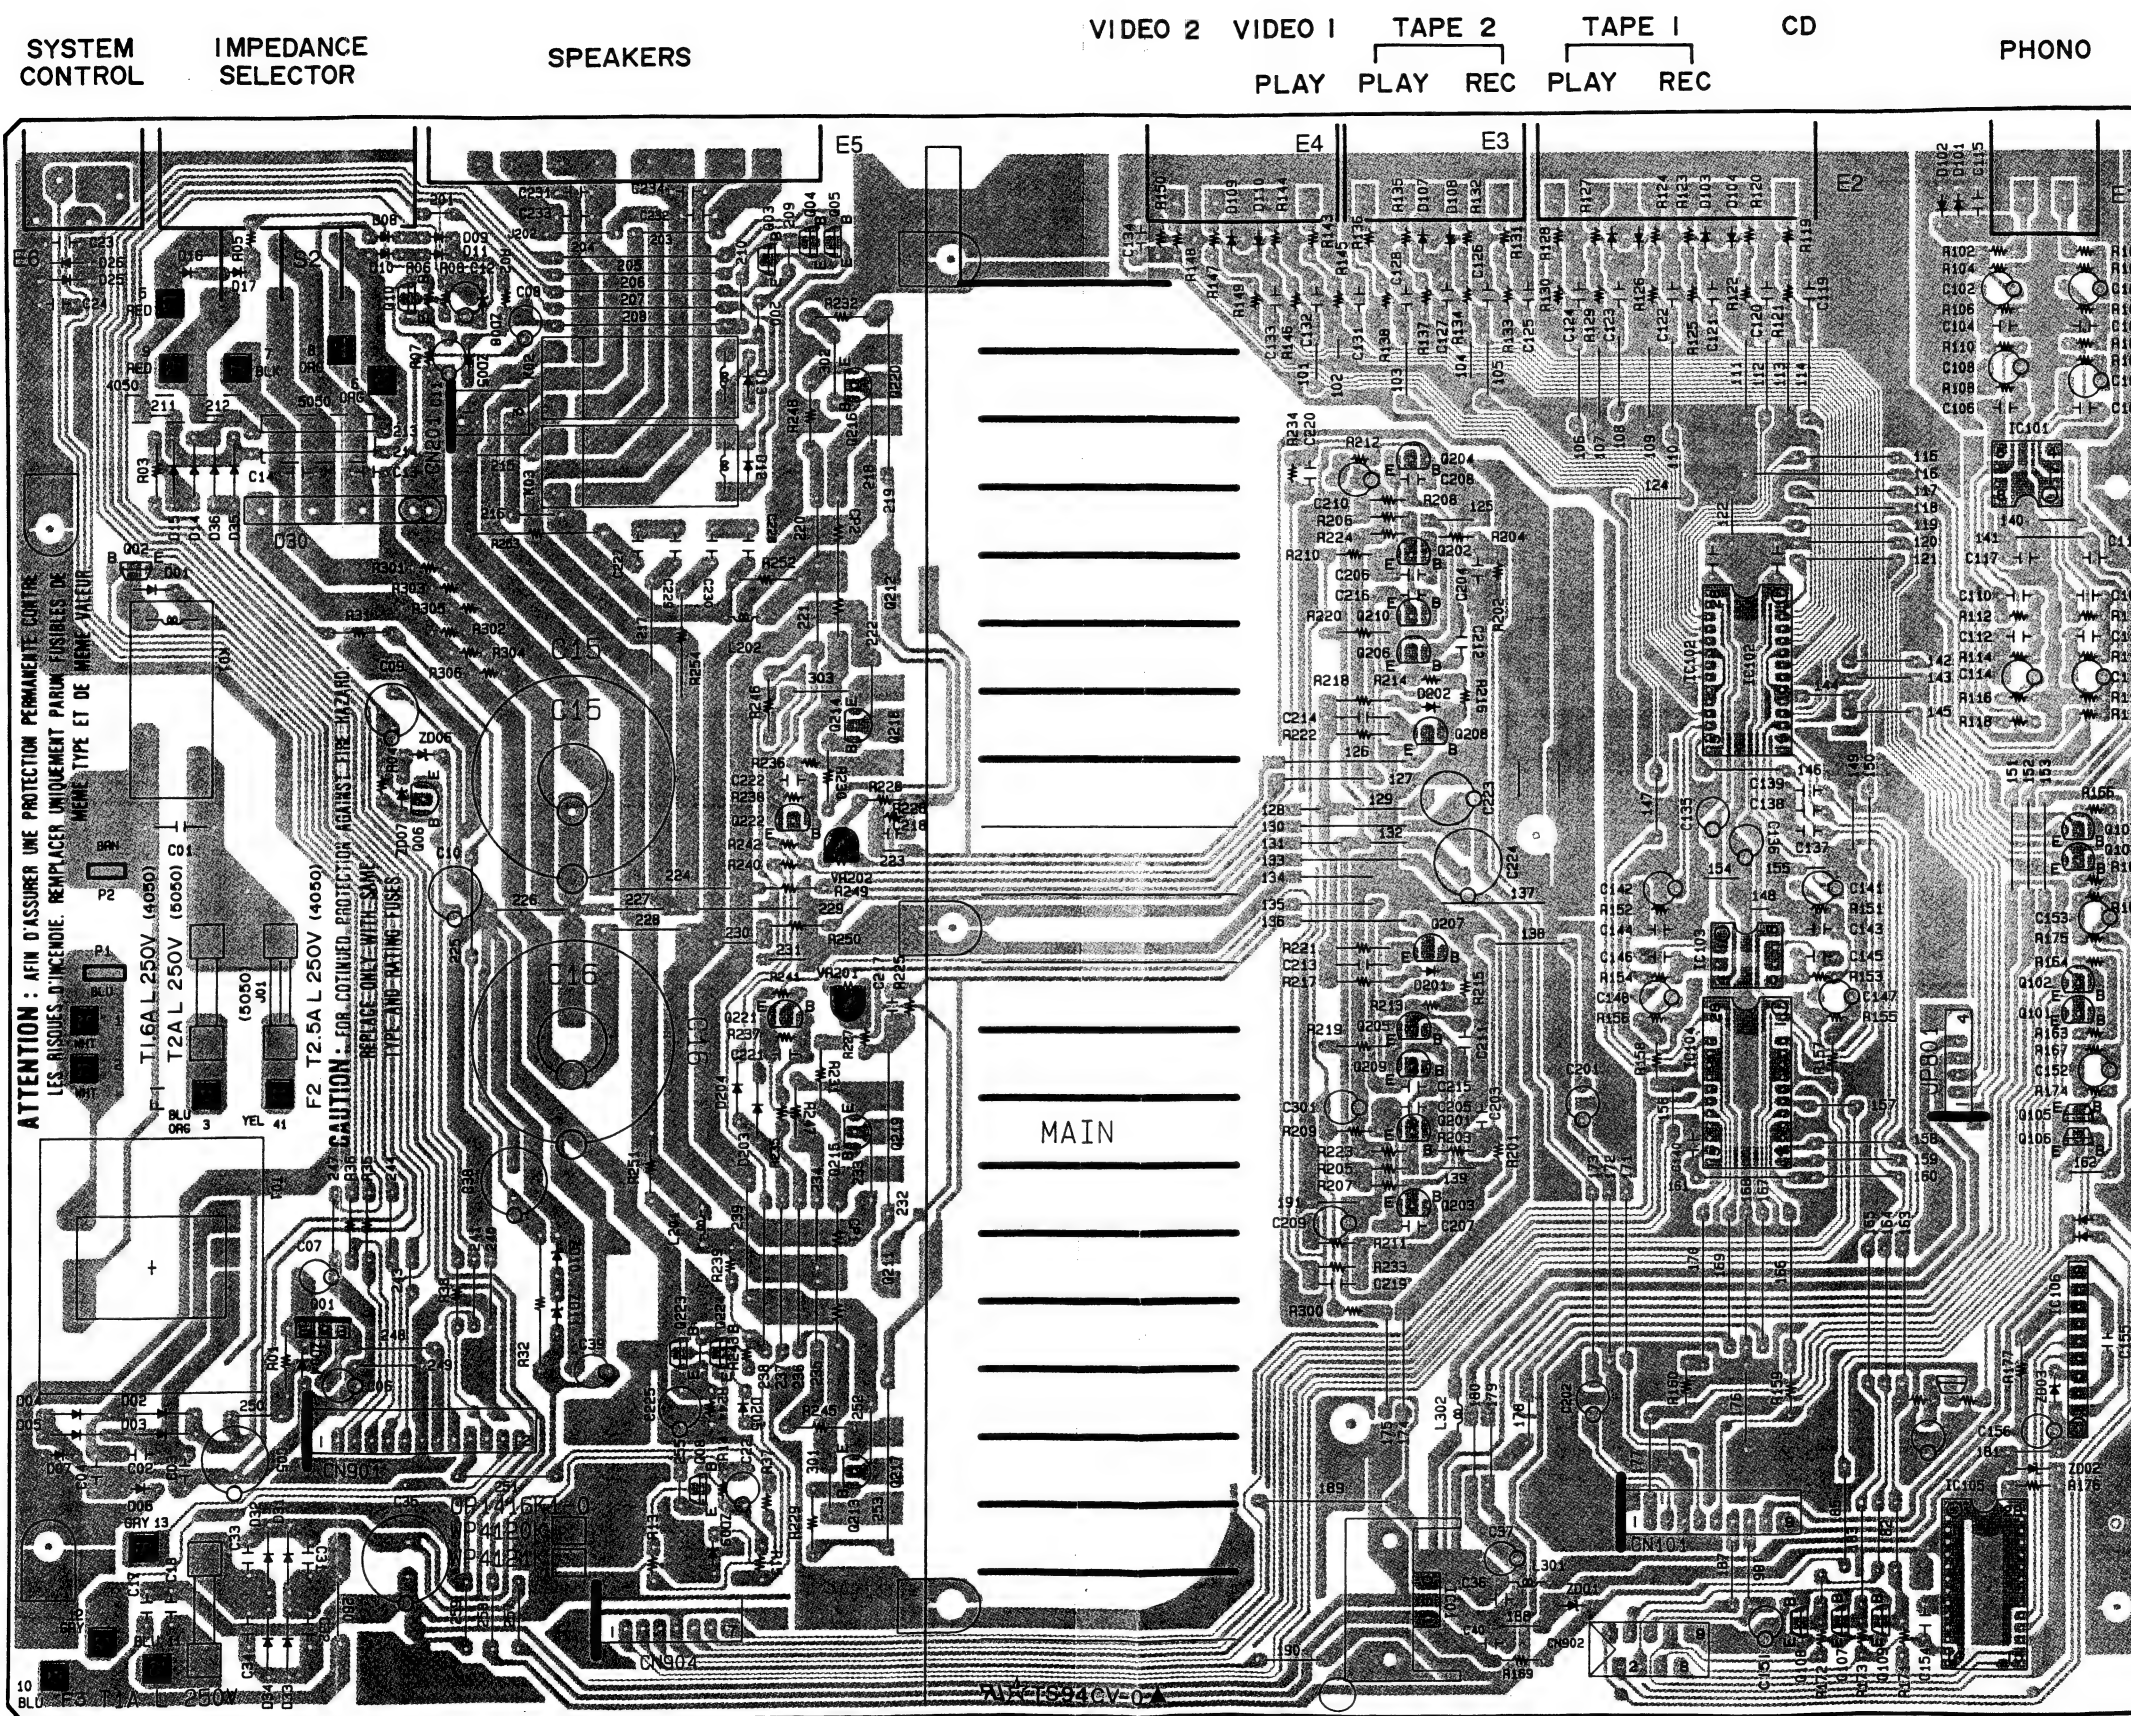

TUNER UNIT WP4116K1


FM FRONT END (W02-1041-15) TUNER801

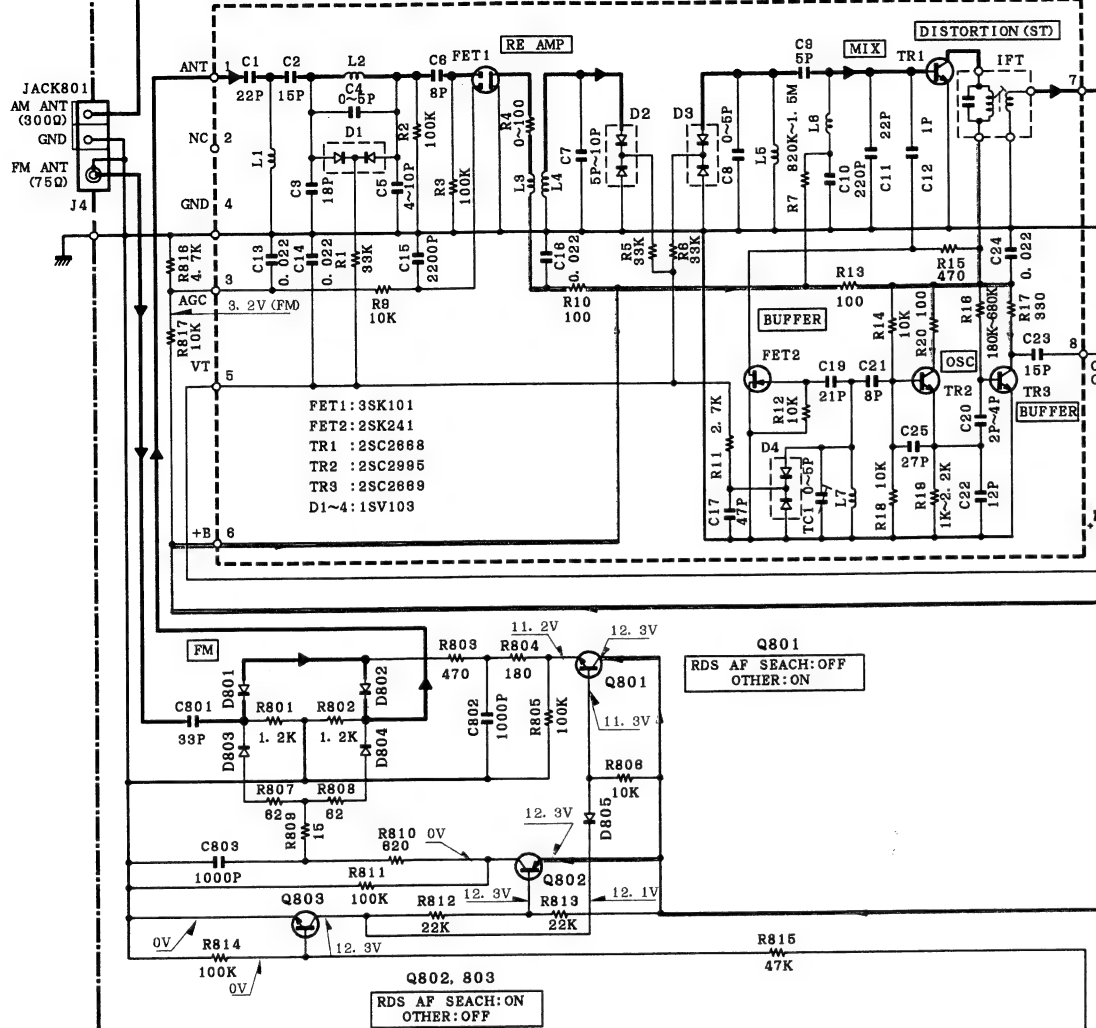

TUNER UNIT

IC801	:LA1266	D801~809, 811	:ISS133T
IC802	:LA3401	D810	:RD5. 1ES (B2)
IC803	:LC7218	D812	:RD13ES (B2)
IC804	:LM258N		
IC805	:TDA7330A		
IC806	:LC8543H-4600		


Q801, 803	:2SC1740S
806~808	
Q802, 809, 810	:2SA933S
Q804	:2SC31940
Q805	:2SC1845F
Q811	:2SD2061E
Q812	:NJM78L05A

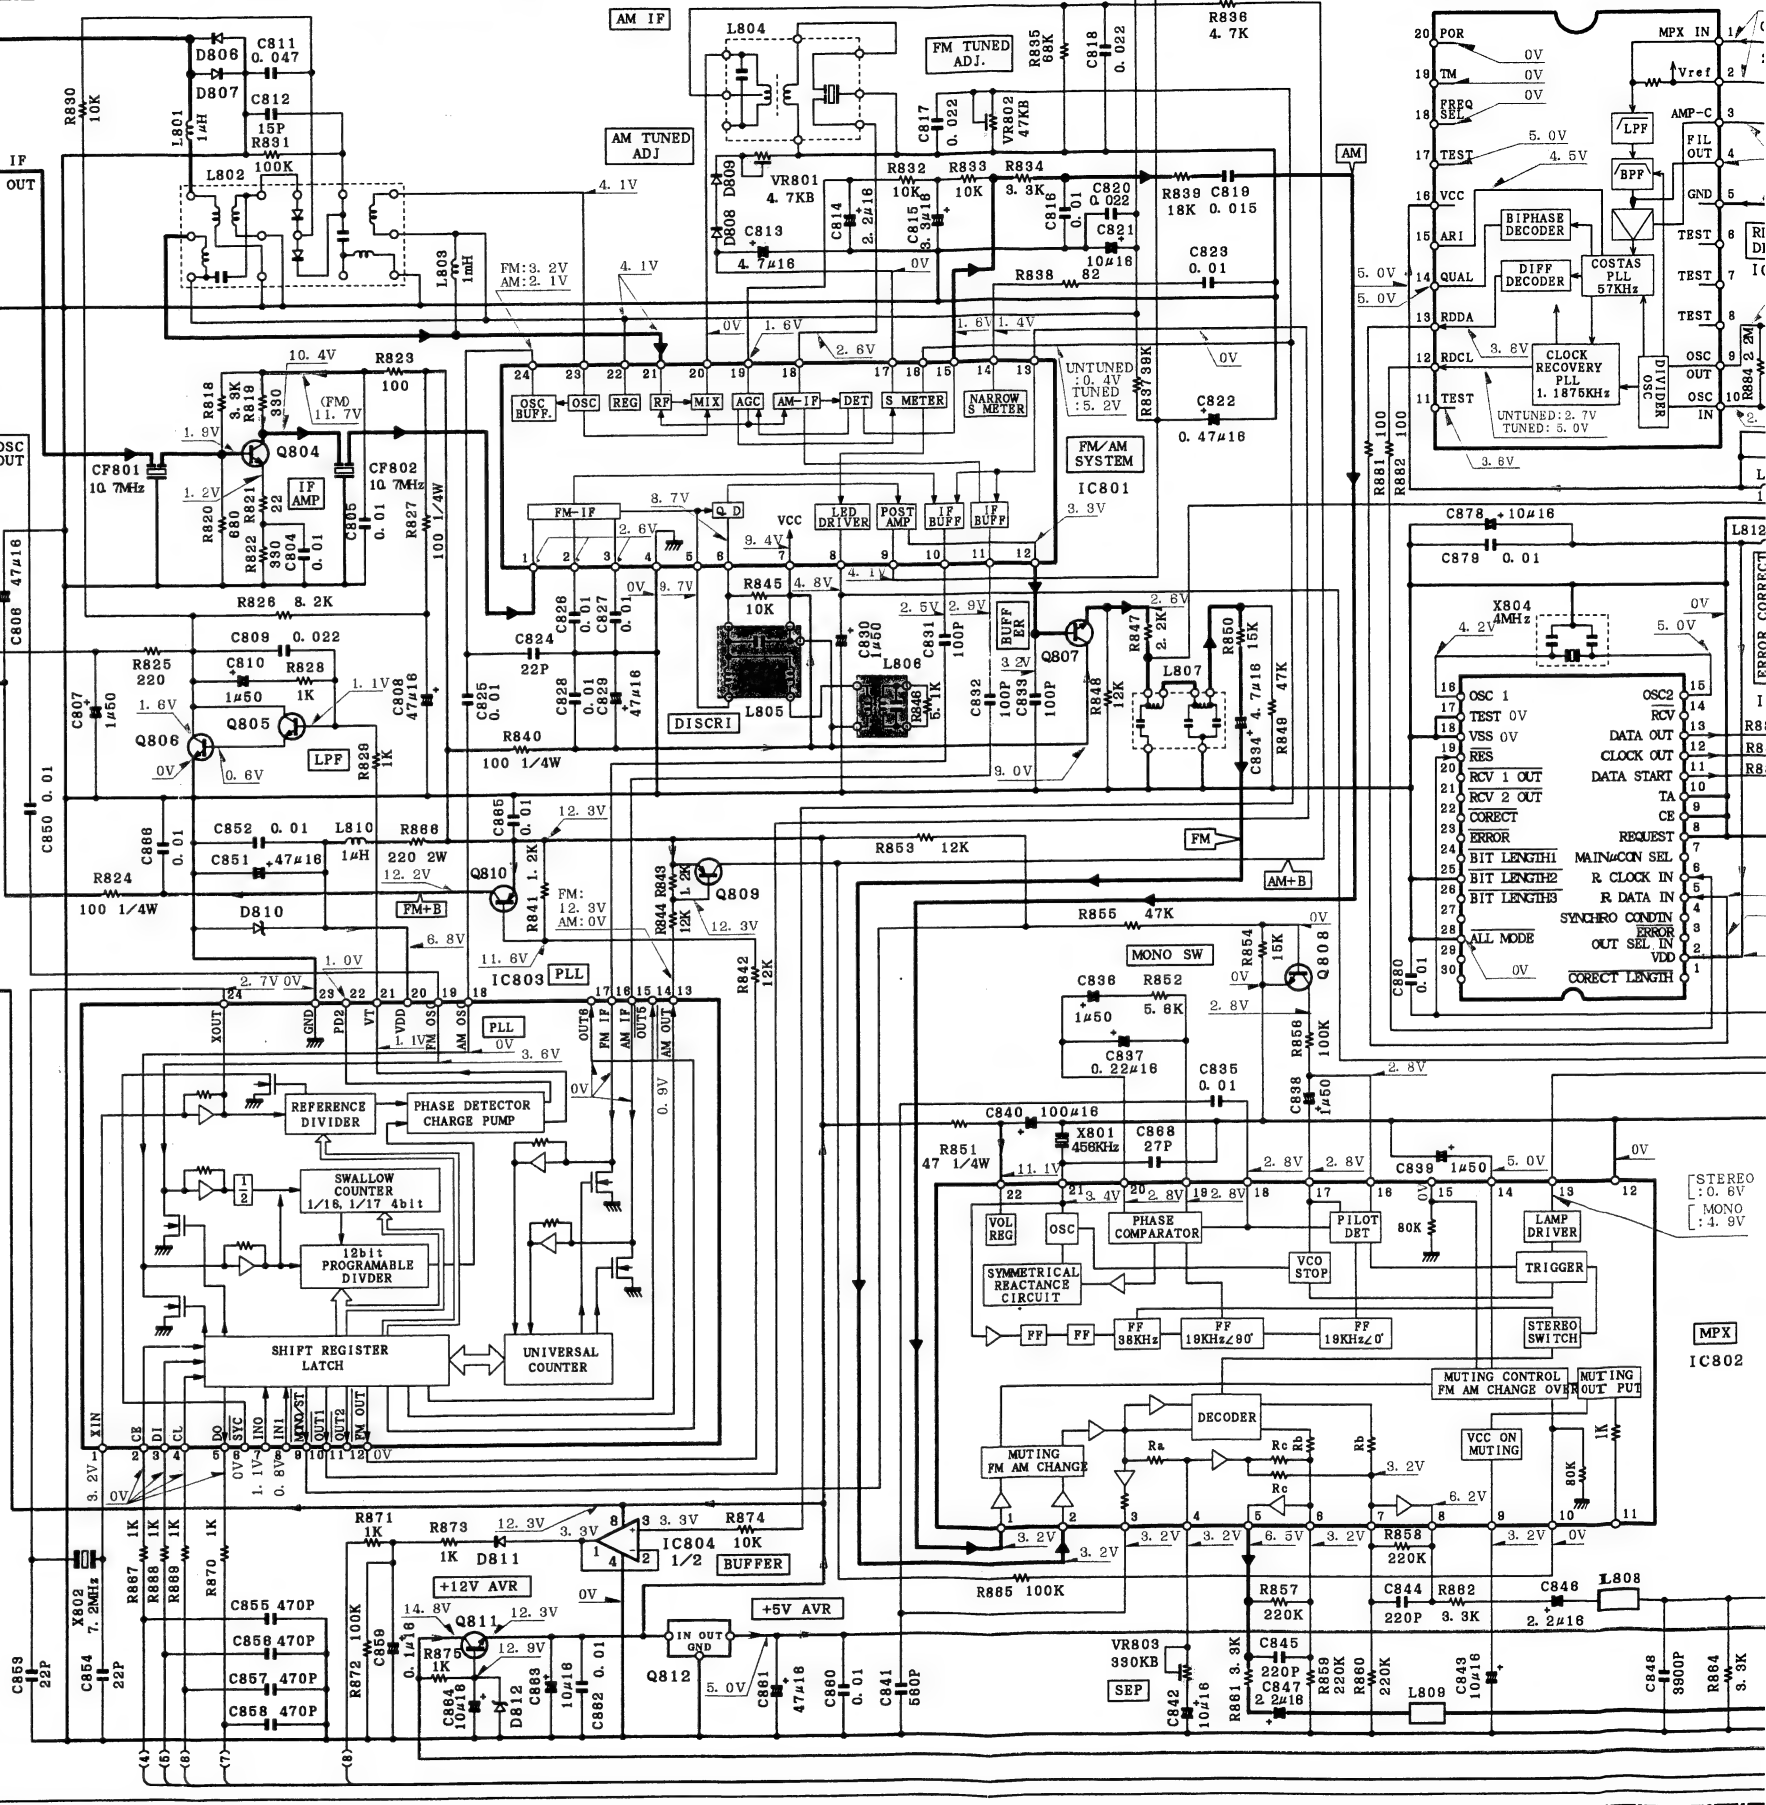

STEREO : 0.6V
MONO : 4.9V

MPX IC802

FRONT UNIT WP4117K1

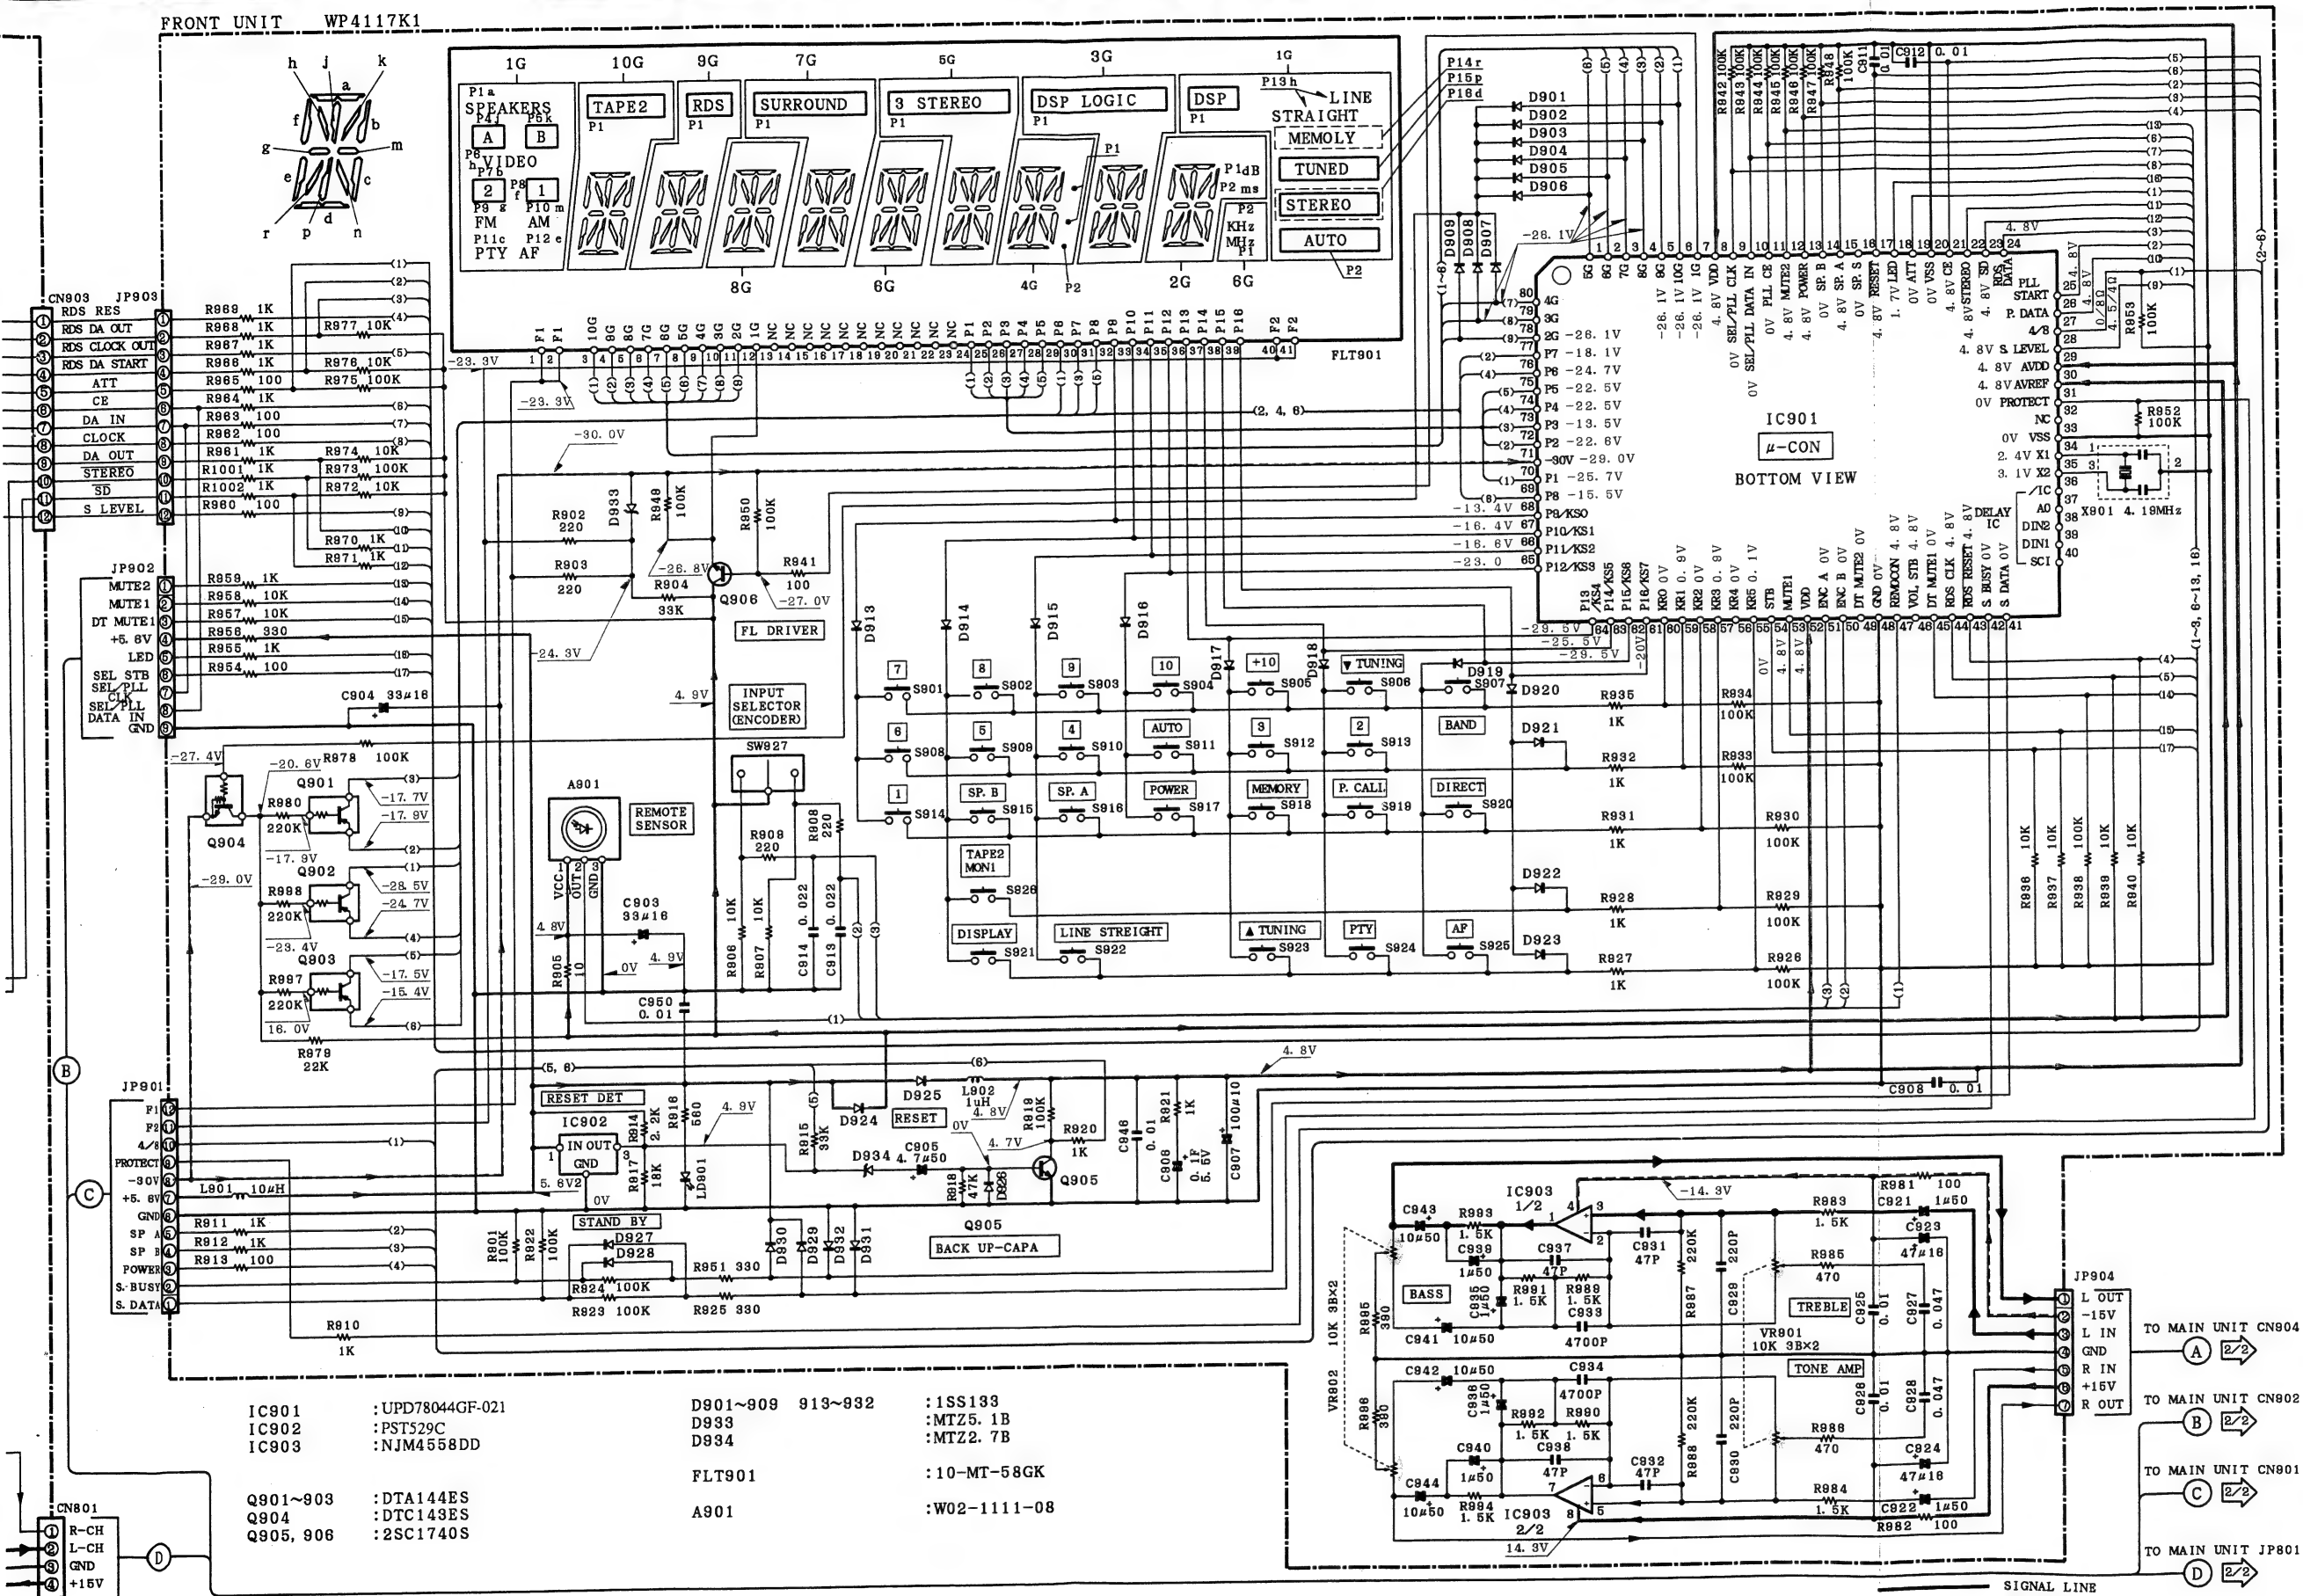

IC901 : UPD78044GF-021
IC902 : PST529C
IC903 : NJM4558DD

Q901~903 : DTA144ES
Q904 : DTC143ES
Q905, 906 : 2SC1740S

D901~909 913~932 : 1SS133
D933 : MTZ5.1B
D934 : MTZ2.7B

FLT901 : 10-MT-58GK
A901 : W02-1111-08

SIGNAL LINE
GND LINE
+B LINE
-B LINE

1/2

KR-A4050/5050

KENWOOD

Y05-2760-10

measured with a high imped-
ing reception of the FM broad-
ing strength of 60 dB at the
35 may vary slightly due to var-
idial instruments or/and units.
ses are as measured during
roadcast signal (with a signal
the ANT terminal).

Les tensions c.c. doivent être mesurées avec un
voltmètre à haute impédance pendant la réception
d'un signal de programme FM (avec une force de
signal de 60 dB à la borne ANT). Les valeurs peu-
vent différer légèrement du fait des variations
inhérentes aux appareils et aux instruments de
mesure individuels.

Les valeurs entre parenthèses doivent être
mesurées pendant la réception d'un signal de pro-
gramme AM avec une force de signal de 60 dB à la
borne ANT).


Die angegebenen Gleichspannungswerte wurden
mit einem hochohmigen Spannungsmesser bei
Empfang eines UKW-Signals (mit einer Feldstärke
von 60 dB am Antennenanschluß) gemessen.
Dabei schwanken die Meßwerte aufgrund von Un-
terschieden zwischen einzelnen Instrumenten oder
Geräten u. U. geringfügig. Die eingeklammerten
Gleichspannungswerte wurden bei Empfang eines
MW-Signals (mit einer Feldstärke von 60 dB am
Antennenanschluß) gemessen.

CAUTION : For continued safety, replace safety
critical components only with manufacturer's re-
commended parts (refer to parts list). Indicates
safety critical components. To reduce the risk of
electric shock, leakage-current or resistance me-
asurements shall be carried out (exposed parts are
acceptably insulated from the supply circuit) before
the appliance is returned to the customer.


D80

(A) or (B) LESS THAN 4Ω		(A) or (B) MORE THAN 8Ω	
(A)	(B)	(A)	(B)
34.9V	-34.9V	44.1V	-44.0V

C14

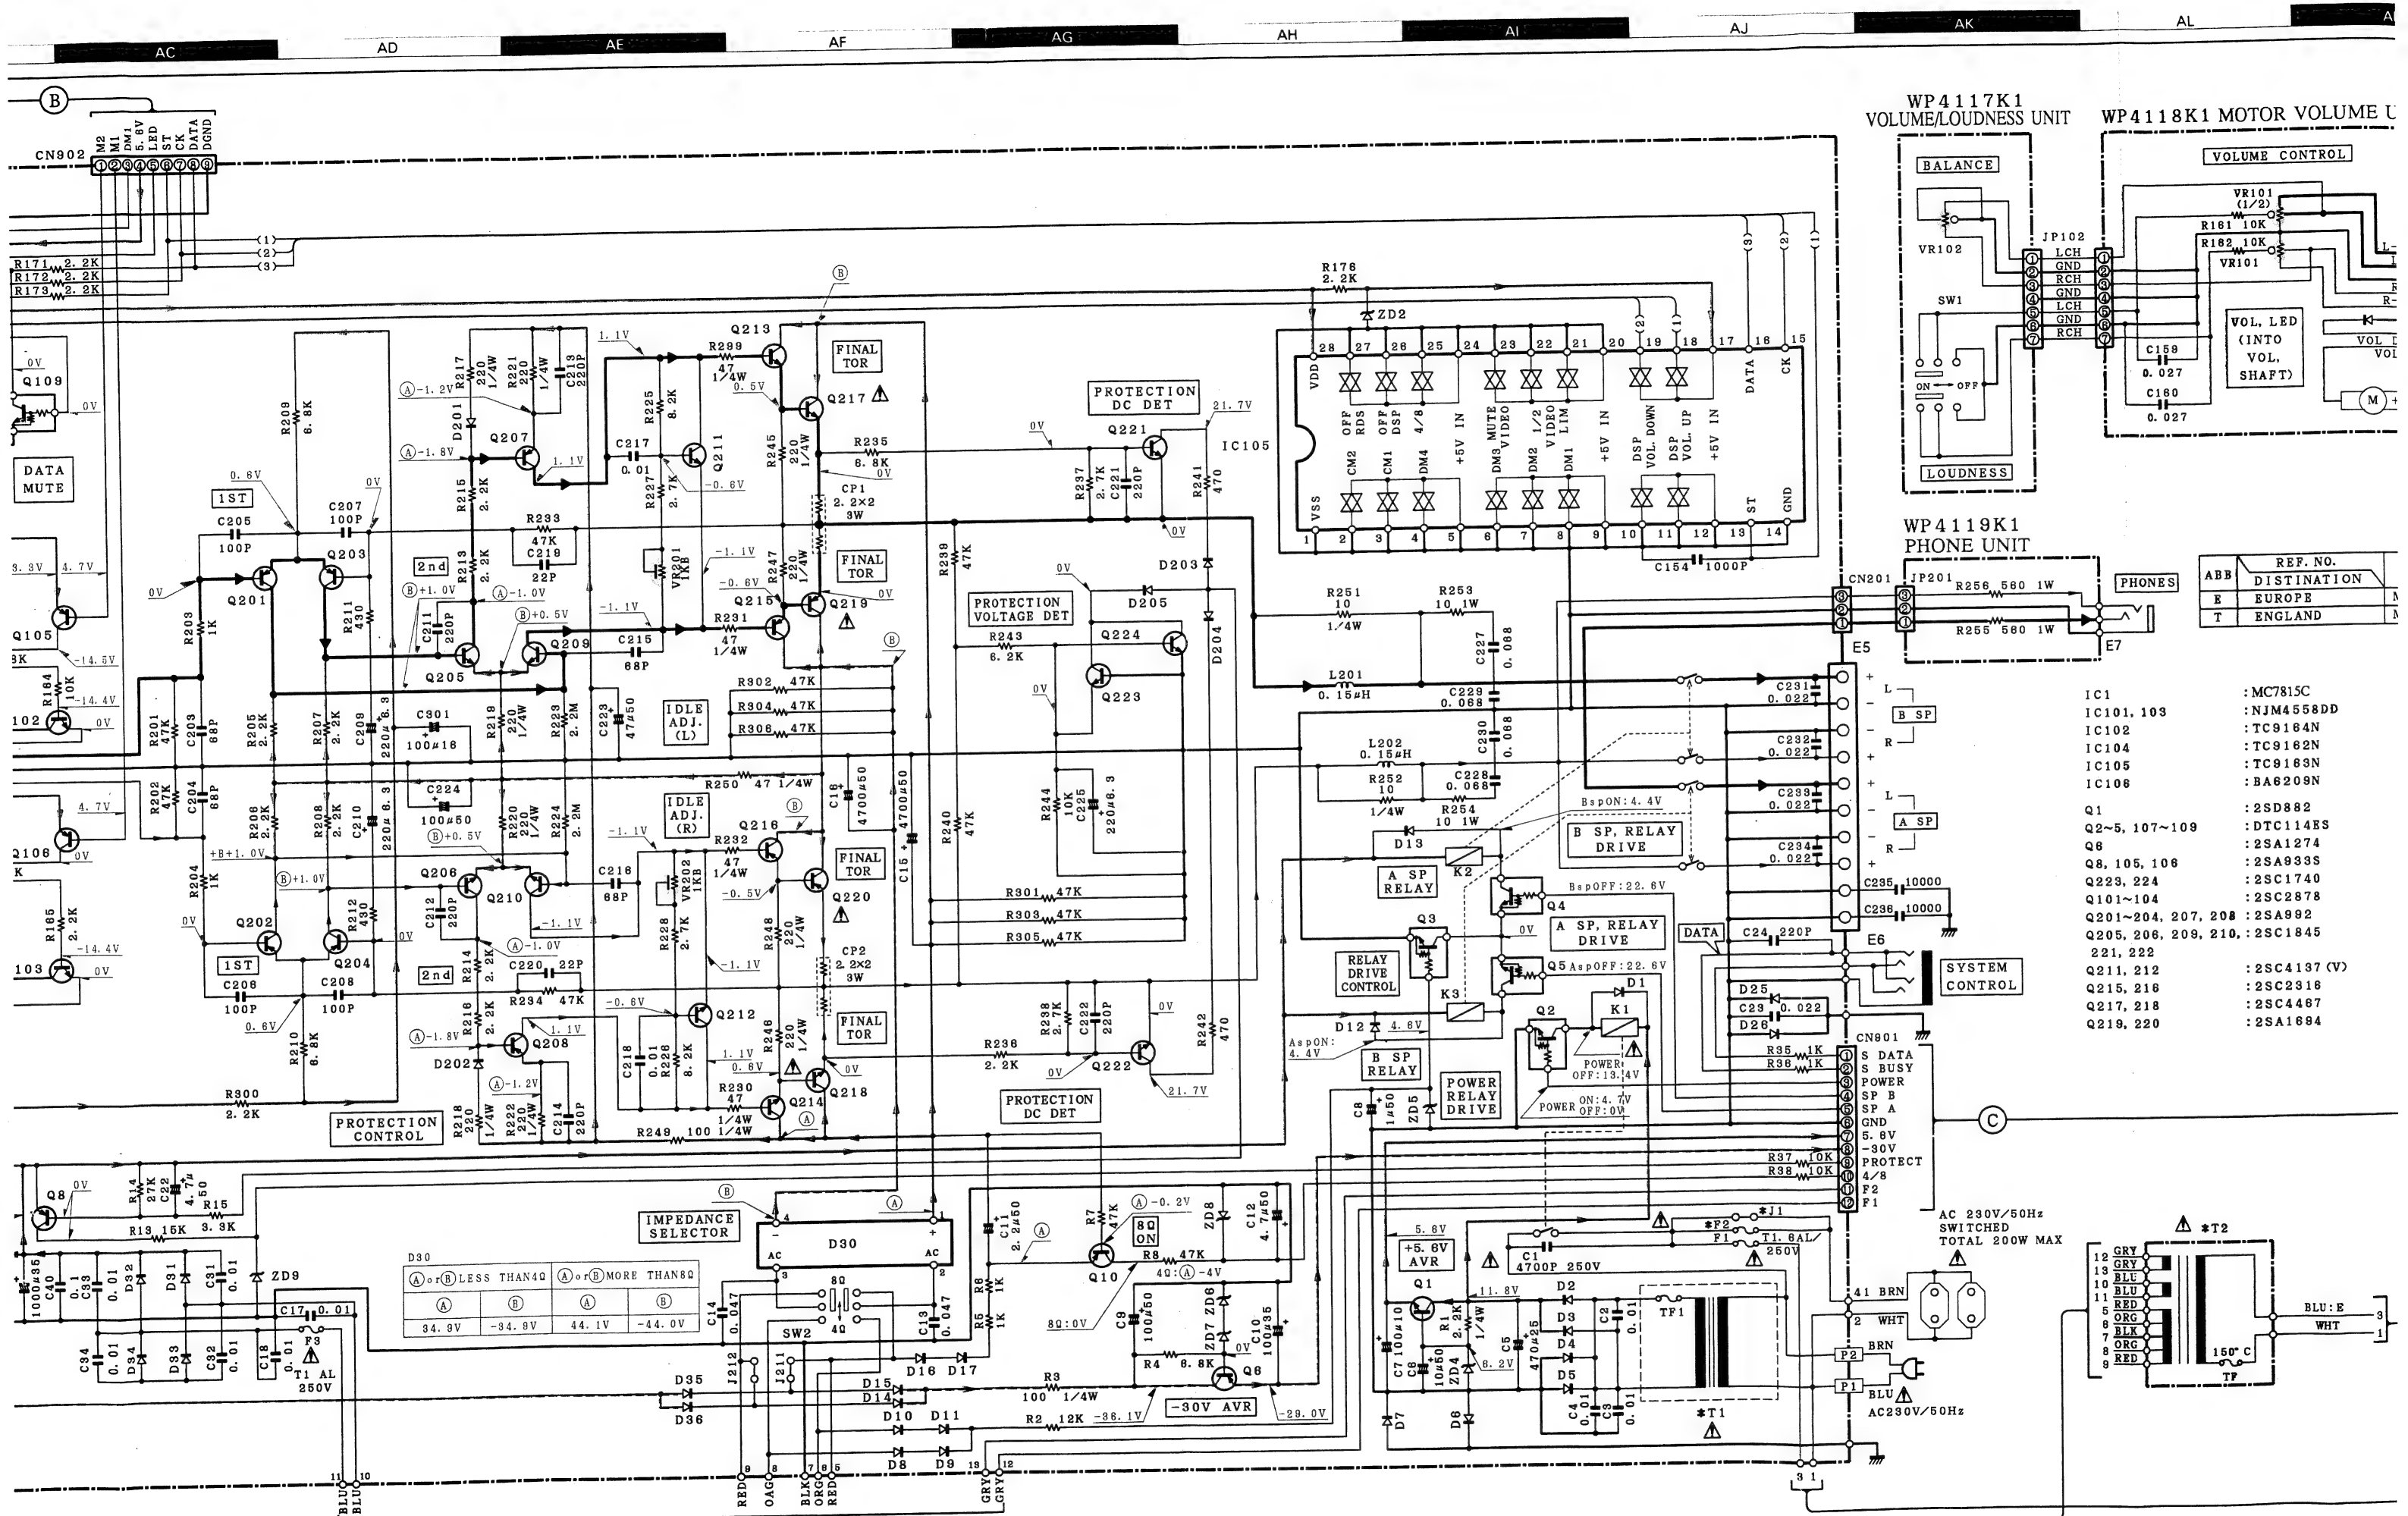

WP4117K1 VOLUME/LOUDNESS UNIT
WP4118K1 MOTOR VOLUME U

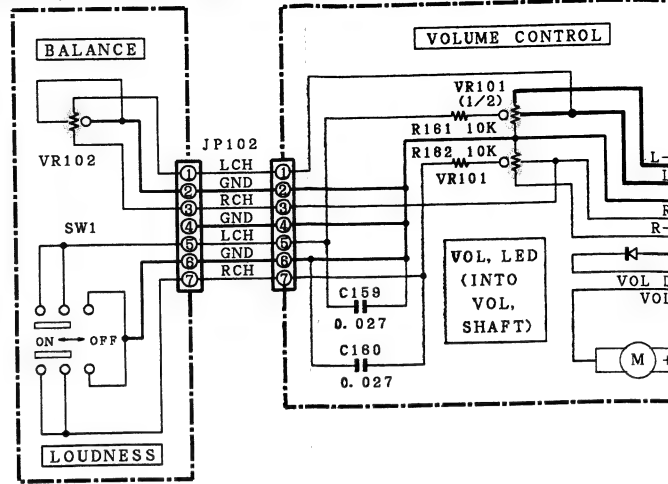

WP4119K1 PHONE UNIT



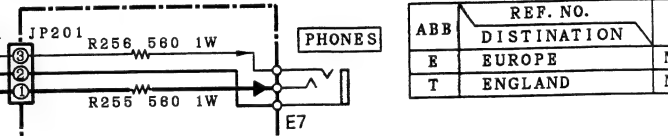


ABB	REF. NO.	DISTINATION
E	EUROPE	
T	ENGLAND	

- IC1 : MC7815C
- IC101, 103 : NJM4558DD
- IC102 : TC9164N
- IC104 : TC9162N
- IC105 : TC9163N
- IC108 : BA6209N
- Q1 : 2SD882
- Q2~5, 107~109 : DTC114ES
- Q8 : 2SA1274
- Q8, 105, 106 : 2SA933S
- Q223, 224 : 2SC1740
- Q101~104 : 2SC2878
- Q201~204, 207, 208 : 2SA992
- Q205, 206, 209, 210 : 2SC1845
- 221, 222 : 2SC4137 (V)
- Q211, 212 : 2SC2316
- Q215, 216 : 2SC4467
- Q217, 218 : 2SA1694
- Q219, 220 : 2SA1694

AC 230V/50Hz
SWITCHED
TOTAL 200W MAX

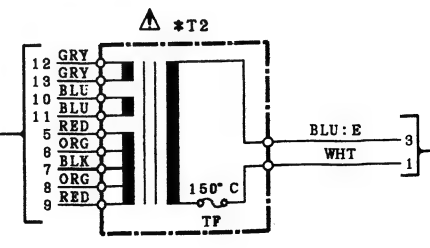

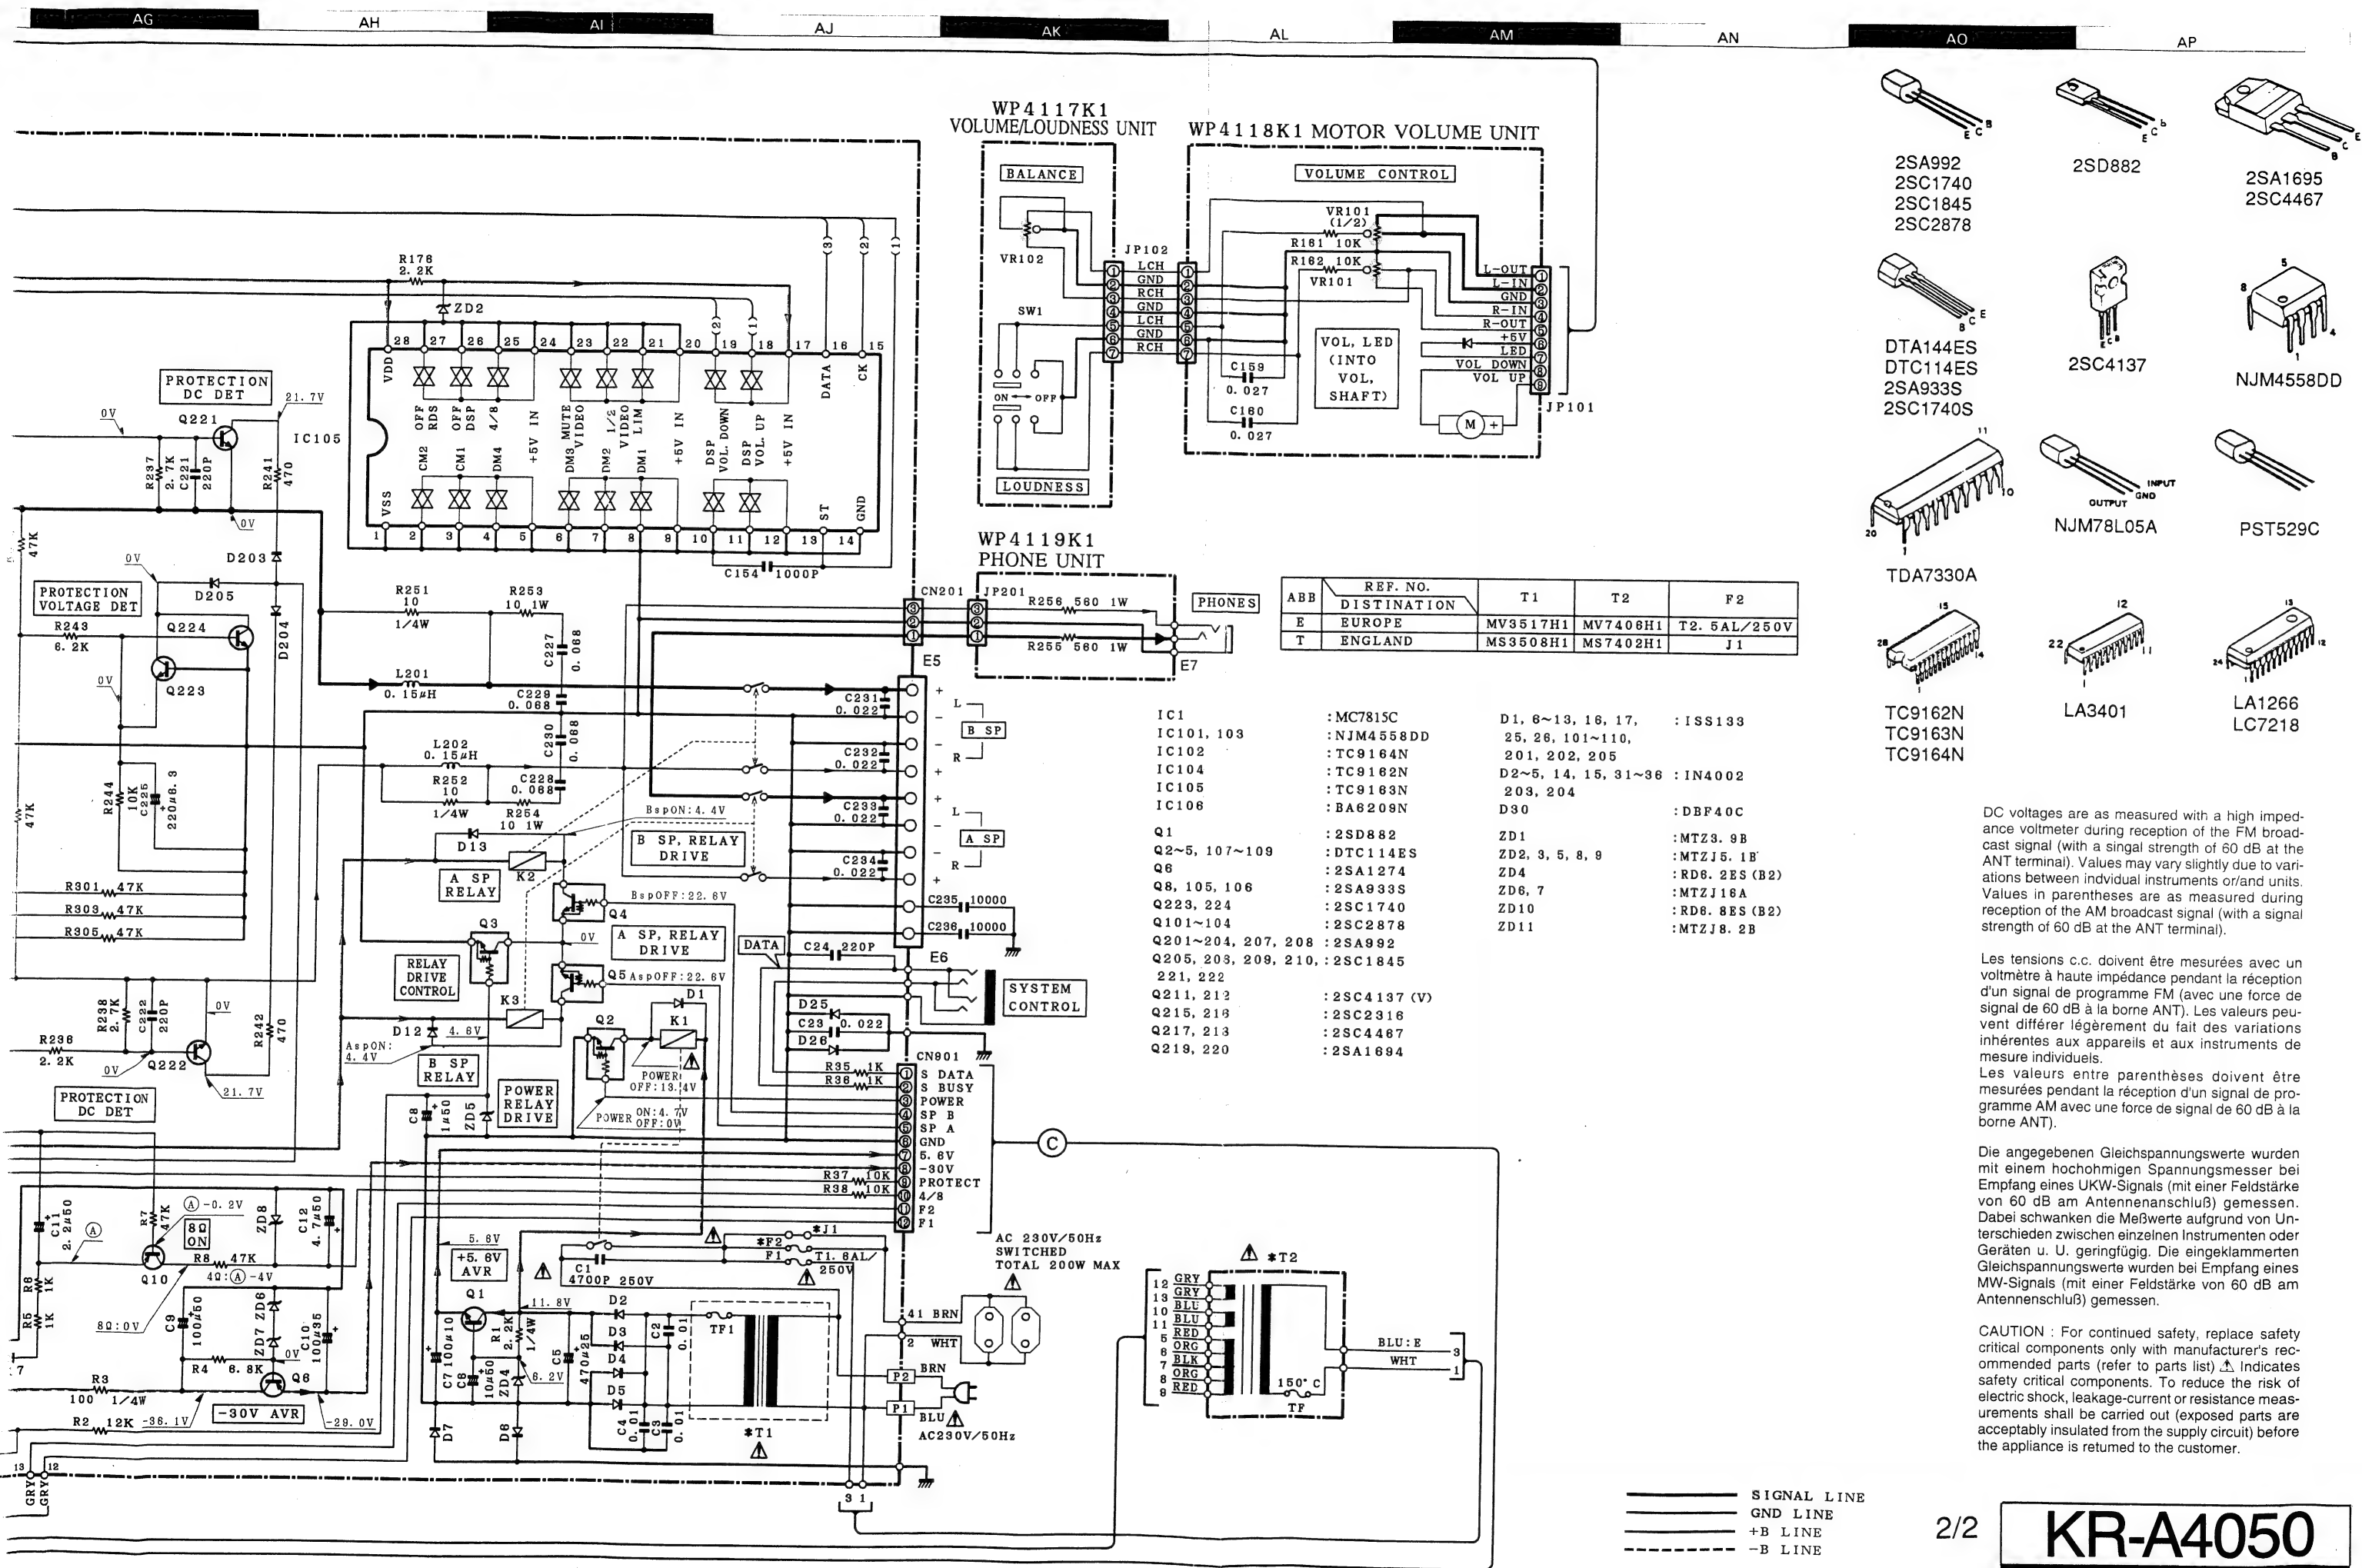

MAIN UNIT WP4121K1

JP801

CN101

CN902

UP: 4.8V
DOWN: 8.2V

UP: 4.2V
DOWN: 4.7V

UP: 4.2V
DOWN: 4.7V

PHONO

CD

REC

TAPE1

PLAY

REC

TAPE2 (MONITOR)

PLAY

VIDEO1

PLAY IN

VIDEO2

PLAY IN

TO FRONT UNIT JP804
TO FRONT UNIT JP802
TO FRONT UNIT JP801
TO TUNER UNIT CN801

VOL. MOTOR DRIVE

INPUT SELECTOR

LINE BUFFER 14.9V

SELECTOR REC. TONE ON/OFF

+15V AVR

PROTECTION CONTROL

IMPEDANCE SELECTOR

D30		A or B LESS THAN 4Q		A or B MORE THAN 8Q	
A	B	A	B	A	B
34.9V	-34.9V	44.1V	-44.0V		

CN904

A


C

 
RED

OAG

BLK

ORG

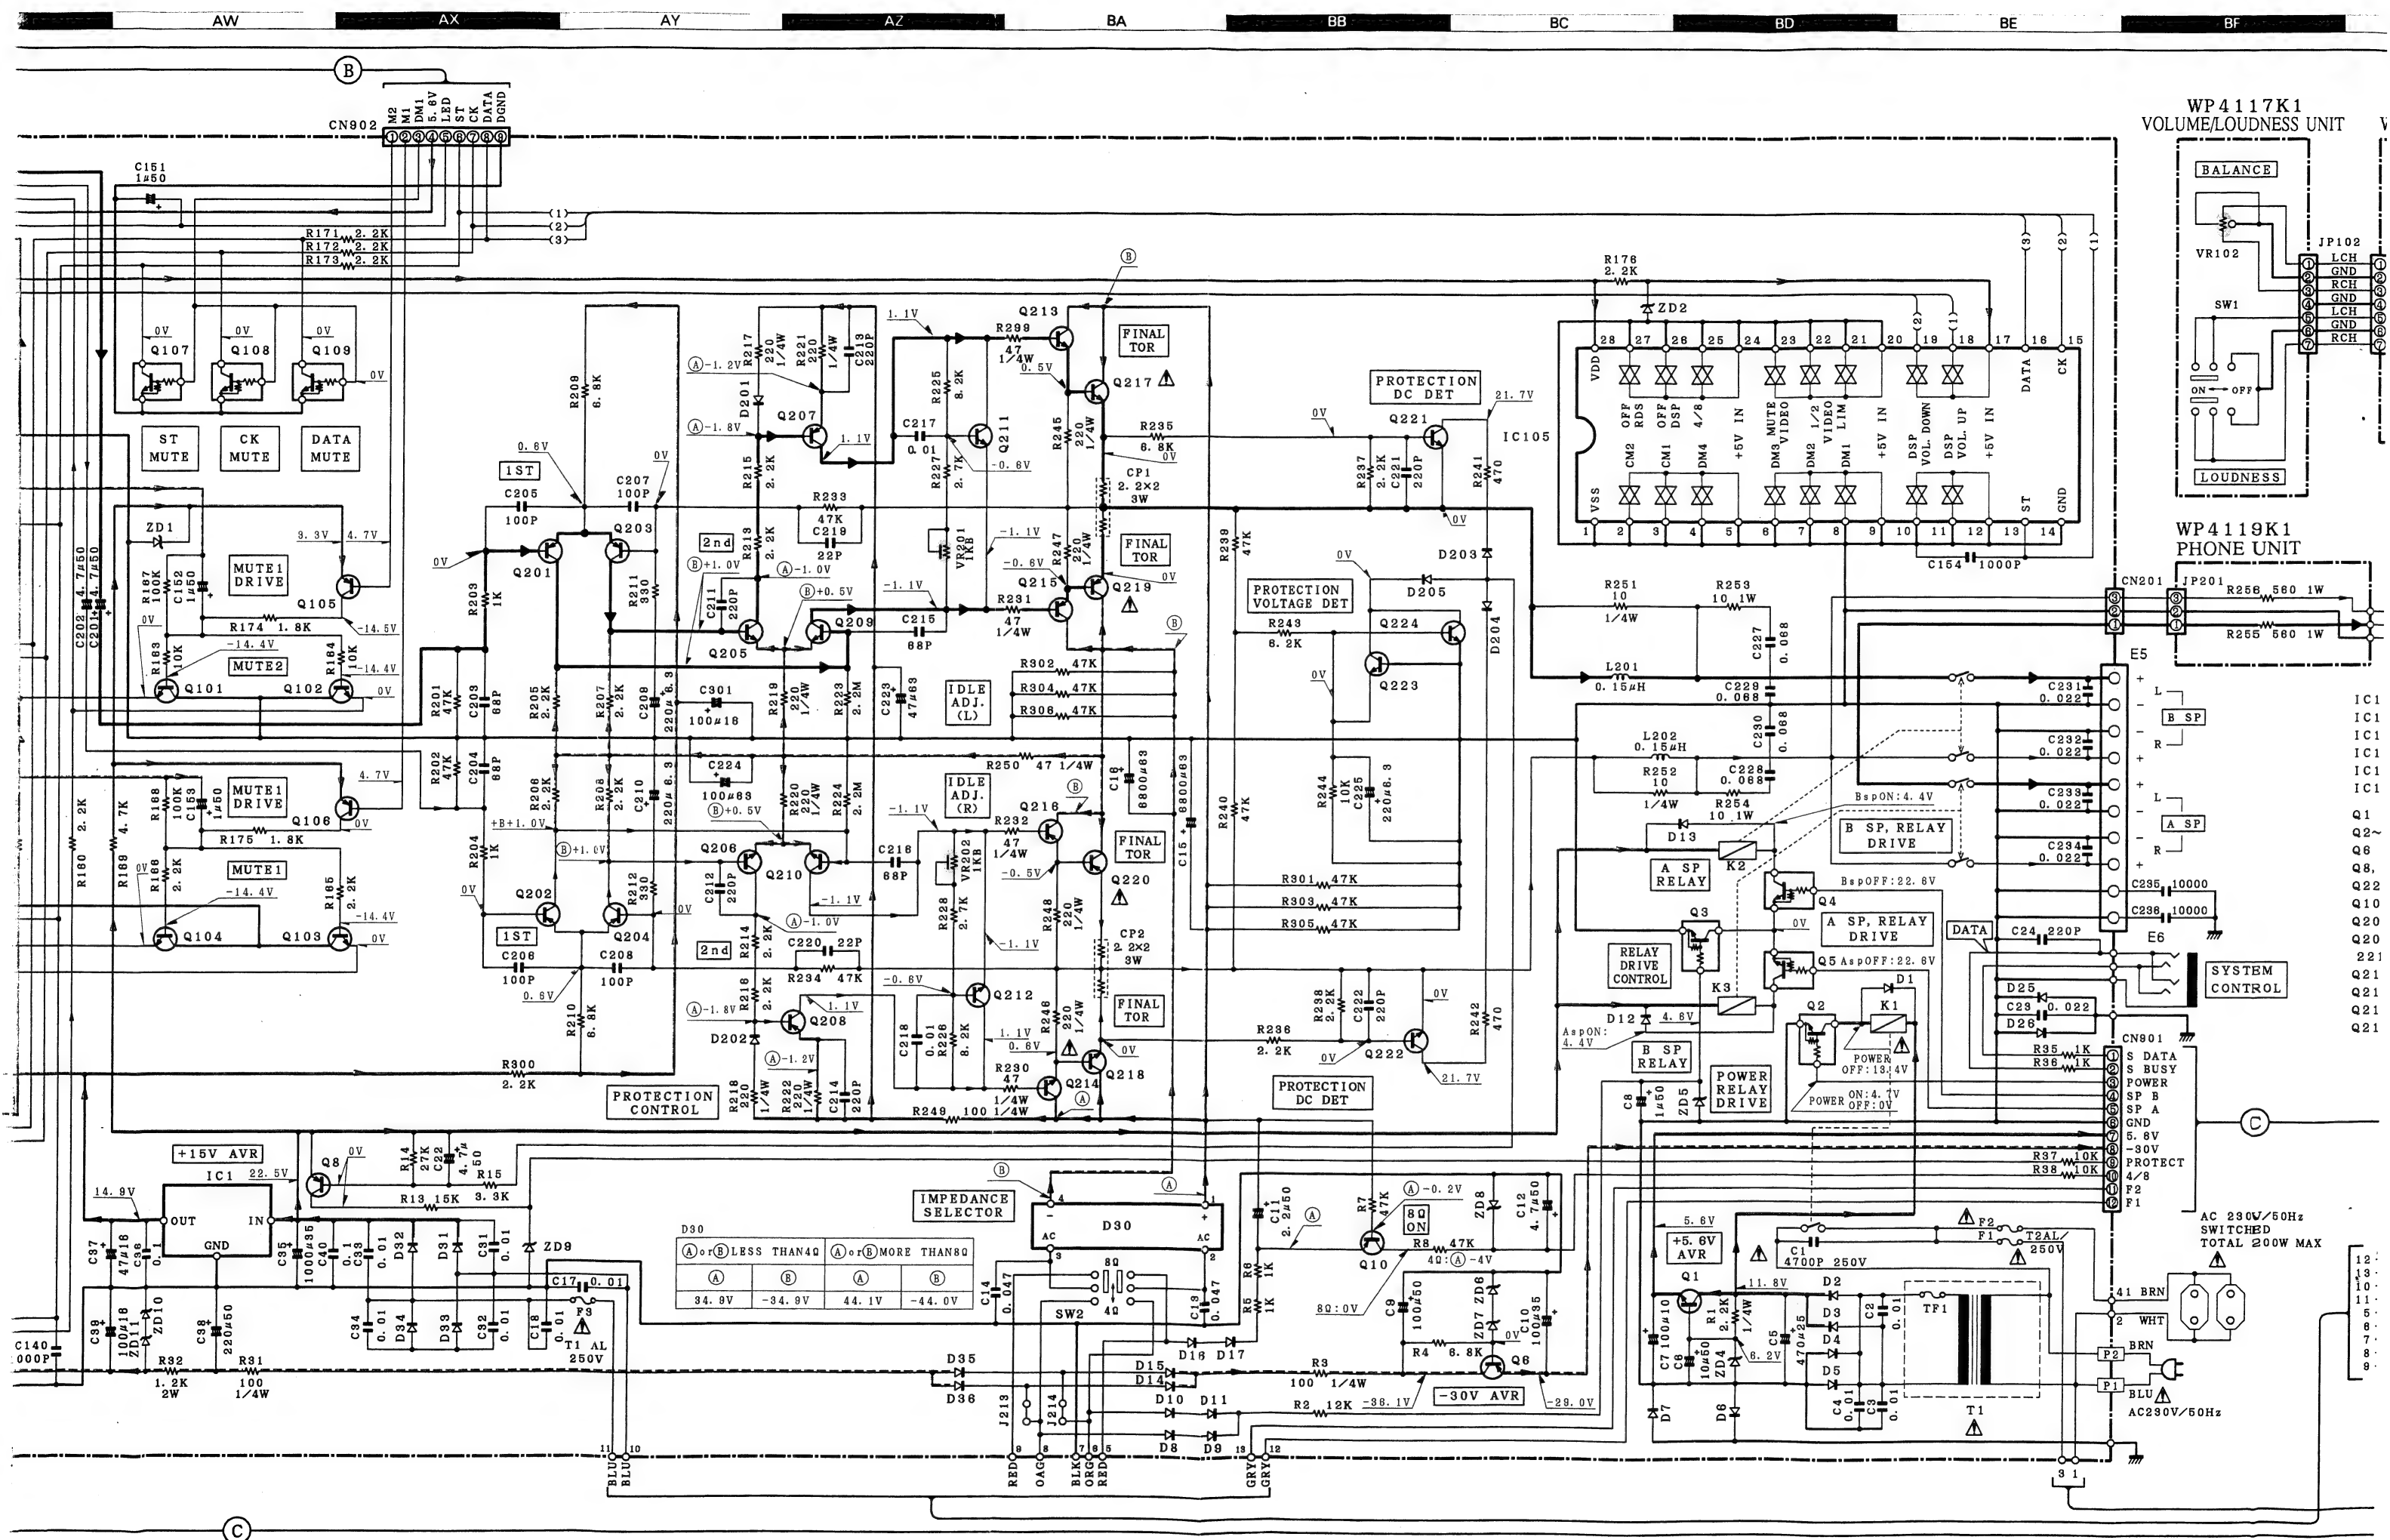




KR-A4050/5050

KR-A4050/5050

EXPLODED VIEW (UNIT)

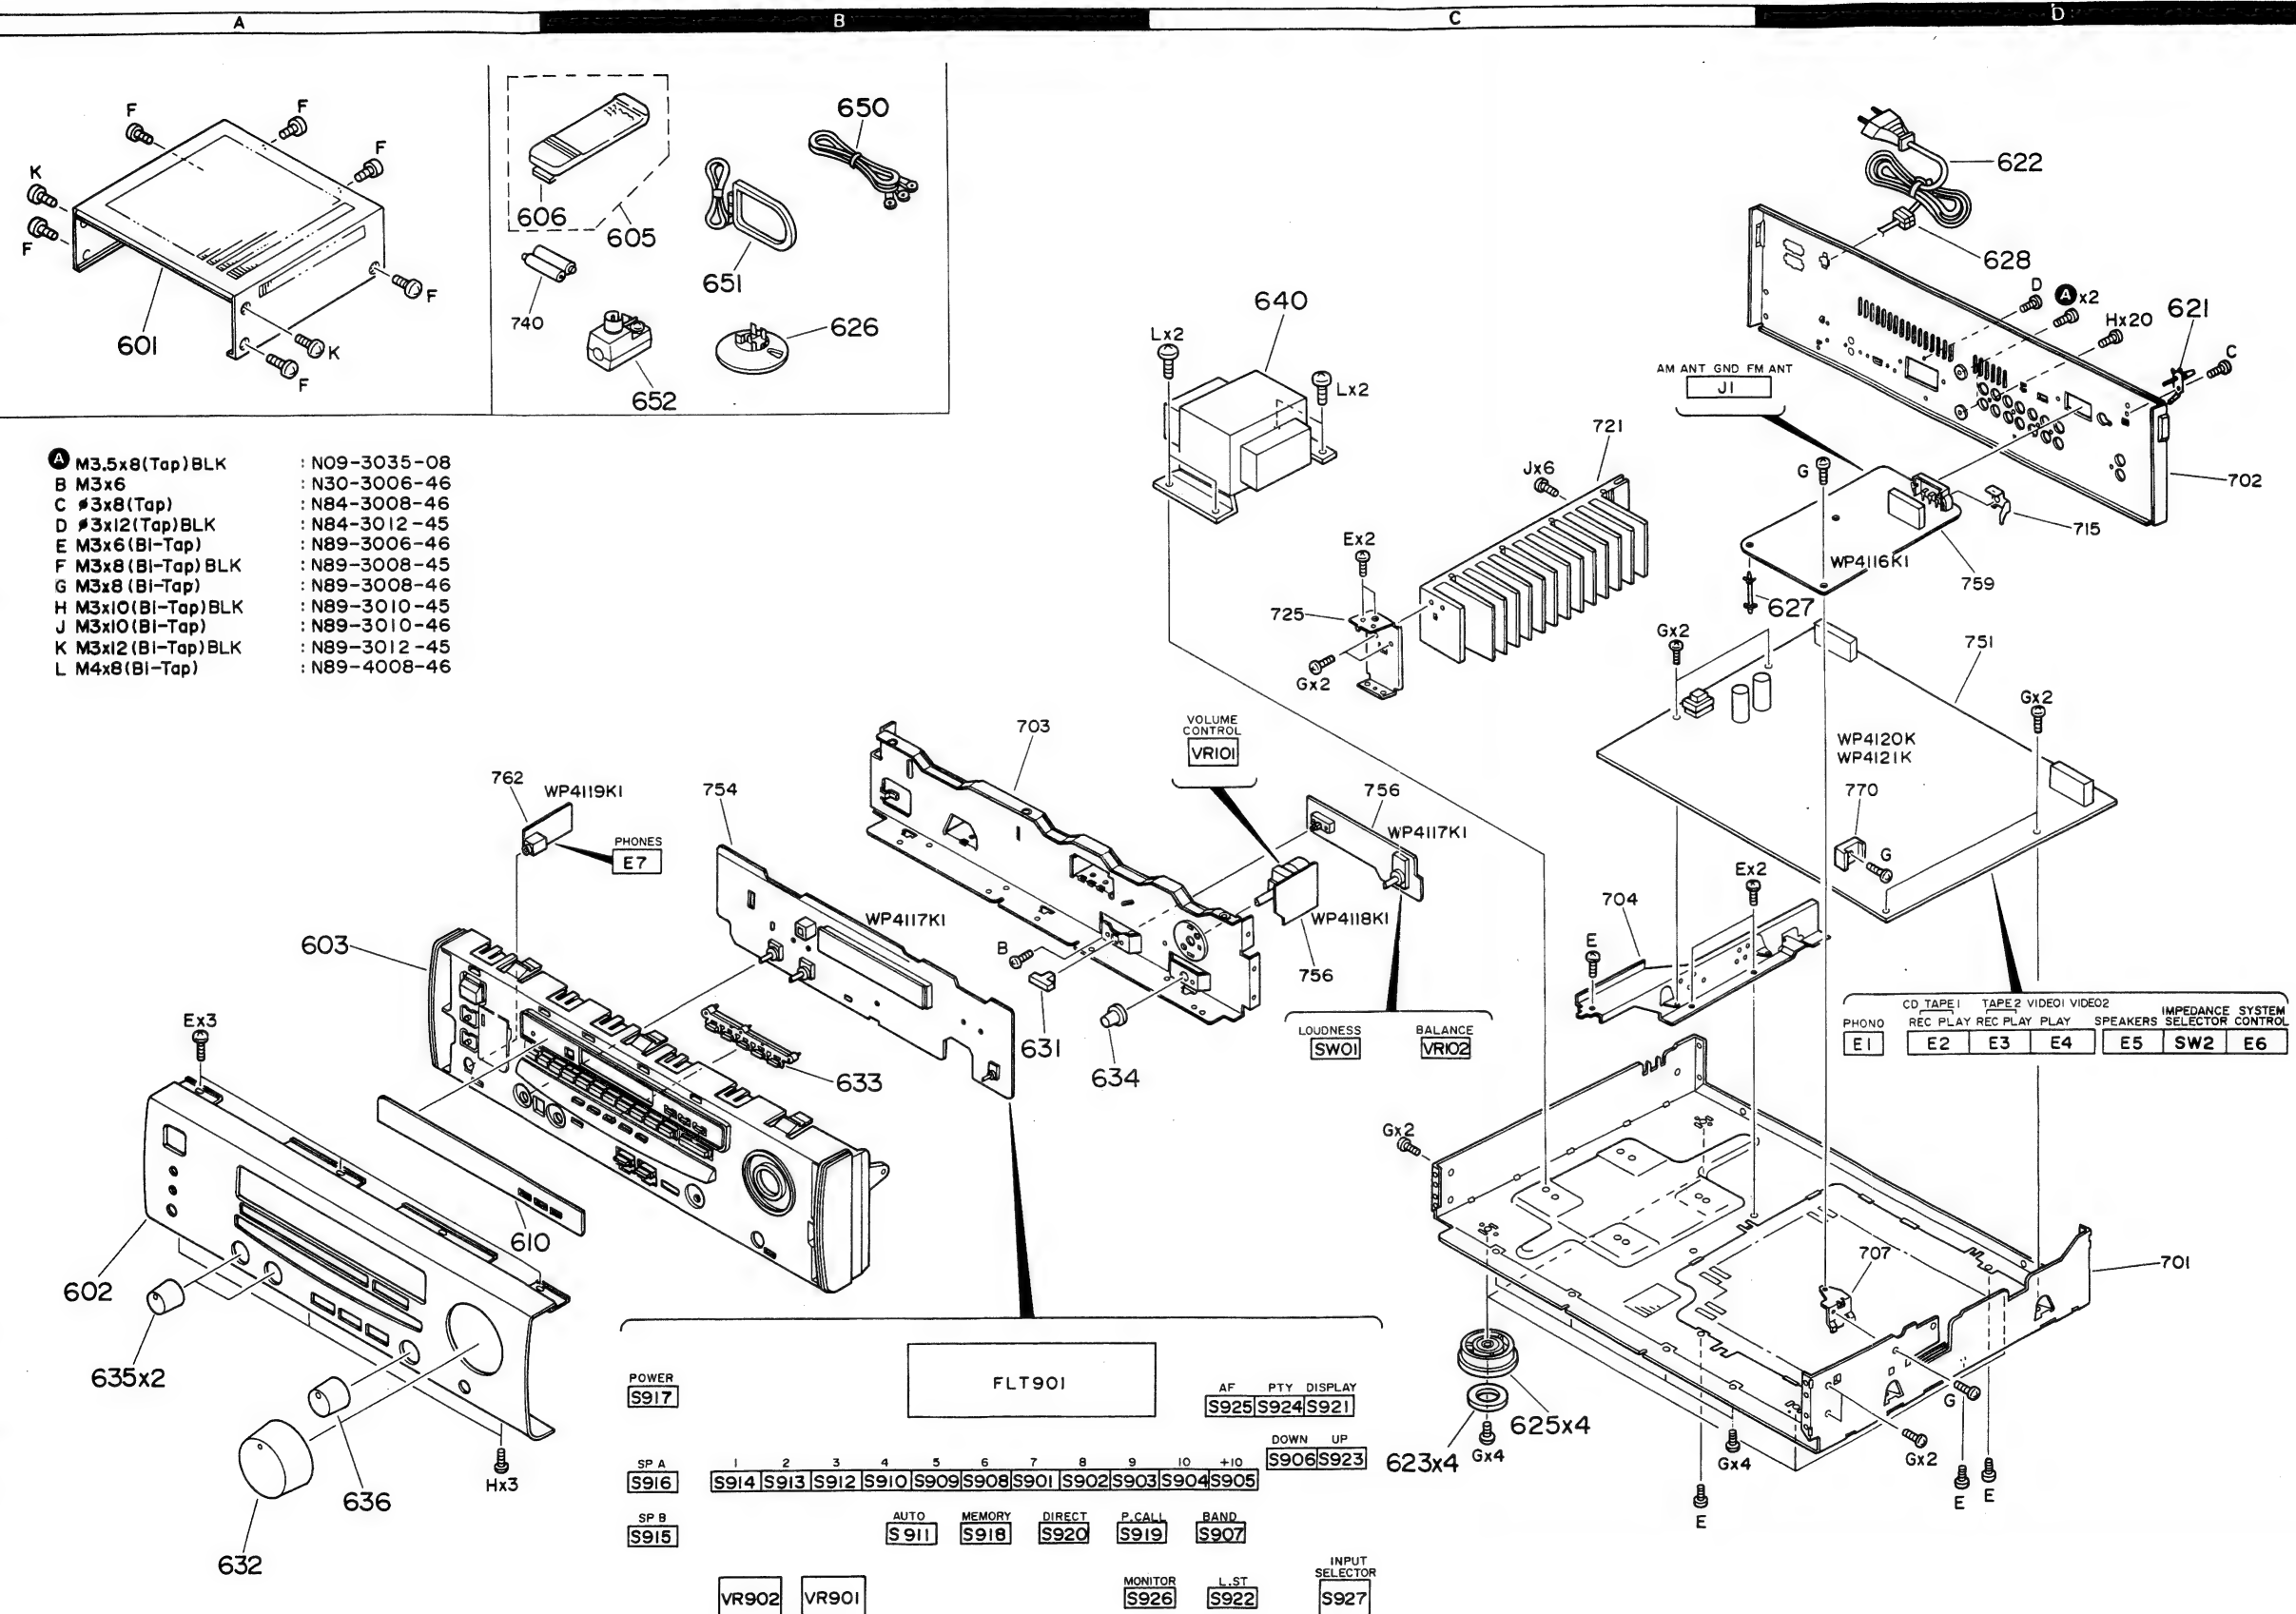

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.1

Ref. No.	Address	New Parts	Parts No.	Description	Desti- nation	Re- marks
参照番号	位置	新	部品番号	部品名 / 規格	仕	向備考
KR-A4050						
601	1A	*	A01-3091-08	METALIC CABINET		
602	3A	*	A60-0517-08	FRONT PANEL		
603	2A	*	A22-1668-08	SUB PANEL		
605	1B	*	A70-0953-08	REMOCON		
606	1A	*	A09-0088-01	BATTERY COVER		
610	3A	*	B10-2008-08	FRONT GRASS		
-	-	-	B46-0122-23	WARRANTY CARD		
-	-	-	B46-0143-13	WARRANTY CARD		
-	-	*	B60-1284-08	INSTRUCTION MANUAL (SPANISH)		
-	-	*	B60-1287-08	INSTRUCTION MANUAL (ENGLISH)		
-	-	*	B60-1288-08	INSTRUCTION MANUAL (FR,GE,DU)		
-	-	*	CK45B2H103Z	CERAMIC 0.010UF Z		
621	1D		E21-0023-08	GND TERMINAL		
622	1D		E30-0459-05	AC CORD		
622	1D		E30-2718-05	AC CORD		
AS01	1D		E03-0055-05	AC OUTLET		
AS01	1D		E03-0085-05	AC OUTLET		
623	3C	*	G13-0297-08	CUSHION		
-	-	*	H10-5661-08	POLYSTEREN FORMED FIXTUE		
-	-	*	H50-0728-08	CARTON BOX		
-	-	*	H25-0647-08	PROTECTION BAG		
-	-	*	H25-1505-08	PROTECTION BAG		
-	-	*	H25-1506-08	PROTECTION BAG		
625	3C	*	J02-1099-08	FOOT ASSY		
626	1B	*	J19-2815-04	ANTENNA HOLDER		
627	1C	*	J19-3631-08	UNIT HOLDER		
628	1D	*	J42-0199-08	AC CORD BUSHING		
631	2B		K27-2105-08	KNOB PUSH		
632	3A		K27-2107-08	KNOB VOLUME		
633	2B	*	K27-2110-08	KNOB FUNCTION		
634	2B	*	K29-4444-08	KNOB BALANCE		
635	3A	*	K29-4445-08	KNOB CONTROL		
636	3A	*	K27-2111-08	KNOB SELECTOR		
640	1C	*	L07-0823-08	POWER TRANSFORMER		
640	1C	*	L07-0824-08	POWER TRANSFORMER		
A	1D	*	N09-3035-08	TAPTITE SCREW		
B	2B		N30-3006-46	PAN HEAD MACHIN SCREW		
C	1D		N84-3008-46	BINDING HEAD TAPTITE SCREW		
D	1D	*	N84-3012-45	BINDING HEAD TAPTITE SCREW		
E	2C	*	N89-3006-46	BINDING HEAD TAPTITE SCREW		
F	1A		N89-3008-45	BINDING HEAD TAPTITE SCREW		
G	3C,3D		N89-3008-46	BINDING HEAD TAPTITE SCREW		
H	3A,1D		N89-3010-45	BINDING HEAD TAPTITE SCREW		
J	1C		N89-3010-46	BINDING HEAD TAPTITE SCREW		
K	1A		N89-3012-45	BINDING HEAD TAPTITE SCREW		
L	1C		N89-4008-46	BINDING HEAD TAPTITE SCREW		
650	1B		T90-0176-05	T TYPE ANTENNA		
651	1B		T90-0184-08	LOOP ANTENNA		
652	1B		T90-0185-05	ANTENNA ADAPTER		

L:Scandinavia

K:USA

P:Canada

Y:PX(Far East, Hawaii)

T:England

E:Europe

Y:AFES(Europe)

X:Australia

M:Other Areas

A indicates safety critical components

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.2

Ref. No.	Address	New Parts	Parts No.	Description	Desti- nation	Re- marks
参照番号	位置	新	部品番号	部品名 / 規格	仕	向備考
KR-A5050						
601	1A	*	A01-3091-08	METALIC CABINET		
602	3A	*	A60-0518-08	FRONT PANEL		
603	2A	*	A22-1668-08	SUB PANEL		
605	1B	*	A70-0953-08	REMOCON		
606	1A	*	A09-0088-01	BATTERY COVER		
610	3A	*	B10-2008-08	FRONT GRASS		
-	-	-	B46-0122-23	WARRANTY CARD		
-	-	*	B60-1287-08	INSTRUCTION MANUAL (ENGLISH)		
-	-	*	B60-1288-08	INSTRUCTION MANUAL (FR,GE,DU)		
-	-	*	B60-1289-08	INSTRUCTION MANUAL (ITALIAN)		
621	1D		E21-0023-08	GND TERMINAL		
622	1D		E30-0459-05	AC CORD		
AS01	1D		E03-0055-05	AC OUTLET		
623	3C	*	G13-0297-08	CUSHION		
-	-	*	H10-5661-08	POLYSTEREN FORMED FIXTUE		
-	-	*	H50-0729-08	CARTON BOX		
-	-	*	H25-0647-08	PROTECTION BAG		
-	-	*	H25-1505-08	PROTECTION BAG		
-	-	*	H25-1506-08	PROTECTION BAG		
625	3C	*	J02-1099-08	FOOT ASSY		
626	1B	*	J19-2815-04	ANTENNA HOLDER		
627	1C	*	J19-3631-08	UNIT HOLDER		
628	1D	*	J42-0199-08	AC CORD BUSHING		
631	2B		K27-2105-08	KNOB PUSH		
632	3A		K27-2107-08	KNOB VOLUME		
633	2B	*	K27-2110-08	KNOB FUNCTION		
634	2B	*	K29-4444-08	KNOB BALANCE		
635	3A	*	K29-4445-08	KNOB CONTROL		
636	3A	*	K27-2111-08	KNOB SELECTOR		
640	1C	*	L07-0568-08	POWER TRANSFORMER		
A	1D	*	N09-3035-08	TAPTITE SCREW		
B	2B		N30-3006-46	PAN HEAD MACHIN SCREW		
C	1D		N84-3008-46	BINDING HEAD TAPTITE SCREW		
D	1D	*	N84-3012-45	BINDING HEAD TAPTITE SCREW		
E	2C	*	N89-3006-46	BINDING HEAD TAPTITE SCREW		
F	1A		N89-3008-45	BINDING HEAD TAPTITE SCREW		
G	3C,3D		N89-3008-46	BINDING HEAD TAPTITE SCREW		
H	3A,1D		N89-3010-45	BINDING HEAD TAPTITE SCREW		
J	1C	*	N89-3010-46	BINDING HEAD TAPTITE SCREW		
K	1A		N89-3012-45	BINDING HEAD TAPTITE SCREW		
L	1C		N89-4008-46	BINDING HEAD TAPTITE SCREW		
650	1B		T90-0176-05	T TYPE ANTENNA		
651	1B		T90-0184-08	LOOP ANTENNA		
652	1B		T90-0185-05	ANTENNA ADAPTER		
MAIN UNIT (WP4121K1) / PHONE UNIT (WP4119K1)						
C1	-		KHR-0M4726M6	CERAMIC 4700PF 125V		
C2	-		CK45FF1H103Z	CERAMIC 0.010UF Z		
C5	-		KHR-PE0417D0	ELECTRO 470UF 25WV		
C6	-		CE04KW1H100M	ELECTRO 10UF 50WV		
C7	-		CE04KW1A101M	ELECTRO 100UF 10WV		

L:Scandinavia

K:USA

P:Canada

Y:PX(Far East, Hawaii)

T:England

E:Europe

Y:AFES(Europe)

X:Australia

M:Other Areas

A indicates safety critical components

PARTS LIST

KR-A4050/5050

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.3

Ref. No.	Address	New Parts	Parts No.	Description	Desti- nation	Re- marks
参照番号	位置	新	部品番号	部品名 / 規格	仕	向備考
C8			CE04KW1H010M	ELECTRO 1.0UF 50WV		
C9			CE04KW1H010M	ELECTRO 100UF 50WV		
C10			CE04KW1V101M	ELECTRO 100UF 35WV		
C11			CE04KW1H2R2M	ELECTRO 2.2UF 50WV		
C12			CE04KW1H4R7M	ELECTRO 4.7UF 50WV		
C13,14			CK45F1H473Z	CERAMIC 0.047UF Z		
C15,16			KHR-PE0221G1	ELECTRO 4700UF 50WV		
C17,18			KHR-PE0222H1	ELECTRO 6800UF 63WV		
C22			CK45FF1H103Z	CERAMIC 0.010UF Z		
			CE04KW1H4R7M	ELECTRO 4.7UF 50WV		
C23			CK45FF1H223Z	CERAMIC 0.022UF Z		
C24			CC45CH1H221J	CERAMIC 220PF J		
C31-34			CK45FF1H103Z	CERAMIC 0.010UF Z		
C35		*	KHR-PE0418E1	ELECTRO 1000UF 35WV		
C36			CK45FF1H104Z	CERAMIC 0.10UF Z		
C37			CE04KW1C470M	ELECTRO 47UF 16WV		
C38		*	KHR-PE0415G1	ELECTRO 220UF 50WV		
C39			CE04KW1C101M	ELECTRO 100UF 16WV		
C40			CK45FF1H104Z	CERAMIC 0.10UF Z		
C101,102			CE04KW1H4R7M	ELECTRO 4.7UF 50WV		
C103-106		*	CC45CH1H102J	CERAMIC 1000PF J		
C107,108			CE04KW1A101M	ELECTRO 100UF 10WV		
C109,110			CQ92FM1H332J	MYLAR 3300PF J		
C111,112			CQ92FM1H123J	MYLAR 0.012UF J		
C113,114			CE04KW1H4R7M	ELECTRO 4.7UF 50WV		
C115			CK45FF1H103Z	CERAMIC 0.010UF Z		
C117,118			CK45FF1H104Z	CERAMIC 0.10UF Z		
C119-128			CC45CH1H221J	CERAMIC 220PF J		
C131-134			CC45CH1H221J	CERAMIC 220PF J		
C135,136			CE04KW1C470M	ELECTRO 47UF 16WV		
C137			CC45CH1H221J	CERAMIC 220PF J		
C138,139		*	CC45SL1H101J	CERAMIC 1000PF J		
C140			CC45CH1H102J	CERAMIC 1000PF J		
C141,142			CE04KW1H4R7M	ELECTRO 4.7UF 50WV		
C143-146			CC45CH1H221J	CERAMIC 220PF J		
C147,148			CE04KW1V100M	ELECTRO 10UF 35WV		
C149,150			CK45FF1H103Z	CERAMIC 0.010UF Z		
C151-153			CE04KW1H101M	ELECTRO 1.0UF 50WV		
C154		*	CC45CH1H102J	CERAMIC 1000PF J		
C155			CK45FF1H104Z	CERAMIC 0.10UF Z		
C156			CE04KW1C101M	ELECTRO 100UF 16WV		
C201,202			CE04KW1H4R7M	ELECTRO 4.7UF 50WV		
C203,204			CC45SL1H680J	CERAMIC 68PF J		
C205-208			CC45SL1H101J	CERAMIC 1000PF J		
C209,210			CE04KW0J221M	ELECTRO 220UF 6.3WV		
C211,212			CC45CH1H221J	CERAMIC 220PF J		
C213,214			CC45CH1H221J	CERAMIC 220PF J		
C215,216			CC45SL1H680J	CERAMIC 68PF J		
C217,218			CK45FF1H103Z	CERAMIC 0.010UF Z		
C219,220			CC45CH1H220J	CERAMIC 22PF J		
C221,222			CC45CH1H221J	CERAMIC 220PF J		
C223			CE04KW1H470M	ELECTRO 47UF 50WV		
C224			CE04KW1J470M	ELECTRO 47UF 63WV		
C224		*	CE04KW1H101M	ELECTRO 100UF 50WV		
C224			KHR-PE0414H1	ELECTRO 100UF 63WV		

L:Scandinavia

K:USA

P:Canada

Y:PX(Far East, Hawaii)

T:England

E:Europe

Y:AFES(Europe)

X:Australia

M:Other Areas

A indicates safety critical components

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.4

Ref. No.	Address	New Parts	Parts No.	Description	Desti- nation	Re- marks
参照番号	位置	新	部品番号	部品名 / 規格	仕	向備考
C225			CE04KW0J221M	ELECTRO 220UF 6.3WV		
C227-230			CQ92FM1H683J	MYLAR 0.068UF J		
C231-234			CK45FF1H223Z	CERAMIC 0.022UF Z		
C235, 236		*	CK45CH1H103J	CERAMIC 0.010UF J		
C301			CE04KW1C101M	ELECTRO 100UF 16WV		
CP1, 2			KHR-RTOR25K0	MULTI-COMP 2.2K2 3W		
E1			E13-0249-05	PHONE JACK PHONE		
E2			E13-0633-05	PHONE JACK CD, TAPE1		
E3, 4			E13-0445-05	PHONE JACK TAPE2, VIDEO1, 2		
E5			E70-0004-08	LOCK TERMINAL BOARD SPEAKERS		
E6			E11-0188-05	MINIATUA PHONE JACK SYNCHRO		
E7			E11-0223-08	PHONE JACK HEAD PHONES		
F1			F05-1623-05	FUSE SEMCO T1.6A/250V		
F1			F06-2021-05	FUSE SEMCO T2A/250V		
F2			F05-2525-05	FUSE SEMCO T2.5A/250V		
F3			F06-1022-05	FUSE SEMCO T1A/250V		
-			J13-0084-08	FUSE CLIP		
L201, 202			L39-1303-08	INDUCTOR 0.15UH		
L302		*	L33-0379-08	INDUCTOR 22UH		
T1		*	L07-0825-08	TRANSFORMER		
T1		*	L07-0828-08	TRANSFORMER		
G	IC		N89-3008-46	BINDING HEAD TAPTITE SCREW		
R3			RD14GB2E101J	FL-PROOF RD 100 J 1/4W		
R31			RD14GB2E101J	FL-PROOF RD 100 J 1/4W		
R32			RS14DB3D122J	FL-PROOF RS 1.2K J 2W		
R177			RD14GB2E100J	FL-PROOF RD 10 J 1/4W		
R217-222			RD14GB2E221J	FL-PROOF RD 220 J 1/4W		
R229-232			RD14GB2E470J	FL-PROOF RD 47 J 1/4W		
R245-248			RD14GB2E221J	FL-PROOF RD 220 J 1/4W		
R249			RD14GB2E101J	FL-PROOF RD 100 J 1/4W		
R250			RD14GB2E470J	FL-PROOF RD 47 J 1/4W		
R253, 254			RS14DB3A100J	FL-PROOF RS 10 J 1W		
R255, 256			RS14DB3A561J	FL-PROOF RS 560 J 1W		
VR201, 202			R12-1066-05	TRIM POT. 1KB IDLE ADJ		
K1		*	S76-0034-08	MAGNETIC RELAY		
K2, 3		*	S76-0035-08	MAGNETIC RELAY		
SW2			S62-0032-08	SLIDE SWITCH IMPEDANCE SELECT		
D1			1SS133	DIODE		
D2 -5			1N4002	DIODE		
D6 -13			1SS133	DIODE		
D14, 15			1N4002	DIODE		
D16, 17			1SS133	DIODE		
D25, 26			1SS133	DIODE		
D30			DBF40C	DIODE		
D30			DBF60C	DIODE		
D31 -36			1N4002	DIODE		
D101-110			1SS133	DIODE		
D201, 202			1SS133	DIODE		
D203, 204			1N4002	DIODE		
D205			1SS133	DIODE		
IC1			MC7815C	IC(VOLTAGE REGULATOR/+15)		

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.5

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
IC101 IC102 IC103 IC104 IC105			NJM4558DD TC9164N NJM4558DD TC9162N TC9163N	IC(OP AMP X2) IC(16CH BILATERAL SELECTOR SW) IC(OP AMP X2) IC(ANALOG SWITCH ARRAY) IC(BILATERAL SWITCH X16)		
IC106 Q1 Q2 -5 Q6 Q8		*	BA6209N 2SD862 DTC114ES 2SA1274 2SA933S	IC(MOTOR DRIVER) TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR		
Q10 Q101-104 Q105,106 Q107-109 Q201-204			2SA933S 2SC2878 2SA933S DTC114ES 2SA992	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR		
Q205,206 Q207,208 Q209,210 Q211,212 Q213,214		*	2SC1845 2SA992 2SC1845 2SC4137(V) 2SC2316	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		
Q215,216 Q217,218 Q217,218 Q219,220 Q219,220		*	2SA916 2SC4467 2SC4468 2SA1694 2SA1695	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		4 5 4 5
Q221,222 Q223,224 ZD1 ZD2 ,3 ZD4			2SC1845 2SC1740 MTZ3.9B MTZJ5.1B RD6.2ES(B2)	TRANSISTOR TRANSISTOR ZENER DIODE ZENER DIODE ZENER DIODE		
ZD5 ZD6 ,7 ZD8 ,9 ZD10 ZD11			MTZJ5.1B MTZJ16A MTZJ5.1B RD6.8ES(B2) MTZJ8.2B	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE		
FRONT UNIT(WP4115K1)						
LD901			B30-0413-05	LED(LTL4213(RED))		
C903,904 C905 C906 C907 C908			CE04KW1C330M CE04KW1H4R7M KHR-PX0001N3 CE04KW1A101M CK45F1H103M	ELECTRO 33UF 16WV ELECTRO 4.7UF 50WV BACKUP 0.1F 5.5WV ELECTRO 100UF 10WV CERAMIC 0.010UF M		
C911,912 C913,914 C921,922 C923,924 C925,926			CK45FF1H103Z CK45B1H223K CE04KW1H010M CE04KW1C470M CK45FF1H103Z	CERAMIC 0.010UF Z CERAMIC 0.022UF K ELECTRO 1.0UF 50WV ELECTRO 47UF 16WV CERAMIC 0.010UF Z		
C927,928 C929,930 C931,932 C933,934 C935,936			CQ92FM1H473J CC45SL1H221J CC45SL1H470J CQ92FM1H472J CE04KW1H010M	MYLAR 0.047UF J CERAMIC 220PF J CERAMIC 47PF J MYLAR 4700PF J ELECTRO 1.0UF 50WV		
C937,938 C939,940			CC45SL1H470J CE04KW1H010M	CERAMIC 47PF J ELECTRO 1.0UF 50WV		

L:Scandinavia

K:USA

P:Canada

4 : KR-A4050

5 : KR-A5050

Y:PX(Far East, Hawaii)

T:England

E:Europe

Y:AW L3(Europe)

X:Australia

M:Other Areas

⚠ indicates safety critical components.

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.6

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
C941-944 C946 C950			CE04KW1H100M CK45FF1H103Z CK45F1H103M	ELECTRO 10UF 50WV CERAMIC 0.010UF Z CERAMIC 0.010UF M		
L901 L902 X901		*	L33-0380-08 L40-1091-17 L78-0209-05	INDUCTOR 10UH SMALL FIXED INDUCTOR 1UH RESONATOR 4.19MHz		
VR901,902		*	R06-3078-08	POTENTIOMETER BASS TREBLE		
SW901-926 SW927		*	S70-0008-08 S60-0024-08	TACT SWITCH KEY BOARD ROTARY SWITCH INPUT SELECTOR		
D901-909 D913-932 D933 D934 FLT901		*	1SS133 1SS133 MTZ5.1B MTZ2.7B 10-MT-58GK	DIODE DIODE DIODE ZENER DIODE FLUORESCENT INDICATOR TUBE		
IC901 IC902 IC903 Q901-903 Q904			UPD78044GF-021 PST529C NJM4558DD DTA144ES DTC143ES	IC(8BIT MICROPROCESSOR) IC(SYSTEM RESET) IC(OP AMP X2) DIGITAL TRANSISTOR DIGITAL TRANSISTOR		
Q905,906			2SC1740	TRANSISTOR		
A901			W02-1111-08	FRONT END UNIT		
VOLUME/LOUDNESS UNIT (WP4117K1) / MOTOR VOLUME UNIT (WP4118K1)						
C159,160			CQ92FM1H273J	MYLAR 0.027UF J		
VR101 VR102		*	R29-5082-08 R10-5071-08	POTENTIOMETER 100KBX2 VOLUME POTENTIOMETER BALANCE		
SW1			S40-2376-05	PUSH SWITCH LOUDNESS		
TUNER UNIT(WP4116K1)						
C801 C802,803 C804,805 C806 C807			CC45CH1H330J CK45B1H102K CK45F1H103M CE04KW1C470M CE04KW1H010M	CERAMIC 33PF J CERAMIC 1000PF K CERAMIC 0.010UF M ELECTRO 47UF 16WV ELECTRO 1.0UF 50WV		
C808 C809 C810 C811 C812			CE04KW1C470M CQ92FM1H223J CE04KW1H010M CK45F1H473Z CC45CH1H150J	ELECTRO 47UF 16WV MYLAR 0.022UF J ELECTRO 1.0UF 50WV CERAMIC 0.047UF Z CERAMIC 15PF J		
C813 C814 C815 C816 C817,818			CE04KW1C470M CE04KW1C2R2M CE04KW1C3R3M CK45F1H103M CK45FF1H223Z	ELECTRO 4.7UF 16WV ELECTRO 2.2UF 16WV ELECTRO 3.3UF 16WV CERAMIC 0.010UF M CERAMIC 0.022UF Z		
C819 C820 C821 C822 C823		*	CQ92FM1H153J CK45FF1H223Z CE04KW1C100M CE04KW1C470M CK45F1H103M	MYLAR 0.015UF J CERAMIC 0.022UF Z ELECTRO 10UF 16WV ELECTRO 0.47UF 16WV CERAMIC 0.010UF M		
C824 C825-828 C829			CC45CH1H220J CK45F1H103M CE04KW1C470M	CERAMIC 22PF J CERAMIC 0.010UF M ELECTRO 47UF 16WV		

L:Scandinavia

K:USA

P:Canada

Y:PX(Far East, Hawaii)

T:England

E:Europe

Y:AW L3(Europe)

X:Australia

M:Other Areas

⚠ indicates safety critical components.

PARTS LIST

KR-A4050/5050

KR-A4050/5050 E

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.7

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
C830 C831-833 C834 C835 C836			CE04KW1H010M CC45CH1H101J CE04KW1C4R7M CQ92FM1H103J CE04KW1H010M	ELECTRØ 1.0UF 50WV CERAMIC 100PF J ELECTRØ 4.7UF 16WV MYLAR 0.010UF J ELECTRØ 1.0UF 50WV		
C837 C838,839 C840 C841 C842,843			CE04KW1CR22M CE04KW1H010M CE04KW1C101M CC45SL1H561K CE04KW1C100M	ELECTRØ 0.22UF 16WV ELECTRØ 1.0UF 50WV ELECTRØ 100UF 16WV CERAMIC 560PF K ELECTRØ 10UF 16WV		
C844,845 C846,847 C848,849 C850 C851			CC45SL1H221J CE04KW1C2R2M CQ92FM1H392J CK45F1H103M CE04KW1C470M	CERAMIC 220PF J ELECTRØ 2.2UF 16WV MYLAR 3900PF J CERAMIC 0.010UF M ELECTRØ 47UF 16WV		
C852 C853,854 C855-858 C859 C860		*	CK45F1H103M CC45CH1H220J CK45B1H471K CE04KW1COR1M CK45F1H103M	CERAMIC 0.010UF M CERAMIC 22PF J CERAMIC 470PF K ELECTRØ 0.1UF 16WV CERAMIC 0.010UF M		
C861 C862 C863,864 C865,866 C868			CE04KW1C470M CK45F1H103M CE04KW1C100M CK45F1H103M CC45SL1H270J	ELECTRØ 47UF 16WV CERAMIC 0.010UF M ELECTRØ 10UF 16WV CERAMIC 0.010UF M CERAMIC 27PF J		
C871 C872 C873 C874,875 C876			CC45SL1H271J CE04KW1C100M CK45F1H103M CC45SL1H270J CK45F1H103M	CERAMIC 270PF J ELECTRØ 10UF 16WV CERAMIC 0.010UF M CERAMIC 27PF J CERAMIC 0.010UF M		
C877,878 C879,880			CE04KW1C100M CK45F1H103M	ELECTRØ 10UF 16WV CERAMIC 0.010UF M		
JACK801			E70-0023-08	TERMINAL BOARD ANTENNA		
CF801,802 L801 L802 L803 L804		*	L72-0575-08 L40-1091-17 L39-1322-08 L33-0381-08 L30-0904-08	CERAMIC FILTER 10.7MHz SMALL FIXED INDUCTØR 1uH COIL SMALL FIXED INDUCTØR 1mH IFT AM		
L805 L806 L807 L808,809 L810		*	L30-0905-08 L30-0906-08 L39-1323-08 L35-0070-08 L40-1091-17	IFT FM IFT FM COIL COIL SMALL FIXED INDUCTØR 1uH		
L811,812 X801 X802 X803 X804		*	L33-0380-08 L78-0616-08 L77-2126-08 L77-2127-08 L78-0617-08	SMALL FIXED INDUCTØR 10uH RESONATØR 456kHz CRYSTAL 7.200MHz CRYSTAL 4.332MHz RESONATØR 4.00MHz		
R824 R827 R840 R851 R866			RD14GB2E101J RD14GB2E101J RD14GB2E101J RD14GB2E470J RD14GB3D221J	FL-PRØØF RD 100 J 1/4W FL-PRØØF RD 100 J 1/4W FL-PRØØF RD 100 J 1/4W FL-PRØØF RD 47 J 1/4W FL-PRØØF RD 220 J 2W		

L:Scandinavia

K:USA

P:Canada

Y:PX(Far East, Hawaii)

T:England

E:Europe

Y:AFES(Europe)

X:Australia

M:Other Areas

A indicates safety critical component.

* New Parts

Parts without Parts No. are not supplied.

Les articles non mentionnés dans le Parts No. ne sont pas fournis.

Teile ohne Parts No. werden nicht geliefert.

NO.8

Ref. No. 参照番号	Address 位置	New Parts 新	Parts No. 部品番号	Description 部品名 / 規格	Desti- nation 仕向	Re- marks 備考
VR801 VR802 VR803			R12-1053-05 R12-3083-05 R12-6663-05	TRIM PØT. 4.7KB AM TUNE LEVEL TRIM PØT. 47KB FM TUNE LEVEL TRIM PØT. 330KB SEPARATION		
D801-809 D810 D811 D812 IC801			1SS133T RD5.1ES(B2) 1SS133T RD13ES(B2) LA1266	DIØDE ZENER DIØDE DIØDE ZENER DIØDE IC(AM/FM IF)		
IC802 IC803 IC804 IC805 IC806		*	LA3401 LC7218 LM258N TDA7330A LC6543H-4600	IC(FM MPX) IC(PLL SYNTHESIZER) IC IC(RDS DEMØDULATOR) IC		
Q801 Q802 Q803 Q804 Q805			2SC1740S 2SA933S 2SC1740S 2SC3194Ø 2SC1845F	TRANSISTØR TRANSISTØR TRANSISTØR TRANSISTØR TRANSISTØR		
Q806-808 Q809,810 Q811 Q812			2SC1740S 2SA933S 2SD2061E NJM78L05A	TRANSISTØR TRANSISTØR TRANSISTØR IC(VOLTAGE REGULATOR/ +5V)		
TUNER801			W02-1041-15	TUNER ASSY		

L:Scandinavia

K:USA

P:Canada

Y:PX(Far East, Hawaii)

T:England

E:Europe

Y:AFES(Europe)

X:Australia

M:Other Areas

A indicates safety critical component.

KR-A4050/5050

SPECIFICATIONS

(For the U.S.A. and Canada)

[AUDIO section]

Rated power output (FTC)
STEREO MODE

100 watts per channel minimum RMS, both channels driven, at 8 Ω from 20 Hz to 20,000 Hz with no more than 0.06 % total harmonic distortion.

Total harmonic distortion 0.03 % (1 kHz, 50 W, 8 Ω)
Signal to noise ratio (IHF'66)
PHONO (MM) 73 dB
LINE (CD, TAPE, VIDEO) 100 dB
Input sensitivity / impedance
PHONO (MM) 2.5 mV / 47 k Ω
LINE (CD, TAPE, VIDEO) 200 mV / 47 k Ω
Tone control
BASS ± 10 dB (at 100 Hz)
TREBLE ± 10 dB (at 10 kHz)
Loudness control (volume at -30 dB level)
..... + 9 dB (100 Hz)

[FM tuner section]

Tuning frequency range 87.5 MHz ~ 108 MHz
Usable sensitivity (MONO at 75 Ω) .. 0.95 μ V / 10.8 dBf
50 dB quieting sensitivity (at 75 Ω)
MONO 2.0 μ V / 17.2 dBf
STEREO 25.0 μ V / 39.2 dBf
Total harmonic distortion (at 1 kHz)
MONO 0.4 % (65 dBf input)
STEREO 0.5 % (65 dBf input)
Signal to noise ratio (at 1 kHz)
MONO 78 dB (65 dBf input)
STEREO 73 dB (65 dBf input)
Stereo separation
1 kHz 45 dB
Selectivity (± 400 kHz) 50 dB
Frequency response (30 Hz ~ 15 kHz)
..... + 0.5 dB, -2.0 dB

[AM tuner section]

Tuning frequency range 530 kHz ~ 1,700 kHz
Usable sensitivity 16 μ V / (400 μ V/m)
Signal to noise ratio (at 30% mod. 1mV input) 50 dB
Total harmonic distortion 0.5 %
Selectivity 23 dB

[General]

Power consumption 2.5 A
AC outlet
SWITCHED 2: (Total 150W max.)
Dimensions W: 440 mm (17-5/16")
H: 129 mm (5-1/16")
D: 379 mm (14-15/16")
Weight (Net) 10.2 kg (22.5 lb)

(For other countries)

[AUDIO section]

Rated power output (IHF'66) From 20 Hz to 20,000 Hz, 0.06 % T.H.D.
at 8 Ω 105 W+105 W
Total harmonic distortion 0.03 % (1 kHz, 50 W, 8 Ω)
Signal to noise ratio (IHF'66)
PHONO (MM) 73 dB
LINE (CD, TAPE, VIDEO) 100 dB
Input sensitivity / impedance
PHONO (MM) 2.5 mV / 47 k Ω
LINE (CD, TAPE, VIDEO) 200 mV / 47 k Ω
Tone control
BASS ± 10 dB (at 100 Hz)
TREBLE ± 10 dB (at 10 kHz)
Loudness control (volume at -30 dB level)
..... + 9 dB (100 Hz)

[FM tuner section]

Tuning frequency range 87.5 MHz ~ 108 MHz
Usable sensitivity (MONO at 75 Ω) .. 0.95 μ V / 10.8 dBf
50 dB quieting sensitivity (at 75 Ω)
MONO 2.0 μ V / 17.2 dBf
STEREO 25.0 μ V / 39.2 dBf
Total harmonic distortion (at 1 kHz)
MONO 0.4 % (65 dBf input)
STEREO 0.5 % (65 dBf input)
Signal to noise ratio (at 1 kHz)
MONO 78 dB (65 dBf input)
STEREO 73 dB (65 dBf input)
Stereo separation
1 kHz 45 dB
Selectivity (± 400 kHz) 50 dB
Frequency response (30 Hz ~ 15 kHz)
..... + 0.5 dB, -2.0 dB

[AM tuner section]

Tuning frequency range
9 kHz step 531 kHz ~ 1,602 kHz
10 kHz step 530 kHz ~ 1,610 kHz
Usable sensitivity 16 μ V / (400 μ V/m)
Signal to noise ratio (at 30% mod. 1mV input) 50 dB
Total harmonic distortion 0.5 %
Selectivity 23 dB

[General]

Power consumption 2.30 W
AC outlet
SWITCHED 2: (Total 150 W max.)
Dimensions W: 440 mm
H: 129 mm
D: 379 mm
Weight (Net) 10.2 kg

KR-A5050 K, P

Note:

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

KR-A4050/5050

SPECIFICATIONS

For KR-A5050

Audio section

Rated power output
at 1 kHz, 8 Ω (DIN) 100 W + 100 W
Total harmonic distortion (1 kHz, 8 Ω) 0.01% at 50 W
Signal to noise ratio
PHONO (MM) 56 dB (DIN, 50 mW output)
CD, TAPE, VIDEO 57 dB (DIN, 50 mW output)
Input sensitivity / impedance
PHONO (MM) 2.5 mV / 47 kΩ
CD, TAPE, VIDEO 200 mV / 47 kΩ
Tone controls
BASS ± 10 dB (at 100 Hz)
TREBLE ± 10 dB (at 10 kHz)
Loudness control at -30 dB VOLUME level
..... + 9 dB (100 Hz)

FM Tuner section

Tuning frequency range 87.5 MHz ~ 108 MHz
Usable sensitivity (DIN at 75 Ω)
MONO 1.1 μV
STEREO 45 μV
Total harmonic distortion at 1 kHz (DIN)
MONO 0.15 % (65.2 dBf input)
STEREO 0.5 % (65.2 dBf input)
Signal to noise ratio (DIN weighted at 1 kHz)
MONO 68 dB (65.2 dBf input)
STEREO 61 dB (65.2 dBf input)
Selectivity (DIN ± 300 kHz) 53 dB
Stereo separation (DIN)
1 kHz 40 dB
6.3 kHz 33 dB
Frequency response ..30 Hz ~ 15 kHz, + 0.5 dB, - 2.0 dB

AM Tuner Section

Tuning frequency range 531 kHz ~ 1,602 kHz
Usable sensitivity 12 μV / (400 μV / m)
Total harmonic distortion 0.3 %
Signal to noise ratio (at 30 % mod. 1 mV input) ..50 dB
Selectivity 30 dB

General

Power consumption 190 W (IEC)
AC outlet
SWITCHED 2: (total 200 W max.)
Dimensions 440 (W) × 133 (H) × 350 (D) mm
Weight (net) 8.6 kg

For KR-A4050

Audio section

Rated power output
at 1 kHz, 8 Ω (DIN) 60 W + 60 W
Total harmonic distortion (1 kHz, 8 Ω) 0.01% at 40 W
Signal to noise ratio
PHONO (MM) 56 dB (DIN, 50 mW output)
CD, TAPE, VIDEO 57 dB (DIN, 50 mW output)
Input sensitivity / impedance
PHONO (MM) 2.5 mV / 47 kΩ
CD, TAPE, VIDEO 200 mV / 47 kΩ
Tone controls
BASS ± 10 dB (at 100 Hz)
TREBLE ± 10 dB (at 10 kHz)
Loudness control at -30 dB VOLUME level
..... + 9 dB (100 Hz)

FM Tuner section

Tuning frequency range 87.5 MHz ~ 108 MHz
Usable sensitivity (DIN at 75 Ω)
MONO 1.1 μV
STEREO 45 μV
Total harmonic distortion at 1 kHz (DIN)
MONO 0.15 % (65.2 dBf input)
STEREO 0.5 % (65.2 dBf input)
Signal to noise ratio (DIN weighted at 1 kHz)
MONO 68 dB (65.2 dBf input)
STEREO 61 dB (65.2 dBf input)
Selectivity (DIN ± 300 kHz) 53 dB
Stereo separation (DIN)
1 kHz 40 dB
6.3 kHz 33 dB
Frequency response ..30 Hz ~ 15 kHz, + 0.5 dB, - 2.0 dB

AM Tuner Section

Tuning frequency range 531 kHz ~ 1,602 kHz
Usable sensitivity 12 μV / (400 μV / m)
Total harmonic distortion 0.3 %
Signal to noise ratio (at 30 % mod. 1 mV input) ..50 dB
Selectivity 30 dB

General

Power consumption 120 W (IEC)
AC outlet
SWITCHED 2: (total 200 W max.)
Dimensions 440 (W) × 133 (H) × 350 (D) mm
Weight (net) 7.0 kg


Note:

KENWOOD follows a policy of continuous advancements in development. For this reason specifications may be changed without notice.

Accessories

- Antenna adaptor
(75 Ω / 300 Ω) 1
(T90-0185-05) : E, T

- AM loop antenna 1
(T90-0184-08)

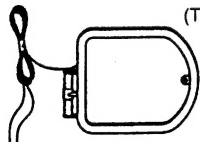


- FM indoor antenna 1
(T90-0176-05)




- Loop antenna stand 1
(J19-2815-04)



 
- Batteries(R6 / AA) 2



 - Remote control unit 1
(A70-0953-08)
(A09-0088-01) Battery cover



 - AC plug adaptor 1
(Except for some areas)
(E03-0115-05) : K, P



KENWOOD CORPORATION

Alive Mitake, 2-5, 1-chome Shibuya, Shibuya-ku, Tokyo 150, Japan

KENWOOD U.S.A. CORPORATION

P.O. BOX 22745, 2201 East Dominguez St., Long Beach, CA 90801-5745, U.S.A.
550 Clark Drive, Mount Olive, New Jersey 07828, U.S.A.
99-994 Iwaena St. Aiea, Hawaii 96701

KENWOOD ELECTRONICS CANADA INC.

6070 Kestrel Road, Mississauga, Ontario, Canada L5T 1S8

KENWOOD ELECTRONICS LATIN AMERICA S.A.

P.O. BOX 55-2791, Piso 6 Plaza Chase, Cl. 47 y Aquilino de la Guardia, Panama, Republic de Panama

TRIO-KENWOOD U.K. LIMITED

Kenwood House, Dwight Road, Watford, Herts, WD1 8EB, United Kingdom

KENWOOD ELECTRONICS BENELUX N.V.

Mechelsesteenweg 418 B-1930 Zaventem, Belgium

KENWOOD ELECTRONICS DEUTSCHLAND GMBH

Rembrücker Str. 15, 6056 Heusenstamm, Germany

TRIO-KENWOOD FRANCE S.A.

13 Boulevard Ney, 75018 Paris, France

KENWOOD LINEAR S.p.A.

20125, Milano-Via Arbe, 50, Italy

KENWOOD ESPAÑA S.A.

Bolivia, 239-08020 Barcelona, Spain

KENWOOD ELECTRONICS AUSTRALIA PTY. LTD. (A.C.N. 001 499 074)

P.O. BOX 504, 8 Figtree Drive, Australia Centre, Homebush, N.S.W. 2140, Australia

KENWOOD & LEE ELECTRONICS, LTD.

Unit 3712-3724, Level 37 Tower 1, Metroplaza, 223 Hing Fong Road,

Kwai Fong N.T. Hong Kong

KENWOOD ELECTRONICS SINGAPORE PTE LTD

No. 1 Genting Lane #07-00, Singapore, 1334